80 mm

115 mm

anko

Wireless Mini Thermal Label Printer
Instruction Manual

K: 43559312 | T: 71039169 Model: JLR-80657
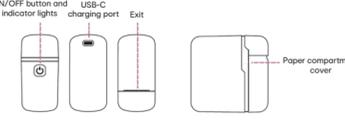
Pack includes:

1 x Wireless Mini Thermal Label Printer
1 x Instructions Manual
1 x USB- C cable
1 Roll of Thermal Label Sticker

Please read carefully before use and retain this manual for future use.

Product diagram

Power ON/OFF button and status indicator lights

USB-C charging port

Exit

Paper compartment cover

Power button and indicator status

	On/Off button	Long press: switch on / switch off the printer Short press: calibrate the label machine and complete the positioning. Double short press: Print the system information while the printer is on. See the details below. 1. Function is ok and can print 2. Print Density from dark to light 3. Show App name (AumiLabel), Bluetooth name(AL-XXXX), and device code (generated from 13 random digits and 1 letter)
	Red light is always on / off	Charging / Charging completed
	Blue light is always on	Bluetooth connected / Printing
	Blue light is off	Machine shutdown
	Blue light flashing	Pending connection

Product Specification:

Built-in Rechargeable Li-ion Battery: 3.7V, 1200mAh
Input Rating: DC 5V 1A (Max.)
Compatibility: Android 4.0, iOS 8.0 or later
Roll Label Print Paper: Compatible with Anko Thermal Self-adhesive Label (K: 43559305 | T: 71039152 (sold separately)).

Install Printer Label Paper

✧ Hold the cover then pull to open the paper compartment.
✧ Insert the label paper roll as shown in the picture, pull out a small amount of paper, and then close the cover.
✧ Long press⏻to turn on the device, then short press⏻to calibrate. After calibration, the label machine will output and complete the positioning.

Usage Tips:

• Please charge the device before use. It takes approximately 3 hours to fully charge. Only use the provided cable to charge the product.
• When opening the paper compartment, please follow the indicated direction. Do not use excessive force to avoid damaging the machine.

• If the printer outputs blank labels or experiences a paper jam, check whether the paper roll is installed backwards.
• For correct installation of the printing paper, please refer to the picture above.
• Before the first print, open the paper compartment and leave approximately 1 inch (≈2.54 cm) of the paper roll outside, as shown in the picture above. This will ensure automatic printing.

Download AumiLabel

Android users: Scan the QR code or search for "AumiLabel" on Google Play Store to download the app.

Apple users: Scan the QR code or search for "AumiLabel" on the App Store to download the app.

How to connect Bluetooth printer

iOS connection method

➢ Enable Bluetooth on your mobile device

➢ Long press the power button to turn on the printer, then open the app.

➢ Click the printer icon 🖨 in the upper right corner to connect the device, or go to the "Mine" tab at the bottom and select "My Printer" to connect.
➢ In the Bluetooth device list, select the device named AL-XXXX(where XXXX may be a combination of digits and letters, e.g.; AL-011C). Click to connect, and the device will be ready to use once successfully connected.
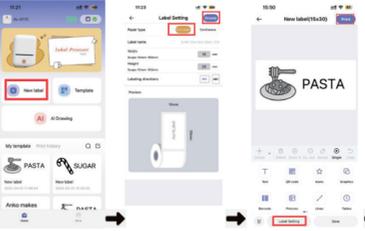
Android connection method

➢ Enable Bluetooth on your mobile device

➢ Long press the power button to turn on the printer, then open the app.
➢ Click the printer icon 🖨 in the upper right corner to connect the device, or go to the "Settings" tab at the bottom and select "My Printer" to connect.

➢ In the Bluetooth device list, select the device named AL-XXXX (where XXXX may be a combination of digits and letters, e.g.: AL-017C). Click to connect, and the device will be ready to use once successfully connected.

Main functions on Home page for Apple device

New Label

➢ On the Homepage of the APP, select "New Label" to enter "Label setting "
➢ In Label Setting (as shown in the picture below), you can:

• Only select the "**Cut Label**" paper type to fit the labels
• Name the label
• Set the label 15mm (width) × 30mm (height)
• Choose the labeling directions

➢ After configuring the label, click "Create" to proceed to the next step, where you can input text, pictures, icons, tables, or other content, and then click "Print" to enter Print Preview.
➢ In Print Preview, you can adjust the label position, density, number of copies, and pages according to your needs (the default print density on iOS is 80). Once done, click "Print Now" to print.
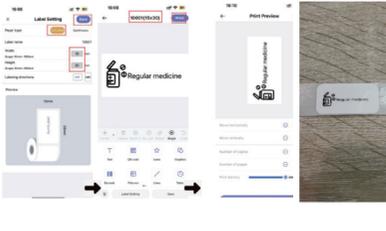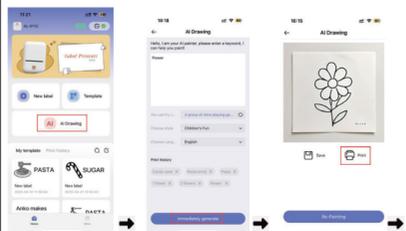
Template

➢ You can also select "Template" to choose the type of label you need to print. Before printing, click "Label Setting" on the left bottom corner to adjust the size to fit a 15mm (width) × 30mm (height) label, and **only** select "**cut label**" paper type; otherwise, it will print with the template's default size.
➢ In Print Preview, you can adjust the image position, density, number of copies, and pages according to your needs (the default print density on iOS is 80). Once done, click "Print Now" to print.
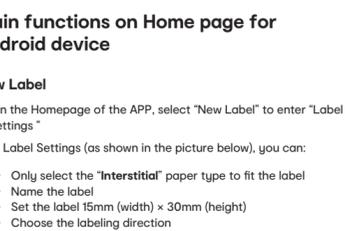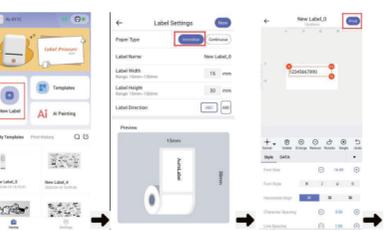
AI Drawing

➢ On the Homepage, you can also select "AI Drawing" to print.
➢ Input the content you want, click "immediately generate", it will add the content you want, and then you can click "print" to enter the "New label" page.
➢ Before printing, click "Label Setting" at left bottom corner to adjust the size to fit a 15mm (width) × 30mm (height) label and **only** select "**cut label**" paper type; otherwise, it will print with the AI output's default size.
➢ In Print Preview, you can adjust the image position, density, number of copies, and pages according to your needs (the default print density on iOS is 80). Once done, click "Print Now" to print.

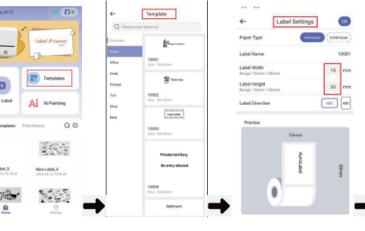---

Main functions on Home page for Android device

New Label

➢ On the Homepage of the APP, select "New Label" to enter "Label settings "
➢ In Label Settings (as shown in the picture below), you can:

• Only select the "**Interstitial**" paper type to fit the label
• Name the label
• Set the label 15mm (width) × 30mm (height)
• Choose the labeling direction

➢ After configuring the label, click "New" to proceed to the next step, where you can input text, pictures, icons, tables, or other content.
➢ After editing the content, click "Print" in the upper right corner to enter "Print Preview".
➢ In Print Preview, you can adjust the label position, density, number of copies, and pages according to your needs (the default print density on Android is 80). Once done, click "Print Now" to print.
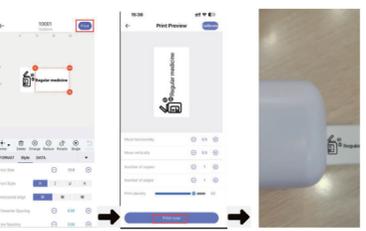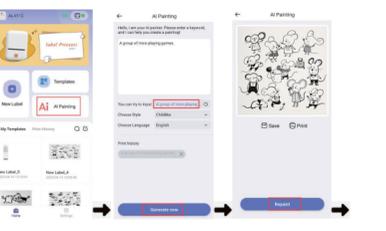
Templates

➢ You can also select "Templates" to choose the type of label you need to print. Before printing, click "Label Settings" on the left bottom corner to adjust the size to fit a 15mm (width) × 30mm (height) label and only select the "**Interstitial**" paper type to fit the label; otherwise, it will print with the template's default size.
➢ In Print Preview, you can adjust the image position, density, number of copies, and pages according to your needs (the default print density on Android is 80). Once done, click "Print Now" to print.

AI Painting

➢ On the Homepage, you can also select "AI Painting" to print.
➢ Input the content you want, click "generate now", it will output the content you want, and then you can click "print" to enter the "New label" page.
➢ Before printing, click "Label Settings" at left bottom corner to adjust the size to fit a 15mm (width) × 30mm (height) label and **only** select "**Interstitial**" paper type; otherwise, it will print with the AI output's default size
➢ In Print Preview, you can adjust the image position, density, number of copies, and pages according to your needs (the default print density on Android is 80). Once done, click "Print Now" to print.

Other Functions:

My template & Print history for Apple & Android device

• You can save the label as you need and find it on the Home page – My template and click 🔍 to search or click ☑ to edit the labels and it can Print/Edit/Delete all the templates you saved.
• You can find printed and saved labels on the main page under Print History. And click ☑ to search or click ☑ to select to delete the labels.
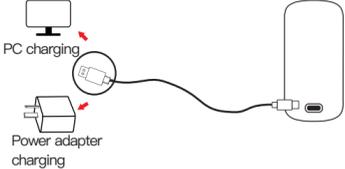
Usage Tips:

• Please do not open the paper slot during the printing or immediately after printing. Let the print head cool down sufficiently before replacing the printing paper.
• Do not pull out the print paper when the paper slot is closed, as this may damage the printer.
• Please keep the printing paper clean and dry to avoid dust or stains affecting the printing quality.
• This printer contains a roll of printing label paper, so it will make noise when you shake or moved. This is normal and does not affect the product quality, so please feel free to use it.

Power supply

• Use the specified DC5V/1A power adapter. Other types of adapters may conflict with this product
• Regular charging the product for every month is to ensure the life of the product, while pro-longed period of idle or low battery level may lead to battery life issue.
• Only use the charging cable provided to charge the printer.

• Built-in battery is non-removable and non-replaceable, if damaged should contact service and repair.
• The indicator is red and always on during charging and turn off after fully charged.
• It takes around 3 hours to fully charge the product.

PC charging

Power adapter charging

Safety instructions

• Keep the appliance away from all hot surfaces and naked flames.
• Always use the appliance on a level, stable, clean, dry surface.
• Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
• Do not immerse the appliance in water or in other form of liquid.
• Please wipe the surface stains with dry cloth. When cleaning this product, ensure that the charger is disconnected.
• Regular checking cables and product in case it's damaged. If it is damaged, stop using immediately.
• Children should use this under adult supervsion.

12 Month Warranty

R-NZ

MADE IN CHINA

Statement of Compliance

Security standard for consumer grade relevant connectable products
AUSTRALIA

This statement of compliance has been prepared by, or on behalf of Kmart Australia Limited, who is the manufacturer of the below product. The statement of compliance is made in accordance with the Cyber Security (Security Standards for Smart Devices) Rules 2025, authorized by the Cyber Security Act 2024.

Product manufacturer details	
Name of the manufacturer	Kmart Australia Limited
Address of the manufacturer	1 Middle Rd, Chadstone VIC 3148
Name of the authorized representative	Jerry Or (Product Technologist)
Address of the authorized representative	Room 1016-1023A, 10/F, Trade Square, No. 681 Cheung Sha Wan Road, Cheung Sha Wan, Kowloon, Hong Kong
Name(s) of other authorized representatives in Australia (if applicable)	N/A
Address(es) of other authorized representatives in Australia (if applicable)	N/A
Product details	
Product type	Bluetooth Mini Label Maker Printer
Batch identifier	43559312
Defined support period for the product	No earlier than 17 February 2026

Declaration

It is declared that, in the opinion of the manufacturer:

1. The product listed in the table above has been manufactured in compliance with the requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.
2. The manufacturer has complied with any other obligations relating to the product in Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025.

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of 30th Jan 2026.

Prepared by or on behalf of Kmart Australia Limited

Jerry Or   5 Feb 2026
_____   _____
(Name, function and signature of the signatory of the manufacturer)   **(Place and date of issue of the statement of compliance)**