Cordless Water Kettle

KED0001C-SA

User Manual

PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact Kmart and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the kettle without any water in it to avoid damage to the heating element.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse the cord, electric plug or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
10. Be careful when refilling when the kettle still is hot.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Do not touch the hot surface. Use the handle to move the kettle.
14. The attached base must not be used on other appliances.
15. Extreme caution must be used when moving the kettle with hot water.
16. The appliance is not a toy. Do not let children play with it.
17. The kettle is for household use only. Do not use it outdoors.
18. The use of accessories, which are not supplied with the kettle, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the mains power outlet when not in use and before cleaning. Allow the kettle to cool down completely before putting on or taking off any parts, and before cleaning the kettle.
20. To disconnect, press on the power ON/OFF switch to “off,” then remove the cord plug from the mains power outlet socket.

21. If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
22. Do not use the appliance for anything other than its intended use.
23. Always ensure the lid is closed and do not open it while the water is boiling. Scalding may occur if the lid is removed during boiling.
24. This appliance is intended to be used in household and similar applications such as:
    – Staff kitchen areas in shops, offices and other working environments,
    – Farmhouses,
    – By clients in hotels, motels and other residential type environments,
    – Bed and breakfast type environments.
25. The appliance must not be immersed in water or other liquid.
26. If the kettle is overfilled, boiling water may be ejected. Always fill water below the maximum water level mark.
27. CAUTION: Ensure the appliance is switched off before removing it from the stand.
28. CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not attempt to move the kettle while it is switched ON.
29. CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
30. **Warning: Avoid liquid spillage on the connector.**
31. **Warning: Potential injury from misuse.**
32. The heating element surface is subject to residual heat after use.
33. The appliance is only to be used with the stand provided.
34. For cleaning, please refer to “CLEANING AND MAINTENANCE” section.
35. Save these instructions.

KNOW YOUR ELECTRIC KETTLE

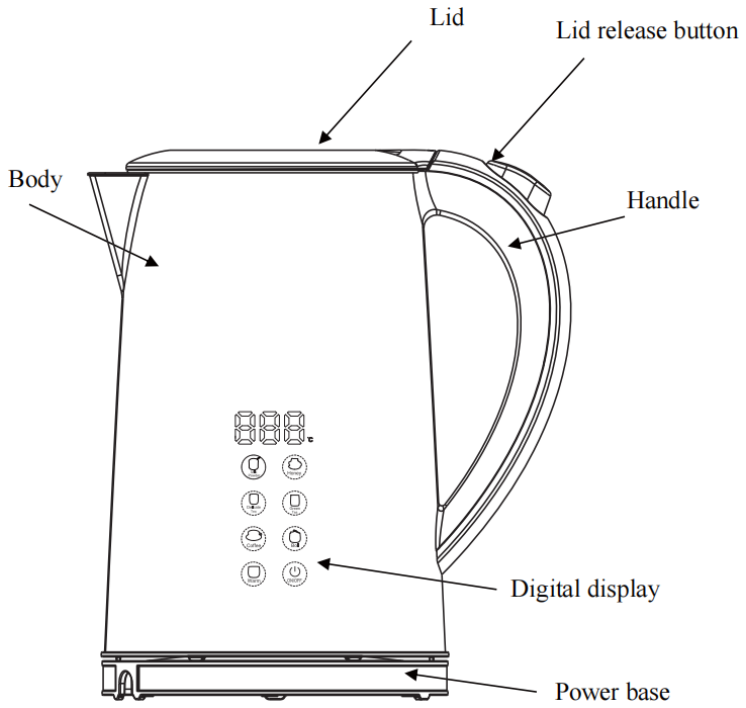

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you clean the kettle before use by boiling with Max capacity of water and then discarding the water. Wipe the surface with a damp cloth.

NOTE: The Max capacity of kettle is 1.7L and Min capacity of Kettle is 0.3L.

USING YOUR ELECTRIC KETTLE

1. Place the kettle base on a flat and stable surface.

2. To fill the kettle, remove it from the power base and open the lid by pressing on the lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level marks. Too little water will cause the kettle switch off before the water has boiled.

NOTE: Do not fill the water over the maximum level mark, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting into the mains power outlet socket.

3. Position the kettle on the power base.

4. Connect the power cord plug into a power outlet socket. The Digital Display will flash 3 times, then enters standby mode. Press the **ON/OFF** button and the Boil indicator will light up, and then the kettle starts to boil the water. The kettle will beep 2 times and switch off automatically once the water has boiled. You may shut off the power by pressing on the power **ON/OFF** button or by lifting the kettle from the power base at any time to stop the boiling process.

NOTE: Ensure that **ON/OFF** button is free of obstructions and the lid is firmly closed, the kettle will not turn off automatically if the lid is opened.

5. Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the **ON/OFF** button is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not in use.

BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without any water, the boil-dry protection circuit will automatically activate and switch off power to the kettle. If this occurs, remove the kettle from the base and allow the kettle to cool down prior to filling it with cold water before re-boiling.

POWER ON SELF-TEST

When the product is connected to the power supply, the kettle beeps and the display screen will flash full screen for 3 seconds (with a frequency of 1 second/time). After the display screen has flashed for 3 seconds and no buttons are pressed, the kettle will enter standby mode automatically.

STANDBY MODE

1. The display screen shows real-time water temperature in Celsius, and all button lights will be steady ON.

2. If there is no function button pressed on the screen, it will enter sleep mode after one minute. The light on the **ON/OFF** button will flash, the display screen and the lights for other buttons will turn off.

3. You can press any button during sleep mode to activate the kettle to enter standby mode.
4. After activation, the kettle will emit a beep sound and the display screen will show real-time water temperature, and all the lights on the buttons will turn ON. You can then press on a button to activate the function.
Note: In sleep mode, pressing on the **ON/OFF** button will not directly start boiling water, you need to enter standby mode first to activate water boiling process.

BOILING WATER

1. In standby mode, press a function button (e.g., **Milk Powder**, **Honey**, **Delicate Tea**, **Green Tea**, **Coffee**, **Boil**) to select the desired boiling temperature:

Function	**Milk Powder**	**Honey**	**Delicate Tea**	**Green Tea**	**Coffee**	**Boil**
Temperature℃	40	55	70	80	90	100

2. The selected button will flash, and the display will show the target temperature.

3. Press the **ON/OFF** button to begin heating and the real-time water temperature will appear on the display. The **ON/OFF** button and the selected function button will remain on, while the lights on other buttons will turn off.

4. When the target temperature is reached, the kettle will beep twice and return to standby mode.

5. To cancel boiling at any time, press the **ON/OFF** button.

Note: Press the ON/OFF button at any time during operation to stop the boiling process or the selected function, including when the Warm function is active.

Caution: This kettle is only used to boil water. E.g., if you would like to use **Milk Powder** or **Honey** function, pour water into the kettle and connect cord plug into a mains power outlet socket, select **Milk Powder** or **Honey**, then press the **ON/OFF** button to boil the water to desired temperature (refer to above table for approximate water temperature for each function).

KEEP WARM FUNCTION

1. To activate Keep warm function, first select the desired temperature with function button, then press the **Warm** button. The **Warm** button, the desired temperature function button and **ON/OFF** button will illuminate, other lights will be off, and the display screen shows the real-time water temperature.
2. If the set temperature is higher than the real-time water temperature, the kettle will heat the water. After reaching the set temperature, the kettle emits two beeps, then the kettle will stop heating and enters the keep warm mode. If the set temperature is lower than the real-time water temperature, the kettle will enter the keep warm mode without heating.
3. The kettle maintains the set temperature for 30 minutes. During this period, the Warm button, the desired temperature button and **ON/OFF** button will flash.
4. To deactivate the keep warm function, press the Warm button, the kettle will return to standby mode.

Note: Each time a button is pressed, the kettle will 'beep' to indicate the activation of the selected function.

LIFTING DURING OPERATION

1. If the kettle is lifted from the base while powered ON, the display and all lights will turn off. When placed back on the base, the kettle will perform the power on self-test and return to standby mode.
2. During the heating and warm state, if the kettle is lifted from the base, the display and all lights will turn off. When placed back on the base, the kettle will perform the power on self-test and return to standby mode.

DIGITAL DISPLAY ON DISPLAY SCREEN

1. The display screen shows real-time water temperature in Celsius.
2. When the display screen shows real-time water temperature, a control program minimises temperature fluctuations during heating to ensure stable temperature readings.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and allow the kettle to cool down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth.
CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.
3. When not in use or storage, the power cord may be winded under the bottom of the kettle base.

REMOVAL OF MINERAL DEPOSITS

To keep your kettle working efficiently, descale it regularly. Minerals in tap water can build up inside the kettle over time, reducing performance.

You can use a commercially available kettle descaler by following the product instructions. Alternatively, use white vinegar as described below:

Using White Vinegar:

1. Fill the kettle with 3 cups of white vinegar, then add water until it reaches just above the minimum level mark. Leave the solution in the kettle overnight.
2. Pour out the mixture, then fill the kettle with clean water up to the maximum level. Boil the water and discard it.
3. Repeat this rinsing process several times, if needed, until the vinegar smell is gone.
4. If any stains remain inside the spout, wipe them away with a damp cloth.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz
Power: 1850-2200W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	**Contact for Target purchases**
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us