anko

Blender
KP-2103
User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. To protect against electrical shock, do not submerge the appliance or allow the power plug and cord to come in contact with water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Keep the appliance out of the reach of children.
5. DO NOT let the appliance operate unattended.
6. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
7. DO NOT abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from the electrical outlet.
8. DO NOT operate the appliance with a damaged cord or plug, after the appliance malfunctions, or has been dropped or any parts damaged in any manner.
9. If the power cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard or the appliance must be disposed of.
10. DO NOT let the power cord hang over the edge of the table or counter or touch hot surfaces such as the stove.
11. Always use the appliance on a dry, level surface. Sinks, drain boards or uneven surfaces must be avoided.
12. Keep hands, hair, clothing, as well as utensils out of the jar while processing to reduce the risk of severe injury to people or damage to the appliance. A scraper may be used but only when the appliance is not running.
13. Always disconnect the appliance from the mains power before approaching or disassembling parts.
14. **CAUTION! Blades are sharp.** Be careful when handing the sharp cutting blades when emptying the glass jar and during cleaning.
15. Avoid contact with moving parts.
16. DO NOT operate this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).
17. The use of attachments or accessories not supplied with the product may cause fire, electric shock or personal injury.
18. DO NOT attempt to remove the jar from the motor base while the appliance is running.
19. To reduce the risk of injury, NEVER operate the appliance without the blade assembly in place. DO NOT try to defeat the interlock mechanism. Make sure that the attachment is properly installed before operating the appliance.
20. Make sure the blade is securely fastened before assembling onto the main unit.
21. DO NOT expose the jar to extreme temperature changes.

22. **WARNING! DO NOT process boiling liquids or hot ingredients. Hot liquids/ingredients can eject out of the appliance due to sudden steaming and cause severe scalding. Allow hot ingredients to cool down before placing them in the glass jar.**

    To prevent damage, glass jar should not be exposed to boiling hot water when cleaning.

23. DO NOT overfill.
24. DO NOT operate the appliance empty.
25. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. NOT FOR COMMERCIAL USE. Do not use this appliance for anything other than its intended use. Do not use it outdoors.
26. The accessories are not intended to be used in the microwave. Do not place the jar or the lid in the microwave as it may result in damage to the accessories.
27. Check the voltage indicated on the appliance before connecting to mains power, it should correspond to the local mains voltage. If not, do not use.
28. Never immerse the main unit in water or any other liquid, do not rinse it under the tap.
29. Unplug the appliance immediately after use or before cleaning.
30. For cleaning, please refer to CLEANING AND STORAGE section.
31. The appliance is intended to be used in households and similar applications such as:

    -staff kitchen areas in shops, offices and other working environments,

    -farmhouses,

    -by clients in hotels, motels and other residential type environments,

    -bed and breakfast type environments.

32. **WARNING! Misuse of the appliance may cause injury!**
33. **CAUTION!** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched ON and OFF by the utility.
34. Extension cords and power boards are not recommended for use with this product.


IMPORTANT!

To prevent damage to the electric motor, the maximum operating time is 1 minute. Allow it to rest for at least 1 minute before using it again. After 5 cycles of operation, allow the blender (electric motor) to cool down to room temperature, allow it to cool down for approx. 30 minutes before using it again.

Notice: The appliance is incorporated with a non-self-resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from the mains power outlet. Remove the glass jar from the motor unit and free the blade of any obstructions. Allow the unit to cool down for at least 10 minutes. After that, plug the unit back into mains power for normal operation.

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

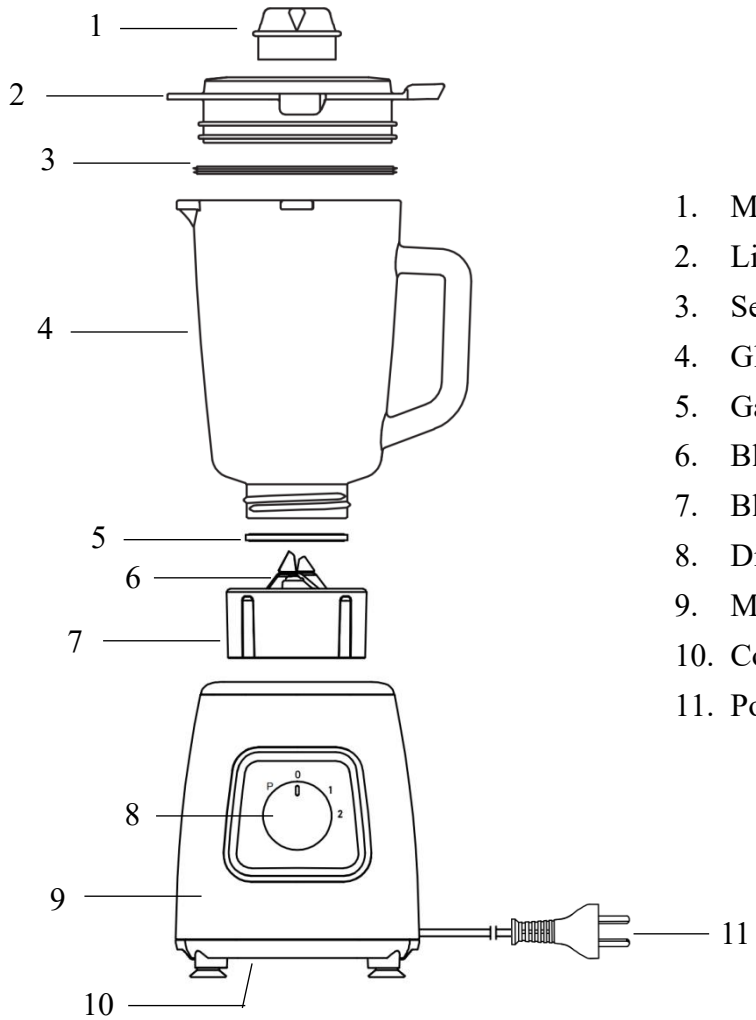


1. Measuring cup (50mL)
2. Lid
3. Sealing ring
4. Glass jar (Max fill 1500mL)
5. Gasket
6. Blades
7. Blade holder
8. Dial switch
9. Main unit
10. Cord storage
11. Power plug & cord

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before using. If any parts are missing or damaged, return the product to the place of purchase for replacement.

BEFORE FIRST USE

1. Carefully remove all packaging.
2. Twist the blade holder anticlockwise to remove it from the jar as shown to clean. Twist it clockwise to install after cleaning.
3. Clean the appliance according to the instructions in CLEANING AND STORAGE section. Dry thoroughly.
4. Place the appliance on a flat, stable surface. The appliance is now ready for use.

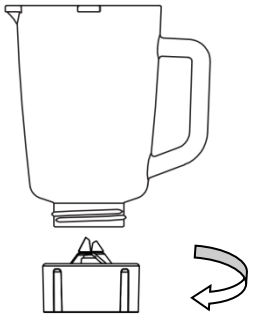

HOW TO USE YOUR BLENDER

WARNING!

1. Ensure the product is unplugged from the electrical outlet.
2. Wash all solid ingredients and cut them into pieces small enough to fit into the glass jar.
3. Put solid ingredients and pour liquid into the glass jar.

WARNING!

- Do not operate the product until it is properly assembled.
- DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool before placing them in the glass jar.
- DO NOT fill the glass jar above the 1500mL level as indicated on the jar. Some mixtures increase in volume during blending and create pressure in the jar.
- Do not use the product for mashing or grinding heavy foods (e.g. potatoes or meats) or to stir thick mixtures (e.g. dough).

4. Put the lid with measuring cup onto the glass jar, rotate clockwise until it locks into place.
5. Plug the appliance into a mains power supply.
6. Turn the dial switch to "1" or "2" setting or hold the dial switch in "P" position.

   To blend food for a short time or to use the ice crush function, pulse operation can be selected by turning the dial switch to "P" setting. Hold the dial switch at "P" setting for this function. To stop blending, release the dial switch.

IMPORTANT! Use ice cubes that are approximately 2cm^3 in size or smaller.

WARNING!

- Never operate the product empty.
- Follow the maximum operating time and rest period.

Function	Max. Operating Time	Rest period	Max. Capacity
Pulse/blend	1 min.	Min. 1 min.	1500 ml
Ice crush	3 sec.	Min. 3 sec.	150g

7. Turn off the appliance by turning the dial to the "0" position, unplug the appliance from the mains power outlet after use.

WARNING! Always unplug the appliance when it is not in use or when left unattended.

8. When the blades have stopped turning, the glass jar can be removed from the main unit.

TROUBLESHOOTING

Problems	Possible root cause & Solutions
Motor doesn't start or attachment doesn't rotate	Ensure the tabs on the jar are aligned with the slots on the base. Once inserted, turn the jar clockwise until it is securely locked into position.
Food is unevenly chopped	You are chopping too much food at one time, or you are not pulsing properly. Reduce the amount of food in the jar.
The food is too finely chopped or too watery	The food has been overprocessed. Use short operating time for best results.
Cannot achieve crushed/soft ice from ice cubes	For best results, use ice just taken out of the freezer. Try short operating time instead of a longer time. Make sure the jar is completely dry before adding ice.
Jar is leaking	Twist the blade assembly tightly, make sure the blade assembly is firmly assembled to the jar. Leaking may occur if it is misaligned when twisted onto the jar.
Unit doesn't turn ON	Make sure the unit is plugged in. Make sure the blade assembly is firmly assembled to the jar and not misaligned. Ensure the tabs on the jar are aligned with the slots on the base. Once inserted, turn the jar clockwise until it is securely locked into position
The blades are not operating smoothly	Stop the appliance and add some liquid or reduce the contents in the glass jar.
Blade assembly cannot be properly aligned to the jar.	Place the jar upside down on a level surface. Sit the blade assembly on the jar in a horizontal position. Twist it clockwise until it is tight and sealed.

CLEANING AND STORAGE

WARNING!

- **Never immerse the main unit, the power plug and cord in water or other liquids to clean.**
- **Never use abrasive cleaners on any part of the product.**
- **Do not place any parts into a dishwasher or extremely hot water.**

1. Clean the appliance immediately after every use.
2. Remove the power plug and cord from the mains power outlet socket and allow the appliance to cool down completely before cleaning.
3. Clean the main unit with a damp cloth. Wipe dry with a soft dry cloth.
4. Wash all the other parts except the motor base in warm, soapy water, rinse and dry thoroughly. Use caution when handling the blade assembly as the blades are very sharp.

WARNING! Do not try to remove blades from the blade holder for cleaning.

Tips:

- Use a small brush (not included) to remove particles of food lodged underneath the blades.
- If some leftover particles dry onto the inside of the jar, attach the blade assembly and fill the jar about 2/3 full capacity with warm water. Place the jar and blade assembly onto the motor base and operate the appliance for about 20-30 seconds to help loosen the stuck ingredients. Repeat the above step but use clean tap water. Empty the blender, clean it manually and dry thoroughly.

5. Make sure all components are clean and dry before storing.
6. Store the appliance upright in a clean and dry location. Do not place anything on top.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 600W

Max Capacity: 1500mL

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	**Contact for Target purchases**
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone VIC 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone VIC 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us