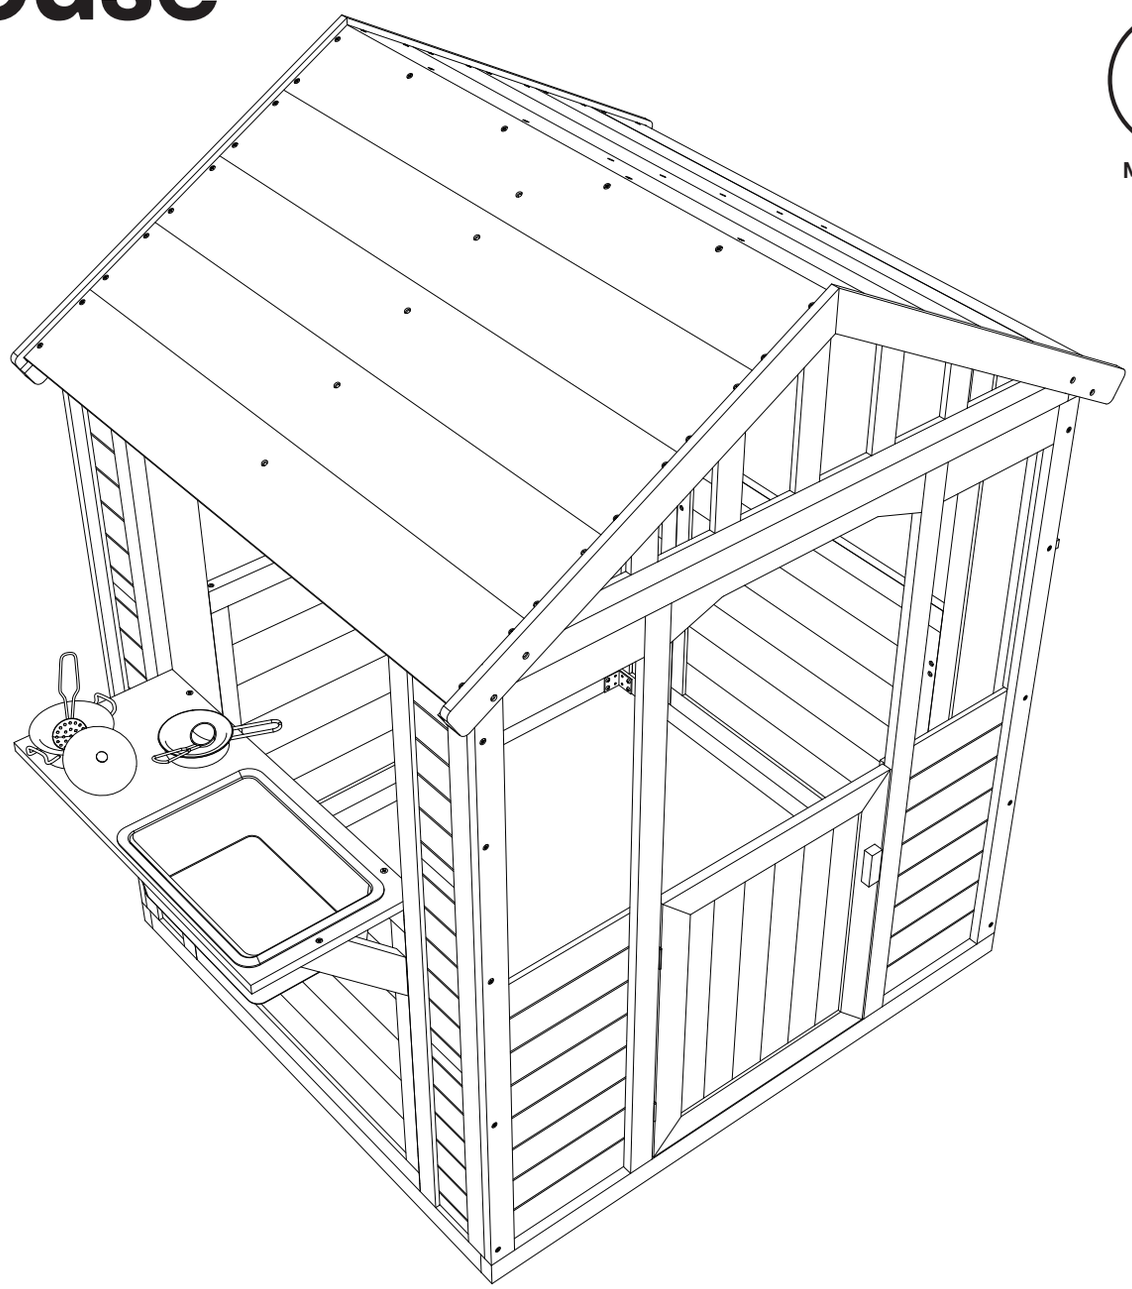
anko

Wooden Cubby House

3+ years

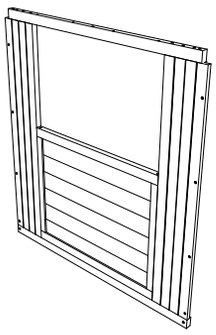
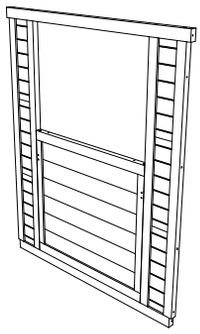
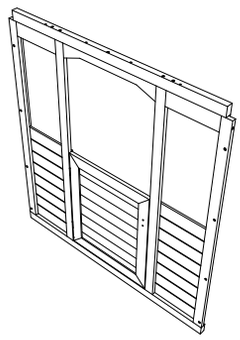
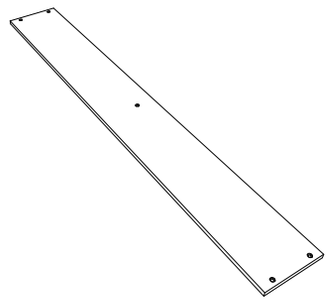
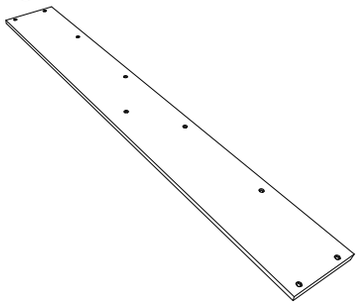

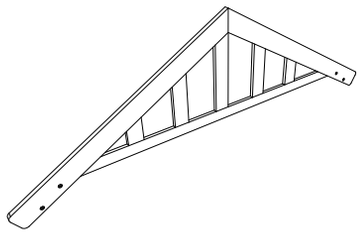
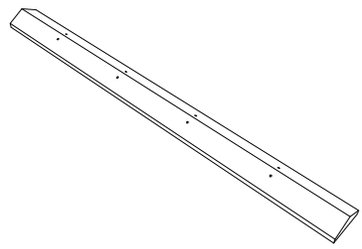

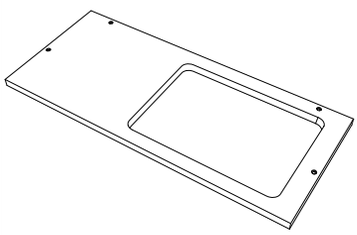
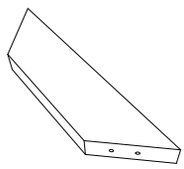
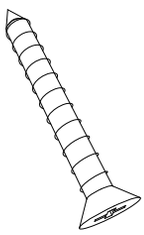
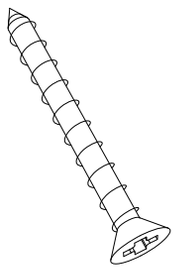
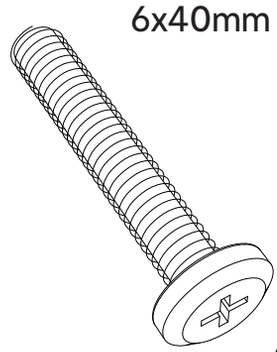
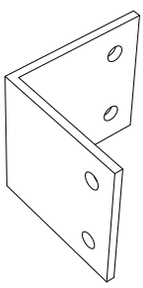
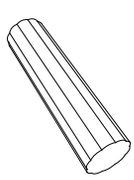
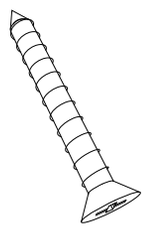
15 kg







MAXIMUM WEIGHT OF USER




1. Drawings in the manual are for visual reference only. Product may vary slightly. Please read carefully before use and keep for future reference.
2. Need 2 adults at least to assemble the product.
3. Children must not use this product until properly installed.
4. Check all parts are present before you start to assemble the product. Place small parts on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.
5. If any parts are missing do not use the product until the replacement parts are fitted.
6. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
7. Avoid locating this product in full sun.
8. Remove all packaging before giving to your children.
9. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe. Pay special attention to all connections and fastenings.
10. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
11. Due to the natural characteristics of timber, it is vital to check your product regularly for splintering, lifting of surface layers of wood or exposure of rough wood. Affected areas must be rubbed down using coarse sandpaper to restore a smooth, safe surface.
12. Any changes to this toy eg changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
13. Ensure children's clothing is appropriate for the play activity.
14. Never place toys near a fire.
15. In high winds, ensure outdoor toys are moved to a sheltered position and/or securely staked down.
16. The age recommendation for this product is clearly stated on the packaging and in these instructions. Please adhere to it at all times. Adult supervision is required at all times to ensure children play safely.
17. When you dispose of this equipment please do so responsibly.
18. To check all nuts and bolts for tightness and tighten when required.
19. To check all coverings for bolts and sharp edges and replace when required.

PARTS:

1  × 1	2  × 2	3  × 1	4  × 8
5  × 2	6  × 2	7  × 2	8  × 1
9  × 1	10  × 1	11  × 2	
A 4x35mm  × 24	B 4x45mm  × 8	C 4x18mm  × 90	D 6x40mm  × 2
E 6x40mm  × 8	F 6x20mm  × 8	G 4x25mm  ×2	H 10x10mm  ×2

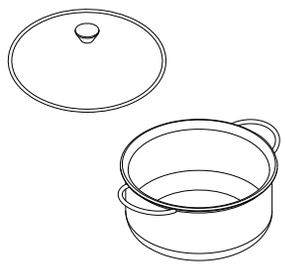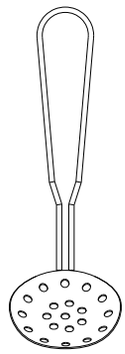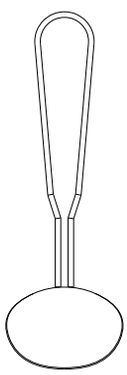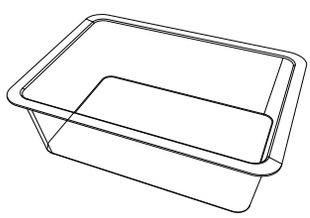
I  × 1	J  × 1	K  × 1	L  × 1
M  ×1	N  ×1		

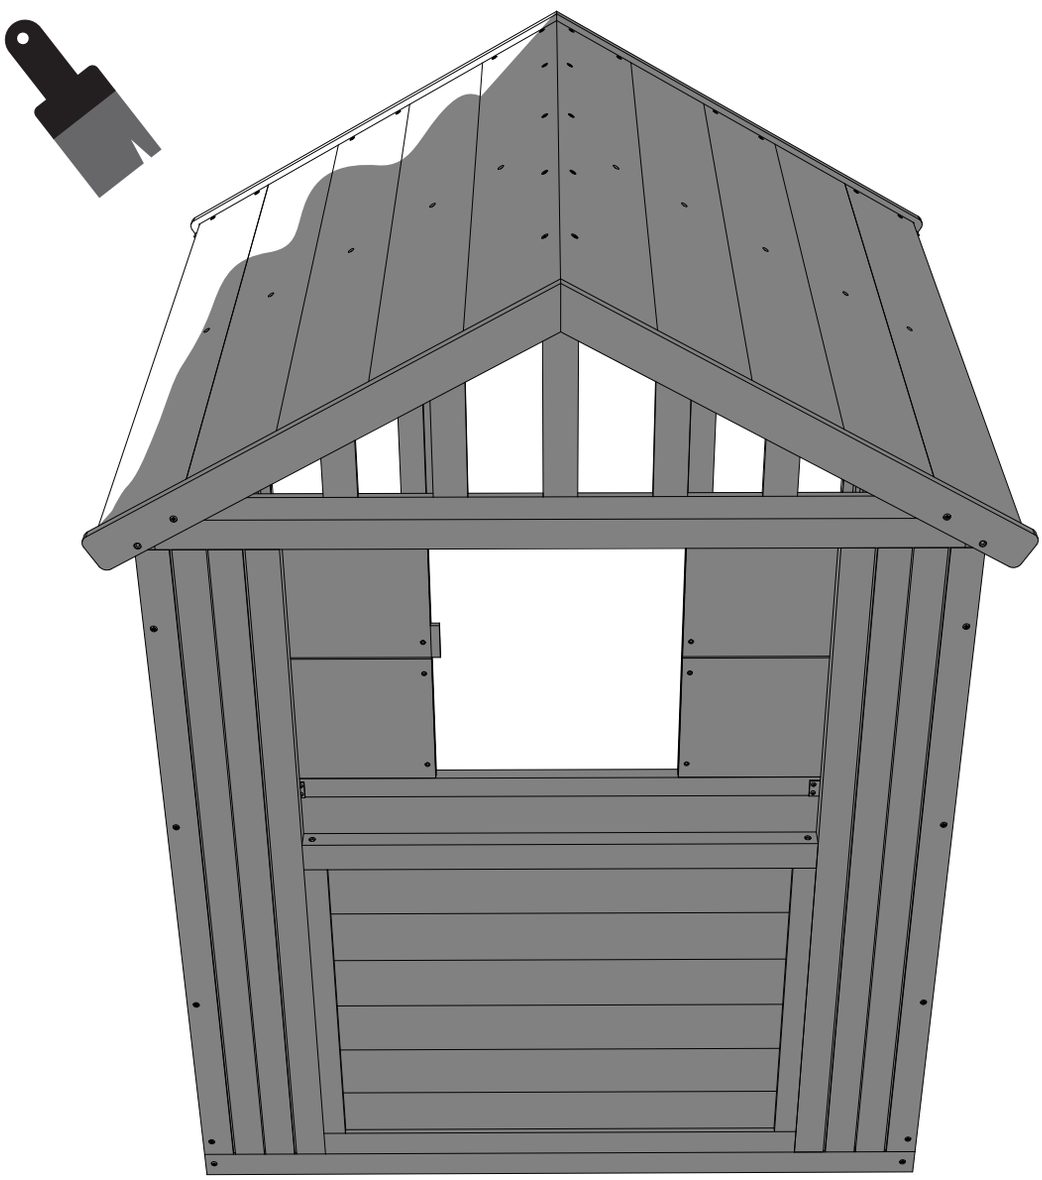


Caution: Treat all untreated panels on all sides with suitable child friendly wood treatment(not included) before being assembled.

ASSEMBLY INSTRUCTIONS:

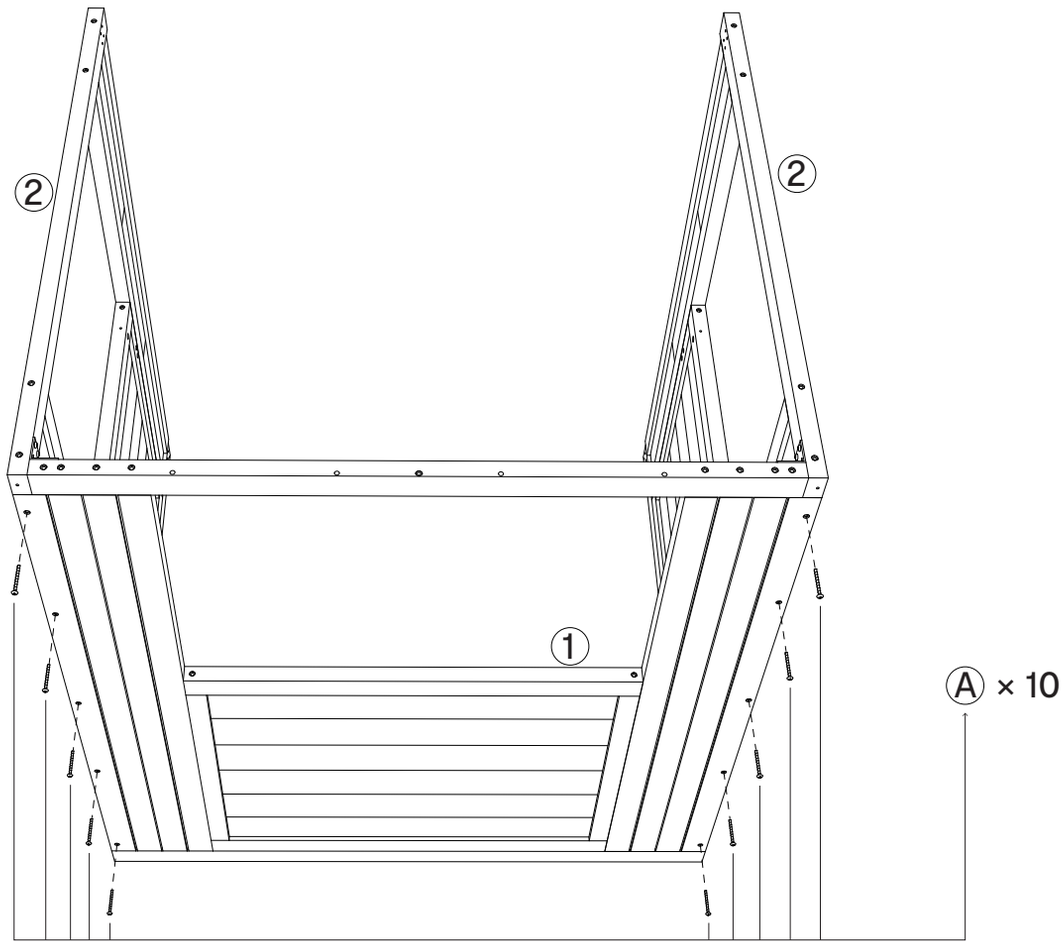
1




2

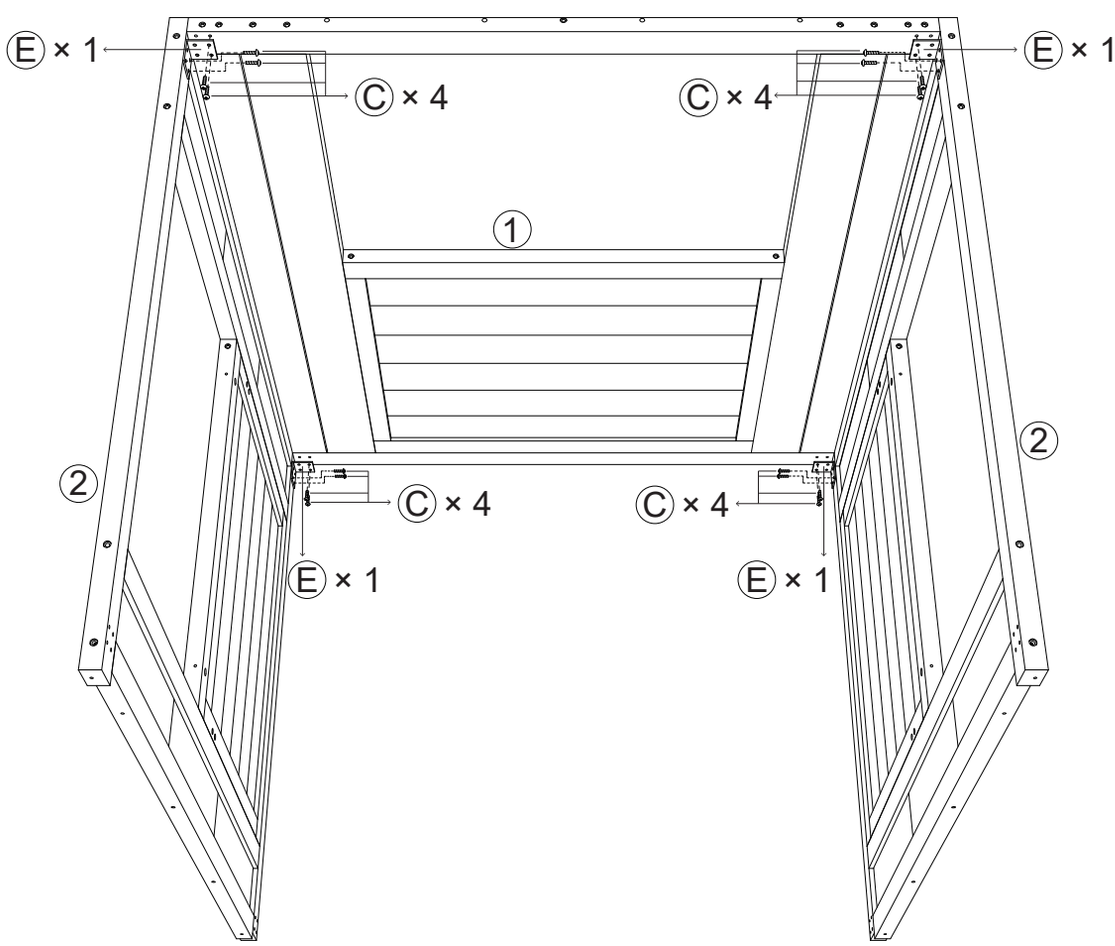


3

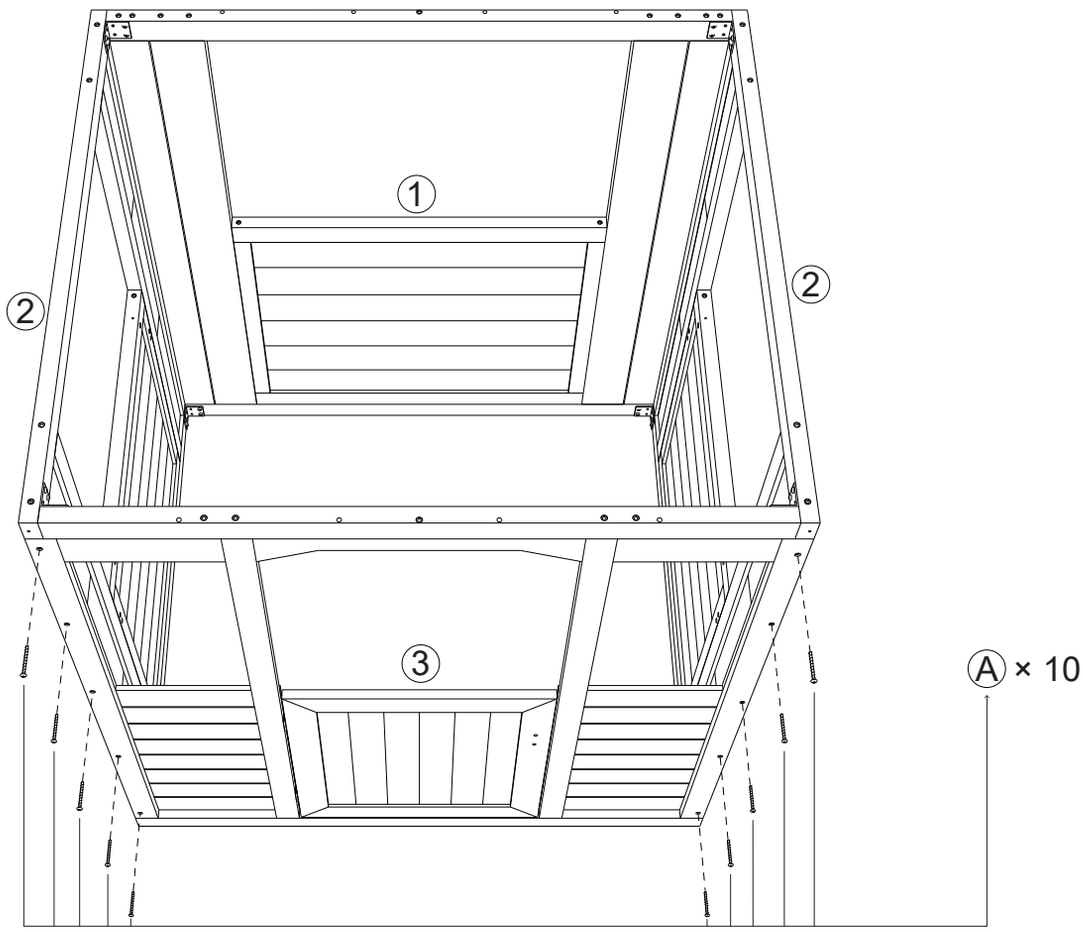

4

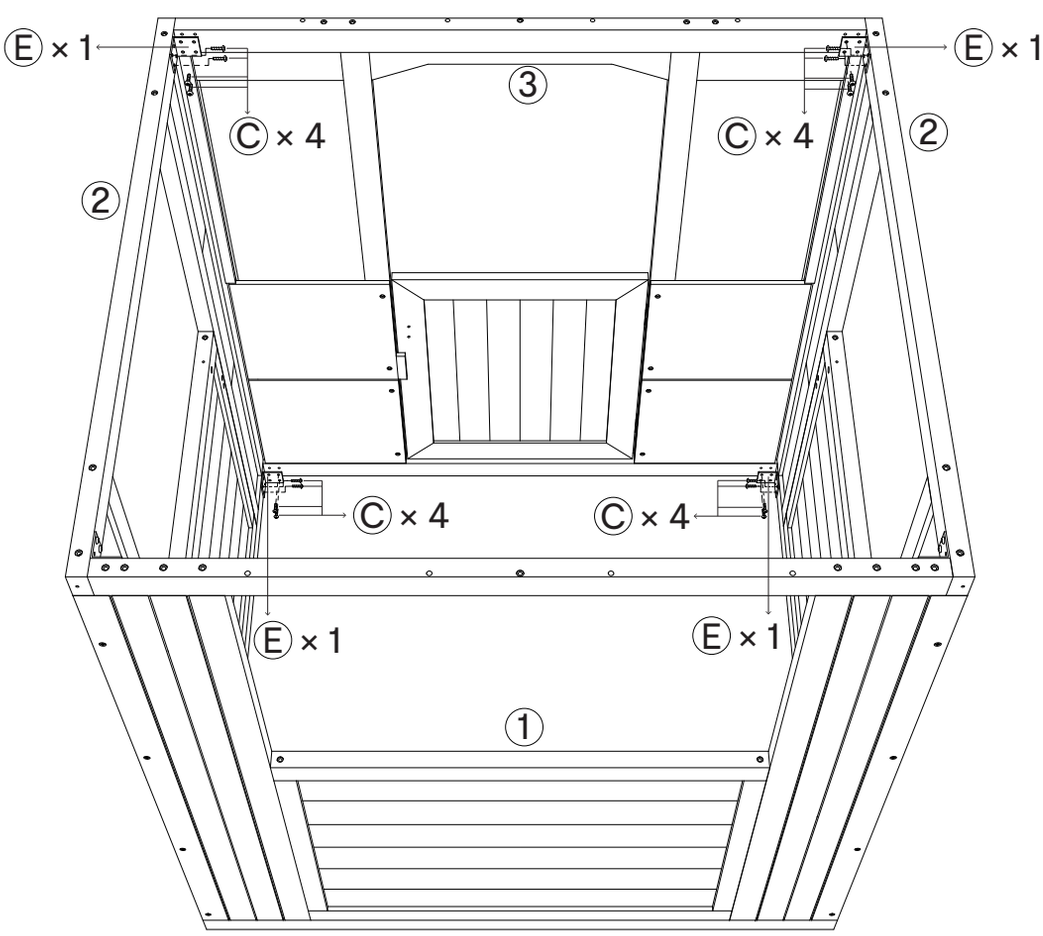


5

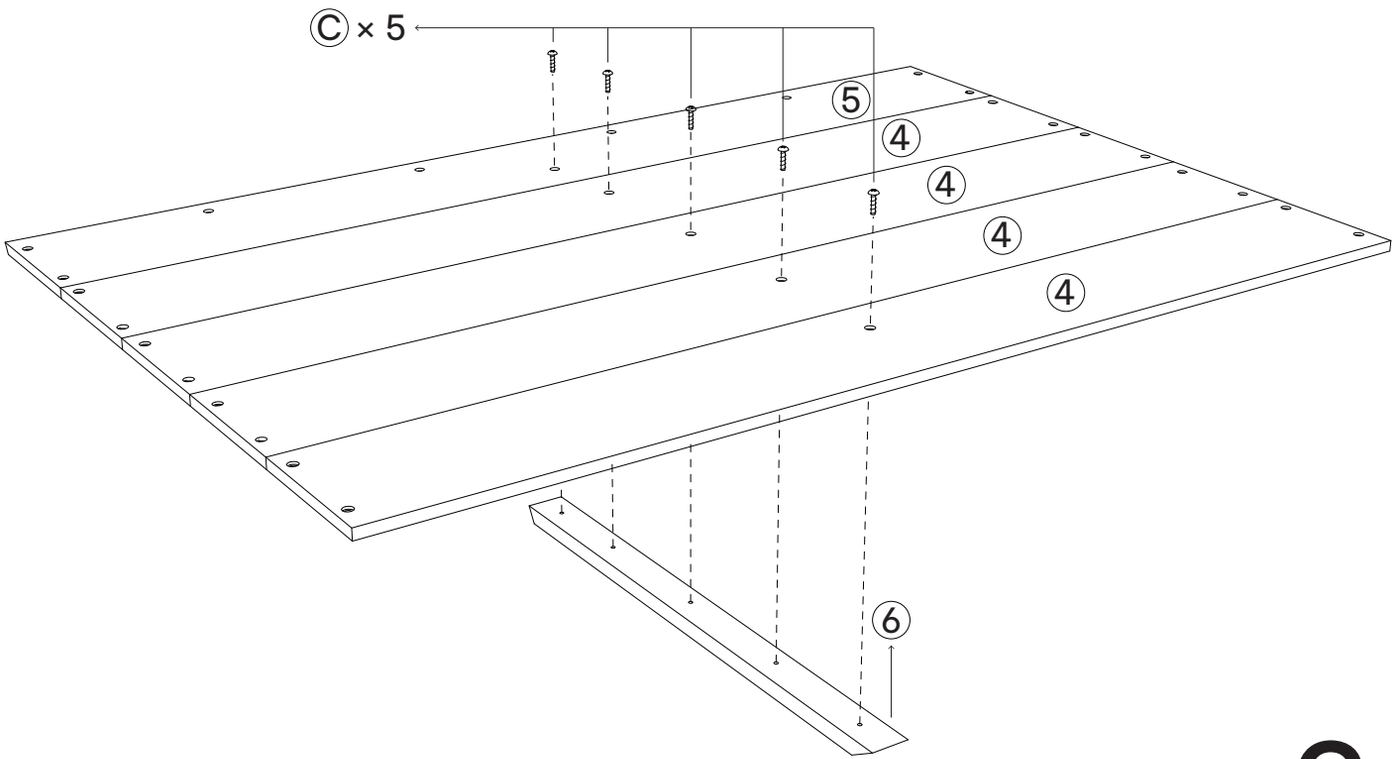


×2

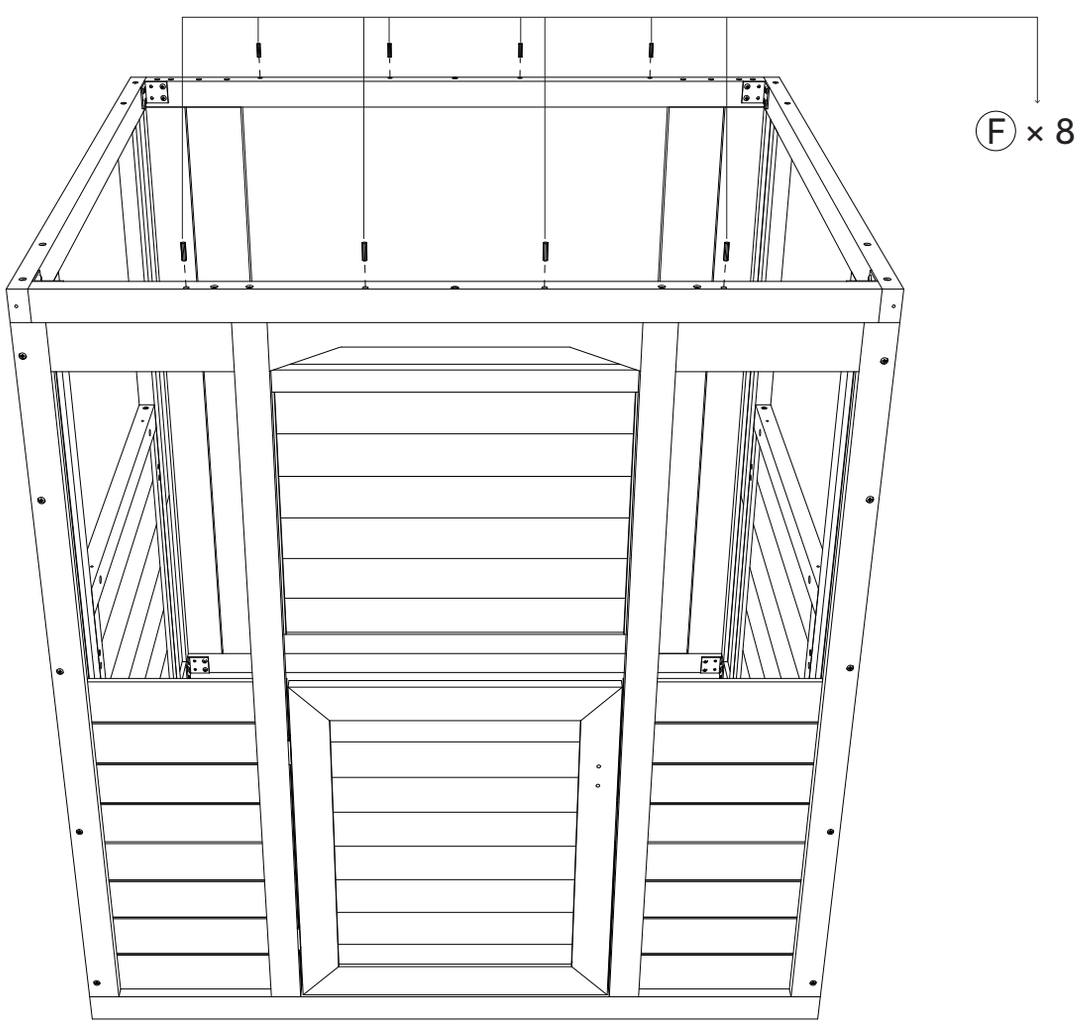
6




7

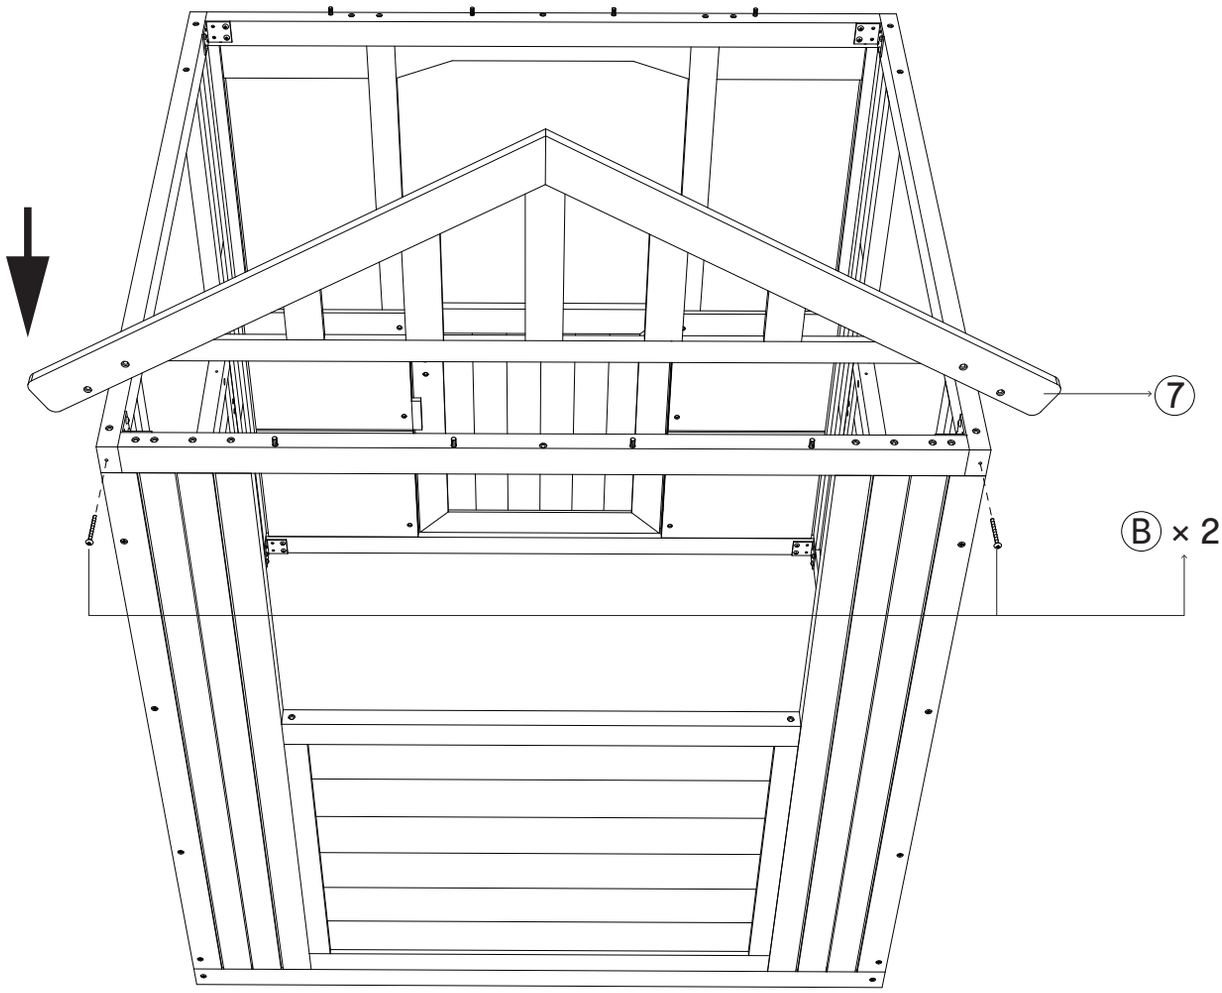


8

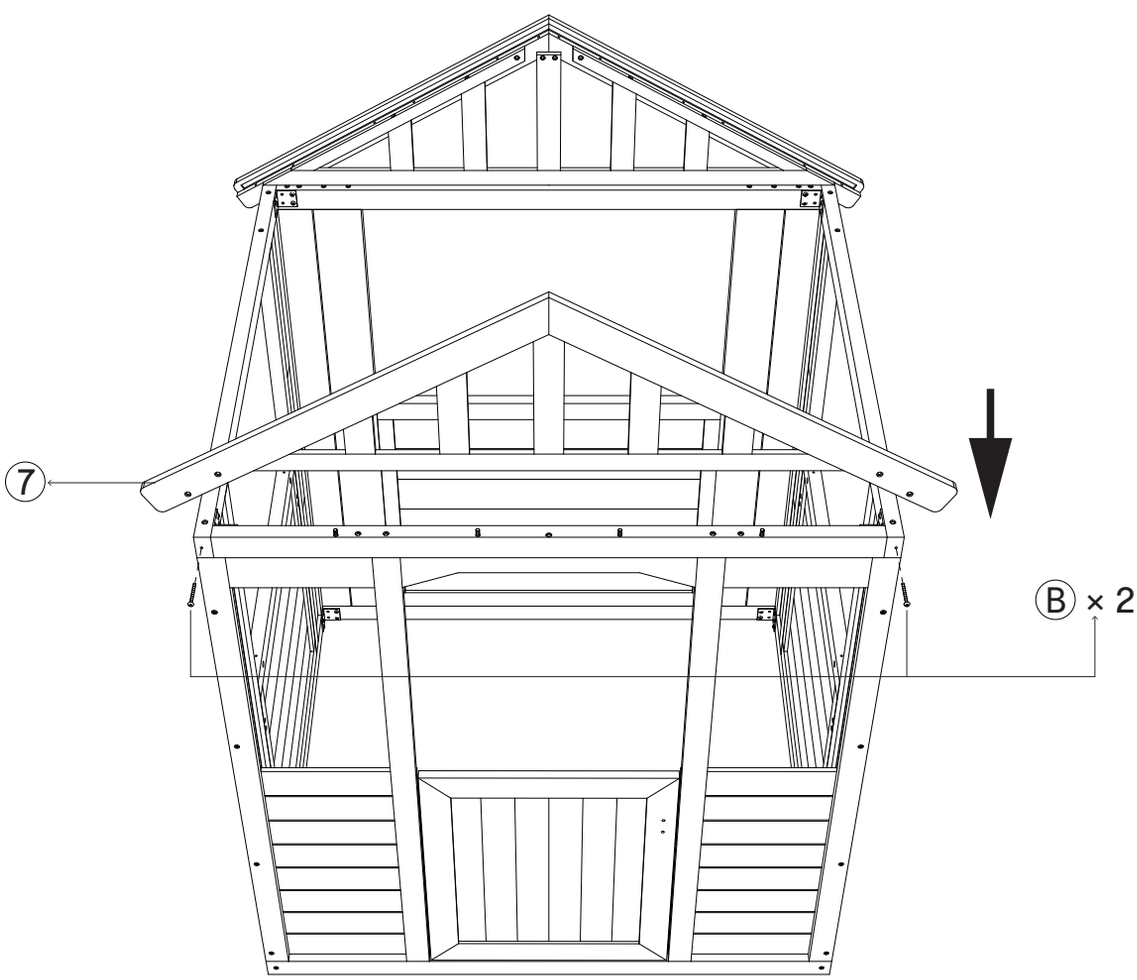


9

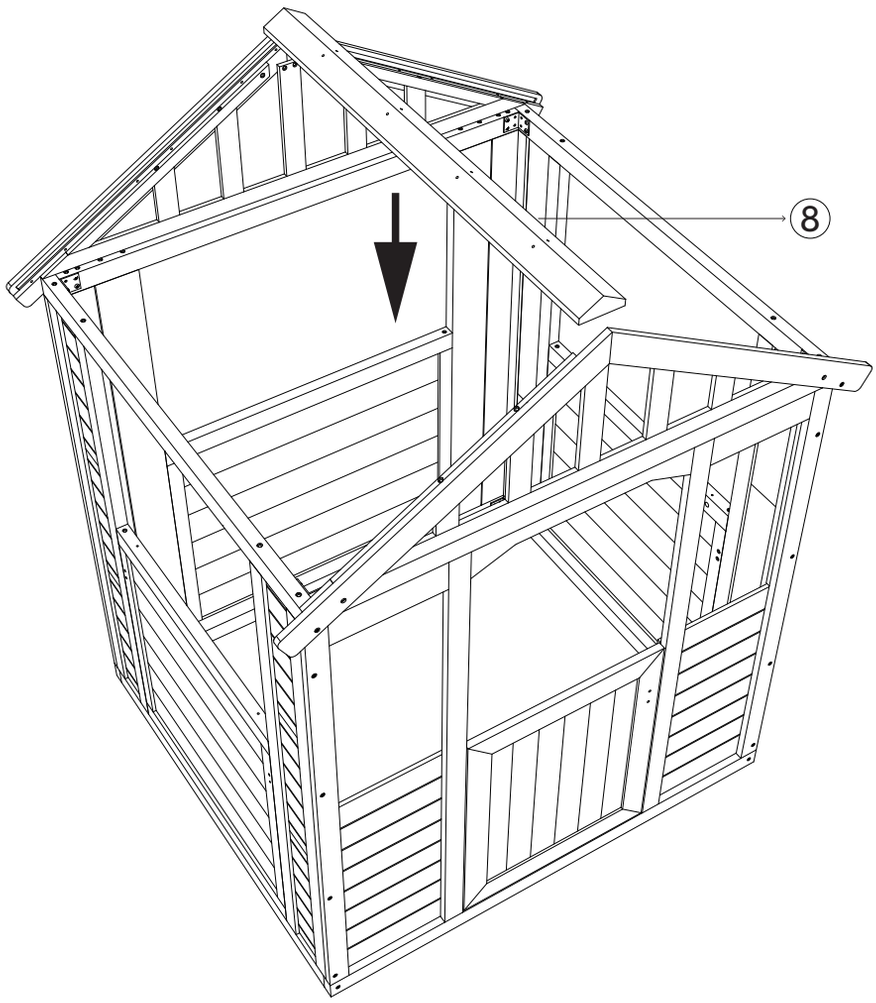


10

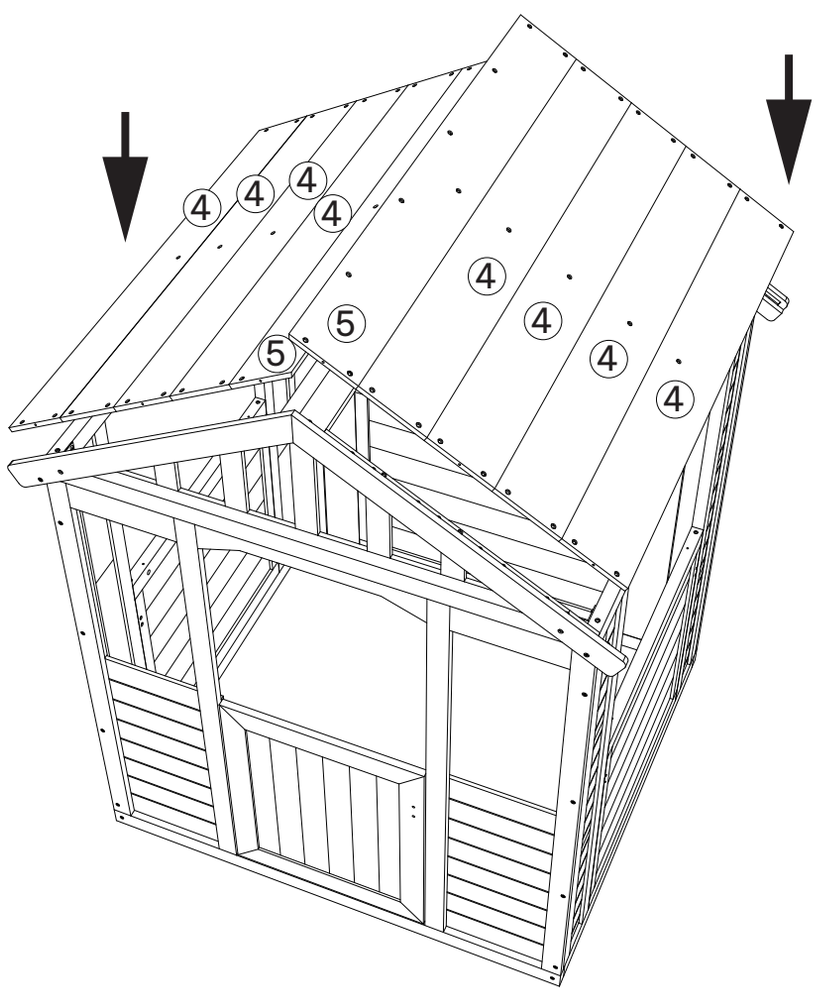


11

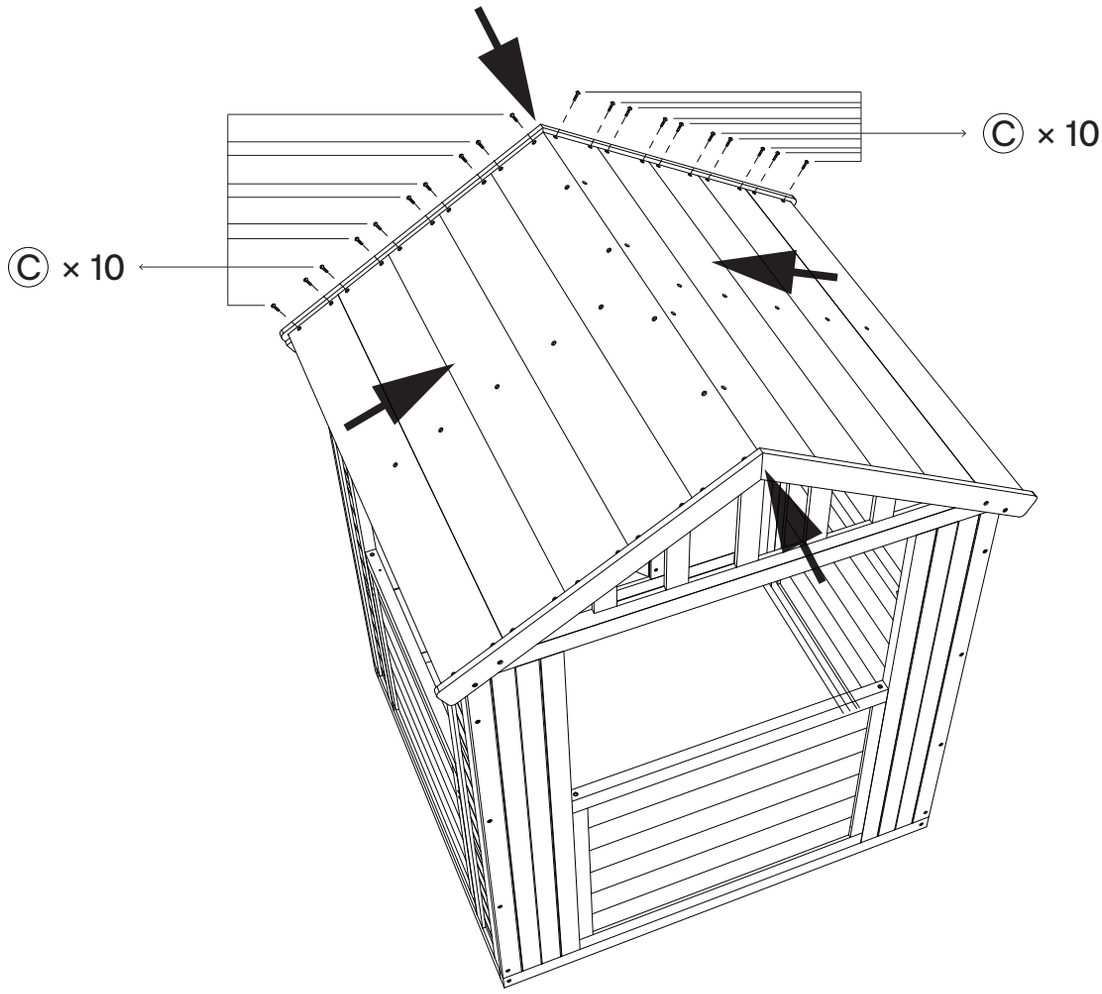


12

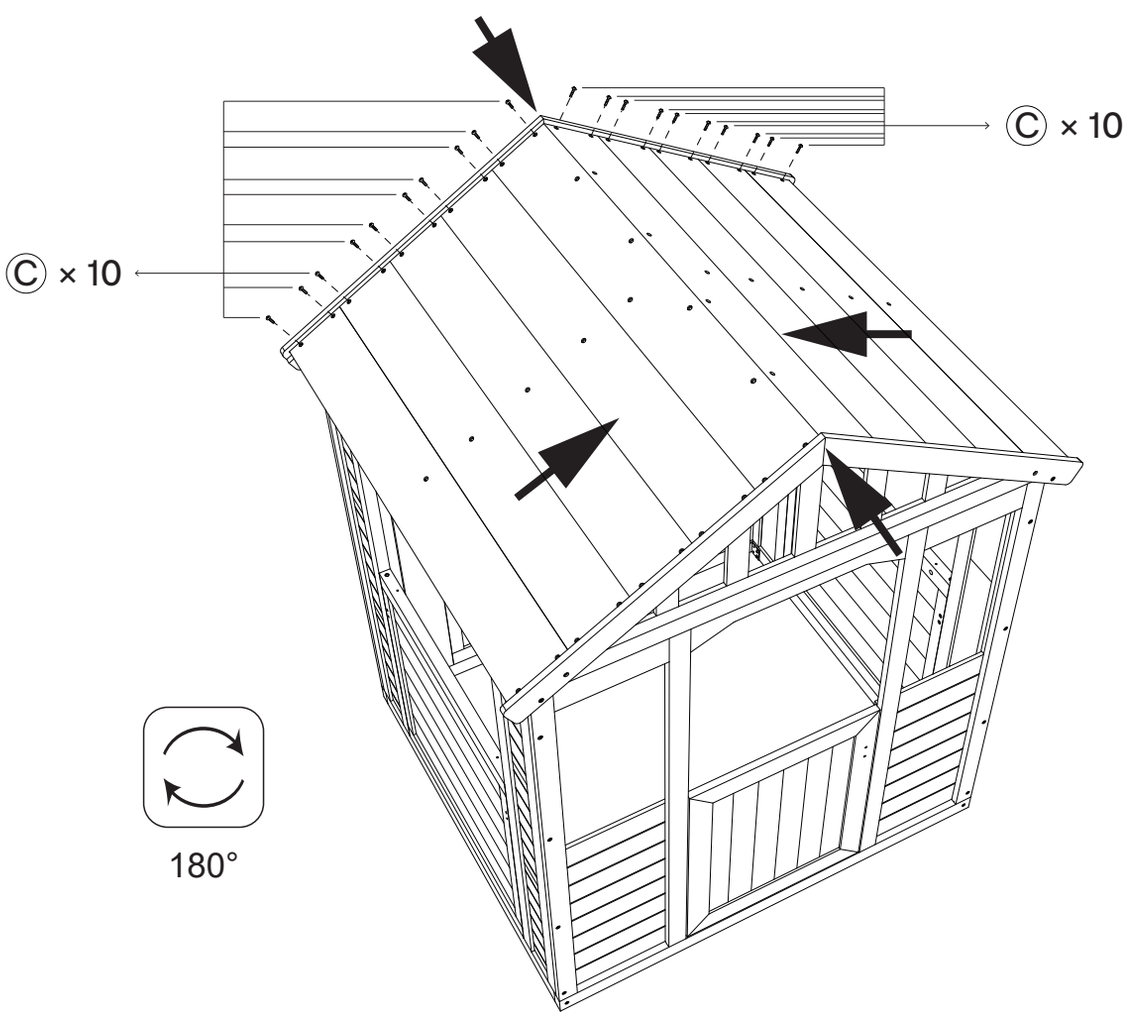


13

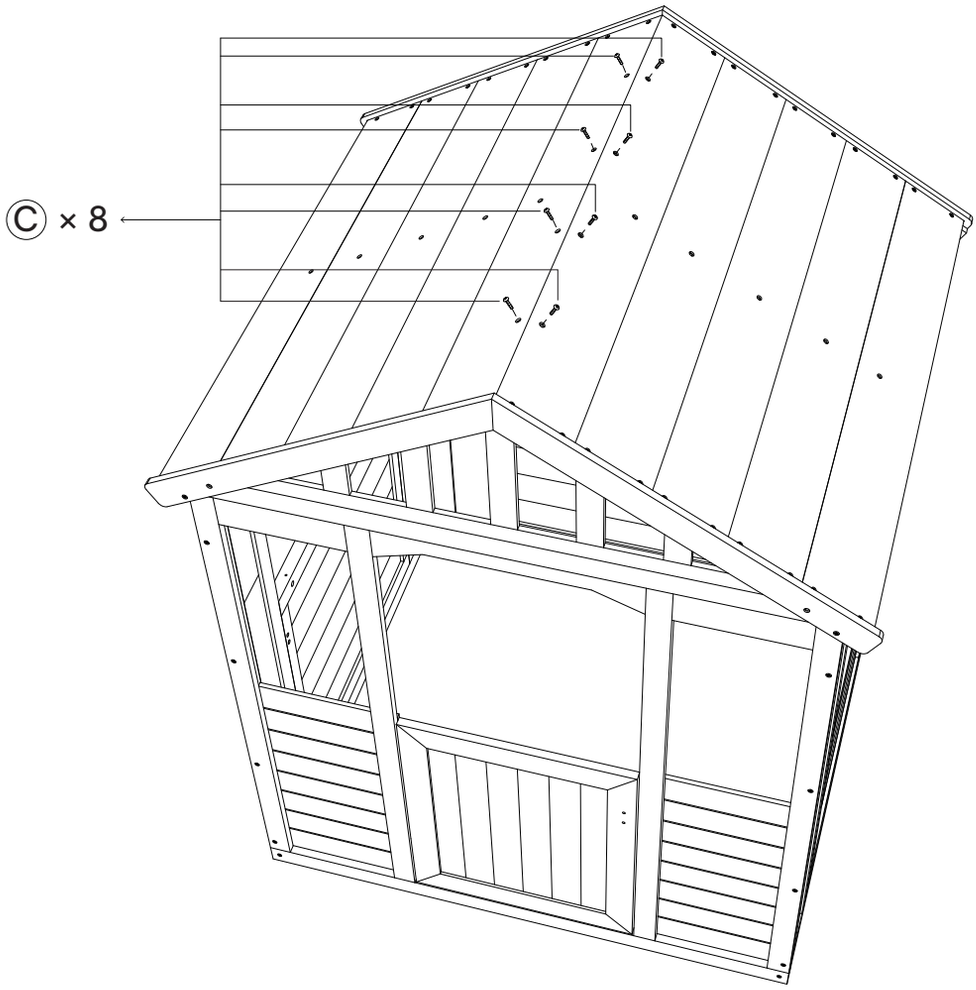


14

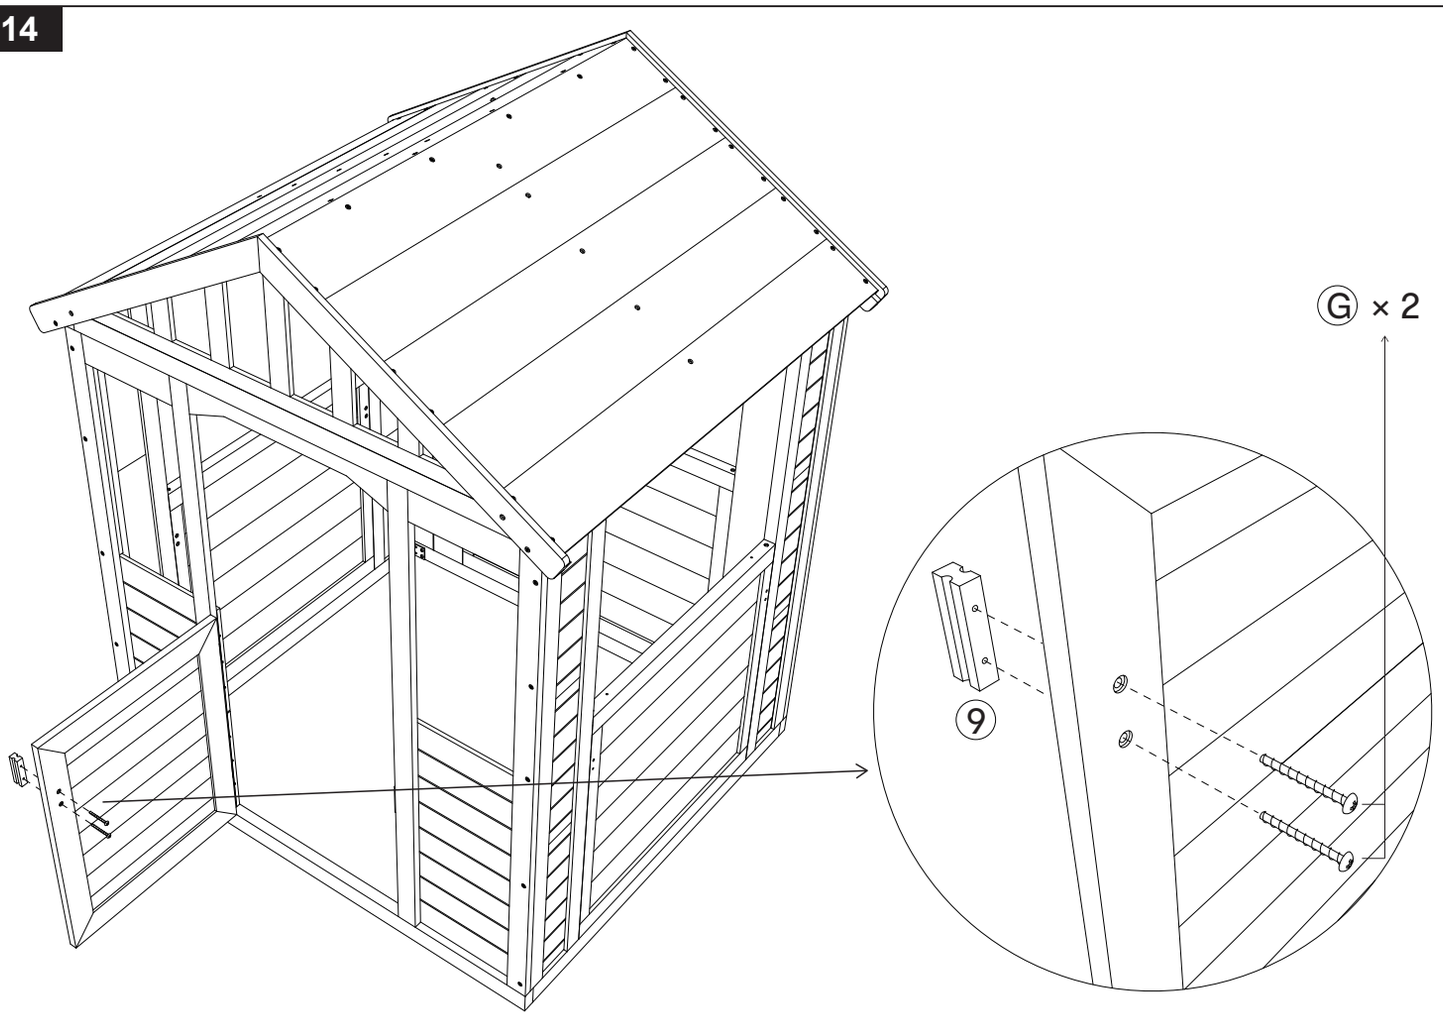

15

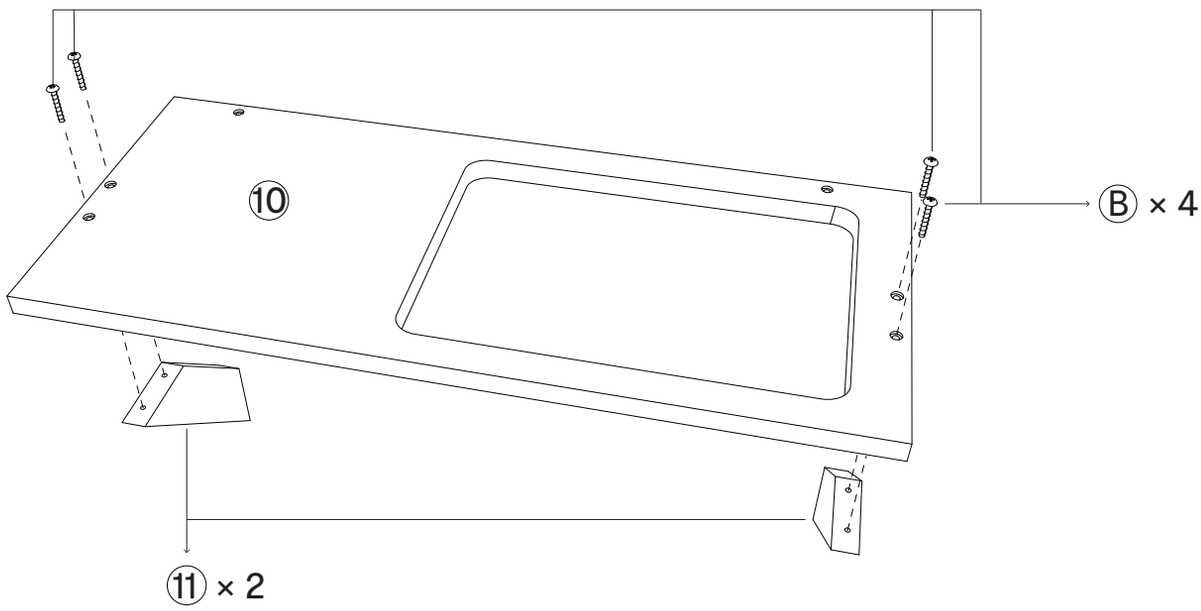


16

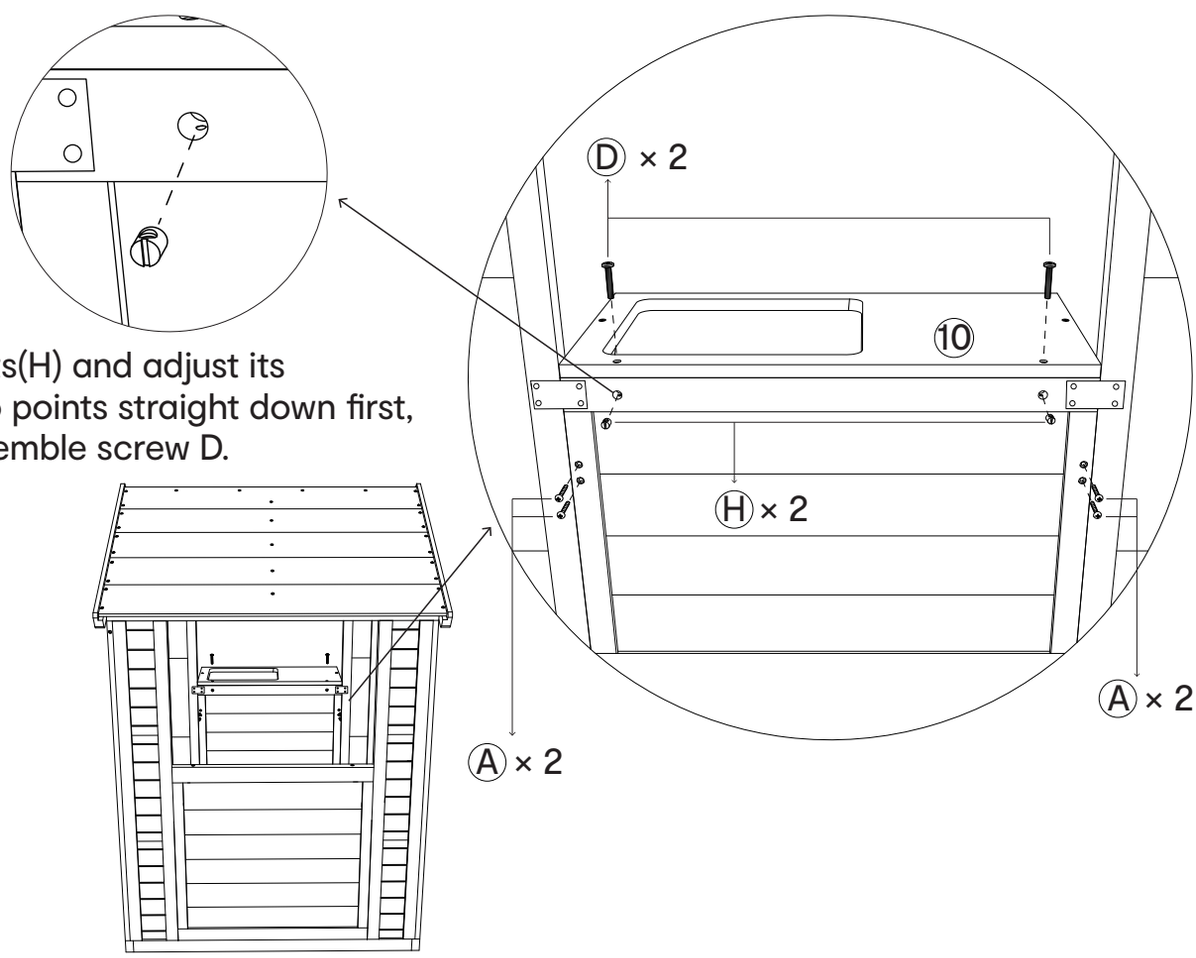


Install the nuts(H) and adjust its orientation to points straight down first, then assemble screw D.

Safe Play Area

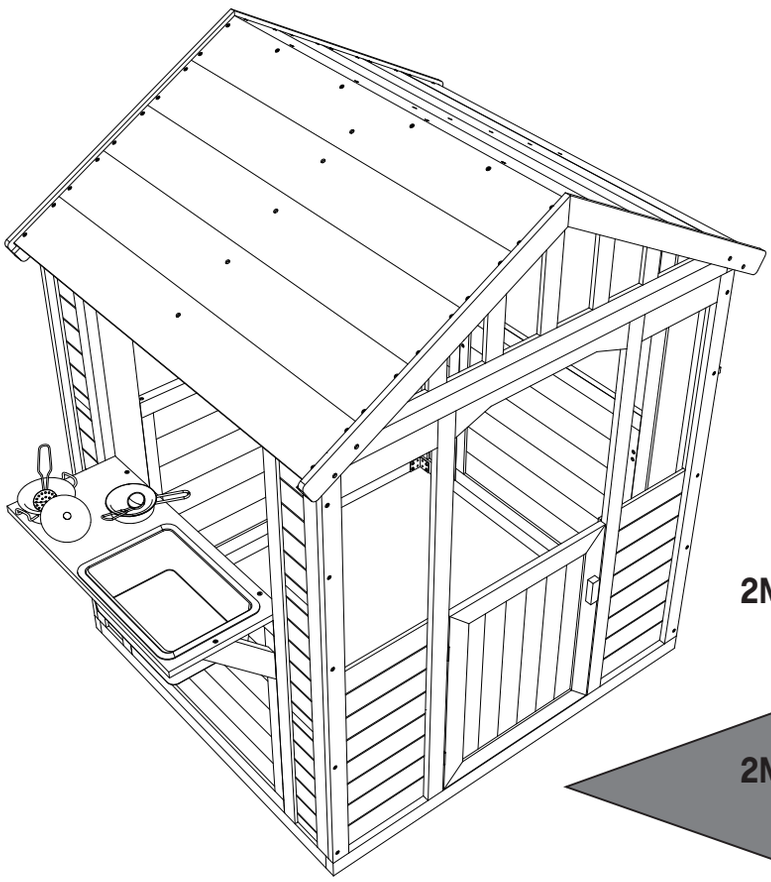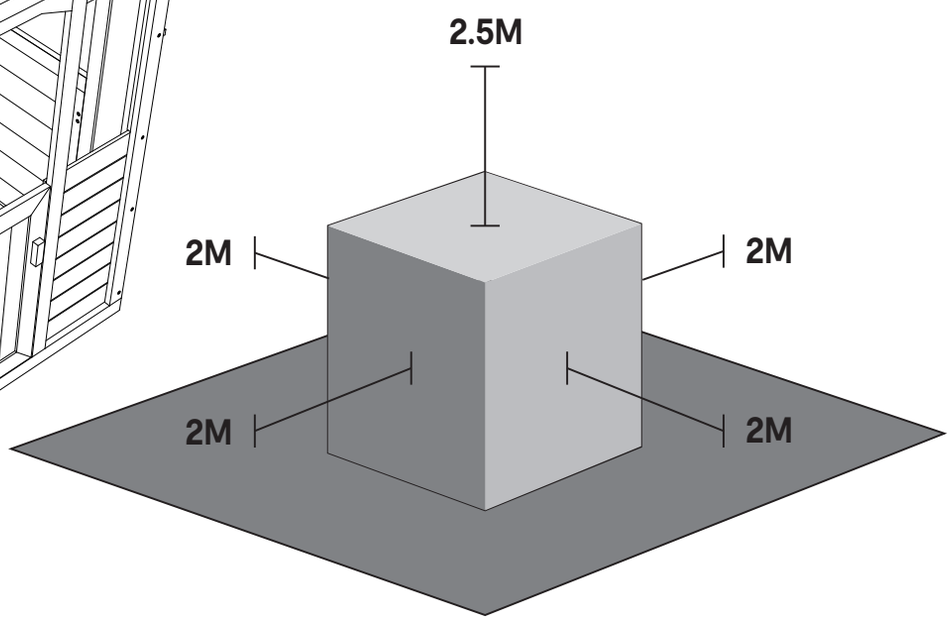The safe play area refers to the zone extending 200cm around the toys on all sides and 250 cm above the toy. The safe play area must be free from all obstacles.





⚠ WARNING: CHOKING HAZARD

SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: ADULT ASSEMBLY IS REQUIRED.UNASSEMBLED PARTS CONTAIN SCREWS WITH FUNCTIONAL SHARP POINTS, PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN.

WARNING: PLEASE CHECK CONDITION OF ITEM REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. FOR DOMESTIC USE ONLY. FOR INDOOR AND OUTDOOR USE.

WARNING: DO NOT STAND OR SIT ON THE TABLE. DO NOT USE THE TABLE UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED. DO NOT USE THE TABLE AS A STEP LADDER. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
MAXIMUM LOAD LIMIT FOR TABLE: 5KG.

MAXIMUM USER WEIGHT: 15KG. ONLY TWO CHILDREN TO USE AT A TIME.

ADULT ASSEMBLY AND SUPERVISION REQUIRED. PRODUCT MAY VARY FROM THE IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

43-703-913