
anko

Electric Bottle Brush
Instruction Manual

BPA FREE

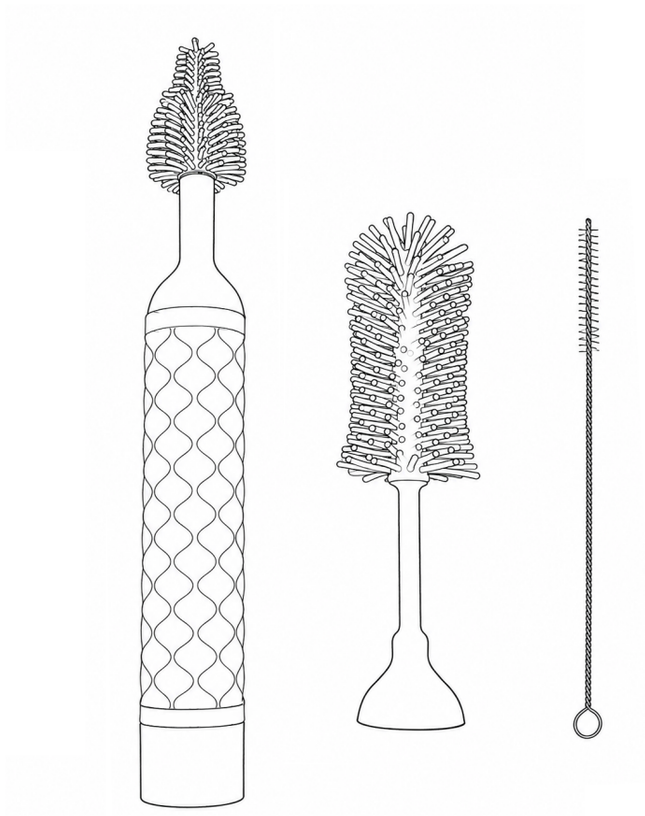

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read all instructions BEFORE assembly and USE of product

Note: Drawings in the manual are for illustration purposes only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or features without prior notice.

1. PARTS LIST

PARTS	FUNCTION	QTY
MAIN UNIT	THE CORE MOTOR-DRIVEN COMPONENT THAT POWERS THE CLEANING BRUSHES.	1
BOTTLE CLEANING BRUSH HEAD	FOR CLEANING THE INNER WALL OF BABY BOTTLES, CUPS, AND OTHER CONTAINERS.	1
NIPPLE CLEANING BRUSH HEAD	FOR DEEP CLEANING BOTTLE NIPPLES AND SMALL PARTS WITH NARROW OPENINGS.	1
STRAW CLEANING BRUSH	MANUAL BRUSH FOR CLEANING THE INSIDE OF STRAWS, TUBE FEEDING ACCESSORIES, AND SMALL BORES.	1
INSTRUCTION MANUAL	USER GUIDE WITH OPERATION STEPS, SAFETY WARNINGS, AND MAINTENANCE INSTRUCTIONS.	1

2. OPERATING INSTRUCTIONS

WARM TIPS: BEFORE USE, ENSURE THE BOTTLE IS INTACT WITHOUT CRACKS OR SHARP FOREIGN OBJECTS TO AVOID DAMAGING THE DEVICE OR THE BOTTLE DURING CLEANING.

PREPARATION

› TWIST OFF THE BATTERY COVER AT THE BOTTOM, AND INSERT 4 X AA BATTERIES (PAY ATTENTION TO THE POSITIVE AND NEGATIVE POLARITY).
› TWIST THE BATTERY COVER BACK ON. PRESS THE SWITCH BUTTON AT THE BOTTOM (UNTIL A “CLICK” SOUND IS HEARD) TO TURN THE DEVICE ON OR OFF.

CLEANING OPERATION

› SELECT THE APPROPRIATE BRUSH HEAD.
› ALIGN THE PROTRUSION ON THE BRUSH HEAD WITH THE GROOVE ON THE BRUSH CONNECTOR, THEN INSERT IT.
› PUT THE BRUSH HEAD INTO THE CONTAINER AND PRESS THE SWITCH TO START CLEANING.
› WHEN USING THE STRAW CLEANING BRUSH, MANUALLY INSERT IT INTO THE STRAW, ROTATE AND PULL REPEATEDLY TO COMPLETE CLEANING.
› POUR OUT THE DIRTY WATER INSIDE THE BOTTLE, RINSE THE BOTTLE WITH CLEAN WATER 2–3 TIMES TO ENSURE NO DETERGENT RESIDUE; REMOVE THE BRUSH HEAD, RINSE IT WITH CLEAN WATER, AIRDRY AND STORE PROPERLY.

WARNING
PLEASE STRICTLY FOLLOW THE WARNING CLAUSES BELOW TO PREVENT DEVICE DAMAGE, PERSONAL INJURY OR OTHER SAFETY ACCIDENTS CAUSED BY IMPROPER OPERATION.


1. DO NOT IMMERSE THE MAIN UNIT IN WATER TO AVOID SHORT CIRCUIT. WIPE THE DEVICE SURFACE WITH A DRY SOFT CLOTH FOR CLEANING; DO NOT RINSE WITH WATER. STORE IN A VENTILATED AND DRY PLACE, AWAY FROM FIRE AND HEAT SOURCES.
2. USE MILD DETERGENT ONLY IF REQUIRED.
3. IF THE DEVICE MAKES ABNORMAL NOISE, OVERHEATS, SMOKES OR EMITS UNUSUAL ODOR DURING CLEANING, STOP USING IT IMMEDIATELY, REMOVE THE BATTERIES, DO NOT DISASSEMBLE OR REPAIR BY YOURSELF, AND CONTACT AFTERSALES SERVICE.
4. DO NOT USE THE DEVICE TO CLEAN CONTAINERS WITH HIGH TEMPERATURE (OVER 80°C), HIGH PRESSURE, FRAGILITY (SUCH AS THIN GLASS AND CERAMIC BOTTLES) OR SHARP EDGES TO AVOID CONTAINER BREAKAGE, INJURY OR DEVICE DAMAGE.
5. REMOVE THE BATTERIES WHEN THE DEVICE IS NOT IN USE FOR A LONG TIME TO PREVENT BATTERY LEAKAGE FROM CORRODING INTERNAL PARTS AND DAMAGING THE DEVICE.
6. THIS PRODUCT IS NOT A TOY. KEEP OUT OF REACH OF CHILDREN.
7. ADULT SUPERVISION IS REQUIRED WHEN USED NEAR CHILDREN.
8. BATTERY INSTALLATION AND REPLACEMENT MUST BE CARRIED OUT BY AN ADULT ONLY.
9. KEEP HANDS, HAIR, LOOSE CLOTHING AND OTHER OBJECTS AWAY FROM THE ROTATING BRUSH DURING OPERATION.
10. ONLY USE AA BATTERIES AS SPECIFIED. DO NOT MIX BATTERY TYPES OR OLD AND NEW BATTERIES.
11. DO NOT USE RECHARGEABLE BATTERIES UNLESS SPECIFIED.
12. THIS PRODUCT IS FOR CLEANING ONLY. IT DOES NOT STERILISE OR DISINFECT.
13. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN INJURY, DAMAGE OR PRODUCT FAILURE.

IMPORTANT:
THIS PRODUCT ASSISTS WITH CLEANING ONLY.
ALWAYS STERILISE BABY FEEDING EQUIPMENT ACCORDING TO HEALTH GUIDELINES IF REQUIRED.

CAUTION:
BATTERY INSTALLATION BY ADULT ONLY.
PLEASE KEEP THE PACKAGING AND INSTRUCTION FOR FUTURE REFERENCE.
PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.

4 X AA

REQUIRES 4 X 1.5V AA BATTERIES (NOT INCLUDED)
BATTERY INSTALLATION & REPLACEMENT:
UNSCREW THE BATTERY COVER AT THE BOTTOM.
INSERT BATTERIES AS INDICATED.
SCREW THE BATTERY COVER BACK TIGHTLY.



KEYCODE:
K: 43-728-428 | T: 72-511-176

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567