DOUBLE DECKER BEACH TROLLEY

Keycode: 43750542

Part List

Upper base board
x 1pc



Lower base board
x 1pc





Wagon
x 1pc



Locked wheel
x 2pc

Swivel wheel
x 2pc

Assembly Instruction

Step 1: Grip both side poles of the wagon frame, then pull them horizontally outwards in opposite directions until the frame is fully expanded and locked into place.



Step 2: Align the locked wheel connector shaft vertically with the mounting hole on the bottom of the wagon frame. Push the wheel upward firmly until it clicks into place and is fully locked.



Step 3: Align the swivel wheel connector shaft vertically with the mounting hole on the bottom of the wagon frame. Push the wheel upward firmly until it clicks into place and is fully locked.



Step 4: Insert the upper base board into the upper storage compartment of the wagon, and lay it flat completely.



Step 5: Follow the arrow directions to unfold and open the side flap panel of the wagon lower compartment completely.



Step 6: Insert the lower base board into the lower storage compartment of the wagon along the arrow direction, and lay it flat completely inside.




Step 7: assembly complete.



Grip the pull handle firmly, and pull the fully assembled wagon to move it smoothly.



Side Storage

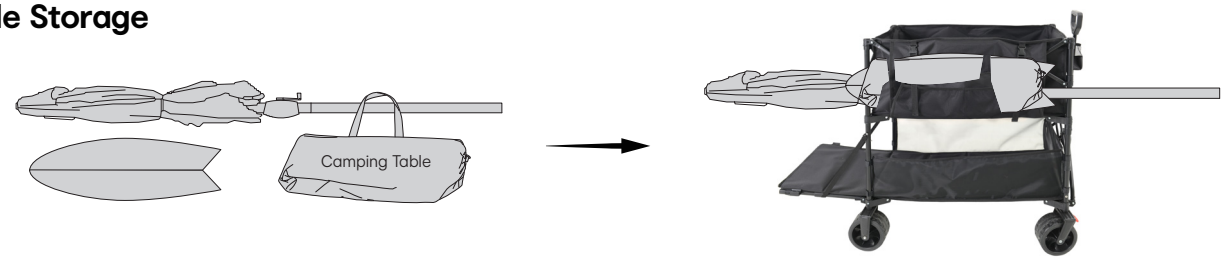

How to fix and unfix the wheel



Push lock button | locked | Push unlock button | unlocked

How to remove the fabric for cleaning

Step 1: Lift the fabric sleeve upwards along the arrow direction to detach it from the metal frame of the wagon.

Step 2: Grasp the upper edge of the wagon's fabric body with both hands. Lift and pull it upwards and outwards to separate the fabric from the metal frame, then remove it completely.



Foldable Wagon Storage Steps

Step 1: Lift the upper base board upwards along the arrow direction and take it out from the wagon.

Step 2: Remove the lower base board from the wagon compartment.

Step 3: Use both hands to lift the upper and lower fabric compartments upwards simultaneously along the arrow direction.

Step 4: Grip both side poles of the wagon frame with both hands, and push them horizontally inward along the arrow directions to collapse the frame completely for storage.



Warning

Do not locate this product in close proximity to an open fire, radiator or heater. Do not stand or sit in the trolley. Follow usage instructions carefully.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567