12 month warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Statement

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 3A).
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- The marking located on the bottom of the apparatus.

WATERPROOF FLOATING SPEAKER
Operating instructions

includes:
- Bluetooth® speaker
- Charging cable
- Use manual

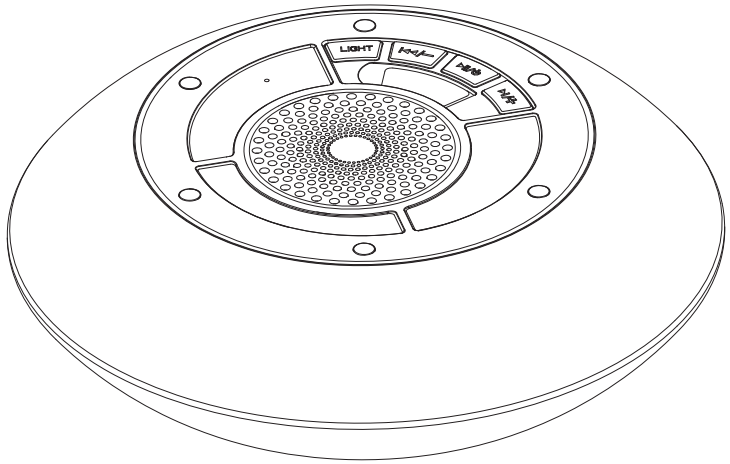


Please read instruction manual
before use and save for future use

K: 43754052 I T: 72852323
MODEL: 28YX01

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

Function overview:

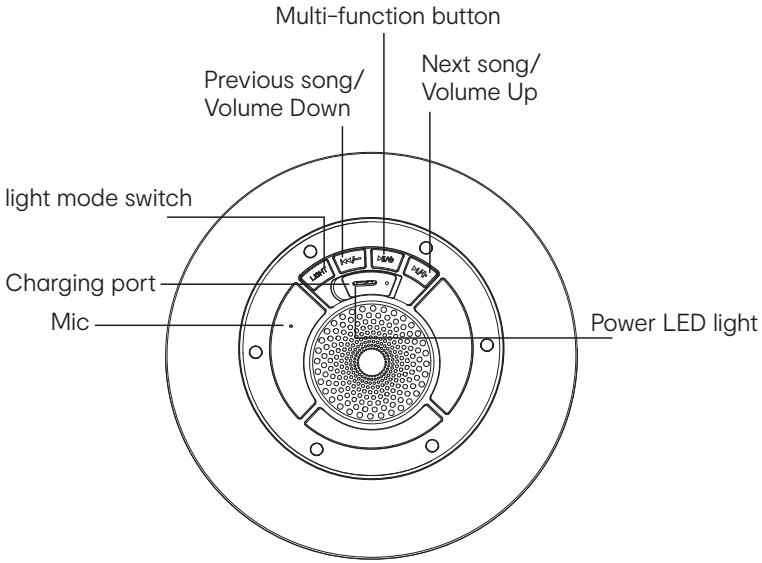

How to use these speakers:

Multi-function button operation

Pause click the ⏯/⏻ button

Play click the ⏯/⏻ button

Next song click button ⏭/+

Previous song click button ⏮/-

Power ON / OFF

Power ON
Press and hold the multi-function button

3 seconds and hear the prompt that it is turn on;

Power OFF
Press and hold the multi-function button

3 seconds and hear the prompt that it is turn off;

Volume Up press and hold the button ⏭/+

Volume Down press and hold the

button ⏮/-

Light Mode Switch

Click the LIGHT button to switch the light mode， total 8 styles mode. Click the ninth time, the light will off.

Maintenance
Please keep the speaker clear and dry after use.

Specifications:

Model No:
28YX01

Bluetooth Version:
V5.4

Support profiles:
A2DP, AVRCP, HFP

Working Distance:
10 meters

Music Time:
4 Hours with light ,10 Hours without light

Waterproof:

IPX7

Talk time:
Up to 4 Hours

Standby time:
Up to 200 Hours

Input rating:
DC 5V 1A

Charge time:
3 hours

Cable length:
0.3m

Dimension:
5.4cm*φ 16.8cm

Pairing the speakers with Bluetooth devices

› Once the speaker is powered on, it is in pairing mode (LED flashes) and will pair to the last paired device (if available).

› Pair the speaker in Bluetooth menu in mobile phone and once it is paired, you can hear a pairing tone.
Bluetooth Name: 'anko43754052'

Phone calls

› Click the multi-function button to pick up phone calls.

› Click the multi-function button to hang up the calls.

› Double click the multi-function button to reject the calls.

Playing music

When the bluetooth speaker connects with the mobile phone via Bluetooth you can enjoy music through the speaker wirelessly.

Battery Charging

This speaker is powered by rechargeable Li-ion battery.

Please use the accessory USB cable to recharge the battery.

› Insert USB charging cable into a suitable USB port.

› Connect charging cable with the headset USB port .

› Indicator LED turns RED to show battery is charging.

› Indicator LED turns off when battery is fully charged.

› It takes about 3 hours to fully charge the battery.

Warning
This product built in battery
1.Do not dispose or expose battery excess heat in a fire.
2.Do not crush, puncture, incinerate or short-circuit battery.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.