印刷颜色 C M Y K

折叠尺寸 110*140mm

128g铜板纸双面印刷，风琴折

正面

anko

Instruction Manual



Portable Projector Set

K: 43-755-387 | T: 72-821-558

MADE IN CHINA

Before use please read this manual carefully.
Please retain for future use.

Packing List



Projector *1pc


Power Bank *1pc


1.8m SAA Adaptor *1pc

Remote Control *1pc (Battery not included)



Lens Cap *1pc


Cleaning Cloth *1pc


Bluetooth Speaker


110" Projector Screen Set *1pc



Adjustable Tripod *1pc


Carry Pouch with Handle *1pc


User Manual *1pcs


DC in - DC out Cable

NOTICE



Part 1 Projector

Projector

Please read the entire instruction manual before using this product and retain for future use.


Safety

- The projector LES lens is RG2 grade.
- Do not block or cover any of the air vents. Leave at least 5 cm (2 inches) of free space around the entire product.
- Do not place the projector near to sources of heat such as radiators, fan heaters, cookers, candles or other objects that produce heat.
- Avoid using the product near powerful magnetic fields.
- Make sure that the power cable cannot be trodden on, crushed or damaged.
- Keep the product out of the reach of children.
- Unplug the product from the wall socket during thunderstorms or if you are not going to use it for a long period.
- Never insert foreign objects into the product's air vents. The high voltage can cause an electric shock and/or a short circuit.
- Do not use the product in a damp environment such as in a bathroom or a steam filled kitchen or a swimming pool.
- Do not pull or carry the product by its power cable. When you are unplugging the product from the wall socket, grasp and pull on the plug and not the cable.
- Only use accessories that are recommended by the manufacturer or retailer.

Battery Safety Warnings


1. Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, or to low air pressure at high altitudes.
2. Do not attempt to disassemble, modify, or replace the built-in lithium battery.
3. Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
4. Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
5. A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

Function Overview

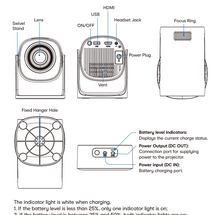


The indicator light is white when charging.
1. If the battery level is less than 25%, only one indicator light is on;
2. If the battery level is between 25% and 50%, both indicator lights are on;
3. If the battery level is between 50% and 75%, three indicator lights are on;
4. If the battery level is between 75% and 100%, all four indicator lights are on.

Power Supply

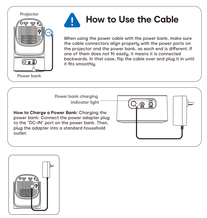

Insert the power adapter into the socket and connect it to the power plug of the projector.

Remote Control

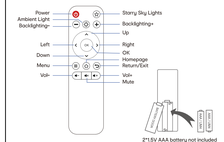


BATTERIES STATEMENT AND NOTICES

Remove the battery compartment cover on the back of your remote by carefully sliding to open the battery cover can then be lifted away. Fit the correct batteries, referring to the polarity markings. Finally, replace the cover.

NOTE:
1. When you find the batteries of the remote control is swollen or softened, please do not use it before you change it.
2. Please keep the battery away from excessive heat such as sunshine, fire.
3. Make sure that the batteries are installed polarity correctly.
4. Only same or equivalent type batteries as recommend are to be used.
5. Do not dispose of batteries in fire, battery may explode or leak.
6. Do not try to recharge a battery.
7. Do not mix old and new batteries.
8. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

Quick Start

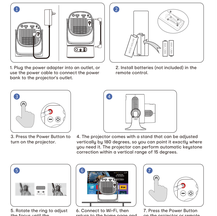

Tips:

1. To prolong the lifespan of the projector, we highly recommended unplug the power cable completely after each use, especially during a long time of no use.
2. After the projector is plugged in, it will enter standby mode. Press the Power button for the projector, or please wait a few seconds before pressing power to turn it on. And after pressing the power button, it will take 20 seconds to power off, or can press the power button again to turn it off.
3. The bottom of the machine is the air inlet, please do not place the machine on items such as towels.

Lighting Effect

The aurora galaxy projector simulates a dreamy Milky Way galaxy through rotating aurora and stars. The projector has 2 light effects (starry sky light & ambient light). The galaxy star projector can help us create any romantic, relaxing, or dreamy atmosphere with ease.


1. Starry Sky Lights

Press the starry sky lights button on the remote control to project the starry sky video.

A total of 3 starry sky light videos can be selected by the "Backlighting +" and "Backlighting -" buttons.


2. Ambient Light

Put on the lens cover when using the ambient light to increase the romantic atmosphere of the light.
Press the Ambient light button on the remote control, and seven colors of light can be switched.

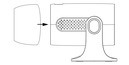


Projection Distance & Size

The recommended projection screen is around 40-120 inches with a distance of around 1.03-2.93m.
To improve the clarity of your projected images, it is recommended to create ambient darkness and use a high-quality project screen. These factors work together to provide a visually stunning and immersive viewing experience.

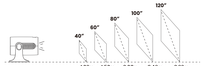

Projection Mode


If you want to hang the projector to the ceiling, a projector mount will be needed. If you want to project in different way, please select corresponding mode in the setting page.

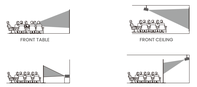

Input Source

Go to **Settings > Source > Select HDMI or USB**

A. HDMI Connection

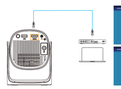

B. USB Connection



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Bluetooth Setting

A. Bluetooth Setting

1. Go to **Settings > Settings > Bluetooth Setting.**
2. Turn the Bluetooth Connection on and search for nearby Bluetooth devices.
3. Choose correct Bluetooth device to connect.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

B. Bluetooth Speaker

1. Go to **APPS > Speaker Mode.**
2. The projector can be used as a Bluetooth speaker.



NOTE:

1. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to our projectors. If you have such an issue, feel free to let us know.
2. If 3.5 AUX port is connect your headphone speaker to an audio port, please disconnect the Bluetooth audio device from the projector first.

Network

1. Go to **Settings > Settings > Network.**
2. Select the network you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Projection Setting

A. Screen Scaling

1. Go to **Settings > Settings > Projection > Screen settings > Scaling.**



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

B. Manual Keystone (Before using this feature, please turn off Auto keystone)

1. Go to **Settings > Settings > Projection > Screen settings > Manual keystone.**
2. Vertical correction: press the left and right buttons on the remote control to adjust the top and bottom of the screen.
3. Horizontal correction: press the left and right buttons on the remote control to adjust the left and right screens.
4. You can also click "**Four-point correction**" to access the screen below and follow the instructions to perform keystone correction.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

C. Auto Keystone

1. Go to **Settings > Settings > Projection > Screen settings > Auto keystone.**
2. Select **On** or **Off.**

D. Projection Mode

1. Go to **Settings > Settings > Projection > Projection Mode.**
2. Select the projection mode you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Language

1. Go to **Settings > Settings > Language.**
2. Select the language you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Time & Time Zone

1. Go to **Settings > Settings > Date > Time Zone.**
2. Select the time you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

System

A. System Upgrade

1. Go to **Settings > Settings > System > System Upgrade.**
2. Select **Online/Local Update.**



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

B. Clear Cache

1. Go to **Settings > Settings > System > Clear Cache.**
2. Select to confirm whether to clear the cache.



C. Factory Reset

1. Go to **Settings > Settings > System > Factory Reset.**
2. Select to confirm whether restore factory settings.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Application Settings

The APP in the projector is not pre-installed. Clicking the APP icon on the home page will lead you to the download page, or you can search for it in the APP store to download. After the download is completed, you can use it. Go to"Apps" to view all downloaded apps, you can also find them under "Settings" > Settings' > "Apps" and manage them there.

Other Settings

A. Screen Saver

1. Go to **Settings > Settings > Other Settings > Screensaver Waiting Time.**
2. Select the screen saver time you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

B. Sound Mode

1. Go to **Settings > Settings > Other Settings > Sound Mode.**
2. Select the Sound Mode you want.



C. Picture Mode

1. Go to **Settings > Settings > Other Settings > Picture Mode.**
2. Select the Image Mode you want.



As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

反面

About Projector

1. Go to **Settings > Settings > About.**
2. Check the projector information.



Screen Mirroring Instructions

iOS Cost (For IOS System)

1. Go to **Homepage > Apps > iOSCast.**
2. On your iOS device open control center and tap Screen Mirroring. Find **Anko43755387-xxxx** and click to connect.
3. Please confirm the device that you want to share content already connected to the same wireless network as this device.

As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Android Cast (For Android System)

1. Go to **Homepage > Apps > Miracast.**
2. On your Android device open the setting menu.
3. Access your display settings or screen-mirroring.
4. Select your miracast receiver **Anko43755387-xxxx.**

As the software version and functions are constantly being updated, the functions and interface may differ from those shown in the current user manual. Please refer to the actual version.

Ceiling Installation

How to Mount a Projector on the Ceiling?

Mounting the projector on the ceiling is a great way to make your home theater or presentation space look professional and save valuable floor space. Follow these steps to mount your projector securely.

Tools you'll need	
	1. Mount 2. A4 Ladder or step ladder 3. Drill 4.Wrench or Allen wrench (depending on the mount)
	5.Screwdriver 6.Tape measure 7. Pencil (for marking)

Note: None of the above tools are included in the accessories, and you need to purchase the ceiling mounting bracket separately.

Step 1: Determine the position of your projector to the screen, position your projector and screen so that the throw distance is sufficient for your needs. The lens should be between the upper third and upper half of the screen for optimal picture clarity. Mark the position with a pencil.

Step 1: Ensure there are no obstructions blocking the projector's beam, and that there is a nonvisible power socket nearby.

Step 2: Attach the mount to the projector. Flip the projector upside down and attach the mounting bracket according to the instructions included with the mount.

Step 3: Attach the mount and projector to the ceiling. Ensure the mounting bracket can attach along a ceiling joist, then make marks for screw fastened drill preliminary holes. Use suitable screws to securely fasten the bracket to the ceiling. Check that it is securely fastened to the ceiling by trying to wiggle it around.

Step 4: Aligning the projector

Adjust the zoom, focus, pitch, and yaw of the projector as necessary to ensure a properly aligned image with the screen.

Step 5: Connect cables

Please plug in the power cord to both the projector and a nearby power outlet. Once the connection is confirmed, turn on the projector to test the connection.

Step 6: Final adjustments

Make any final adjustments to the image and lock down the mount to prevent movement.

By following these steps, you can create a stunning and functional projection system.

Specification

Display Technology	LCD
Light Source	LED
Resolution	1280 × 720P
Installation Type	Front / Rear / Ceiling
Aspect Ratio	16:9
Focus	Manual
Keystone	Auto vertical keystone: ±15° / Manual
Power Supply	Adapter input: 100-240V/50-60Hz Power bank output: 12V-1A-8.6V
Unit Dimension (Includes power bank)	11.2*22.2*11.3cm
Unit Net Weight (Includes power bank)	1.076KG
Video Format Supported	MP2, MP3, WAV, AAC, Vorbis,FLAC, OGG
Audio Format Supported	H264, MPEG2, MPEG4, VC1, VP8, VP9, MJPEG, AVC, FLV,MK-JPEG
Photo Format Supported	JPEG, PNG, GIF, BMP
Mounting Screws	M6, 1/4" (not included)
Input Ports	HDMI x1, USB x1
Output Ports	3.5 mm headphone
Working Temperature	0~41°C

Trouble Shooting

Remote control not working?

- Make sure the batteries are effective and installed in the correct way.

Blurry Image?

- Use manual focus to get the best image.
- The quality of the projection screen will also affect the image quality. Recommended to use it on a white wall or a better quality screen. Not suggest to use it on a thin white curtain, which will reduce the image quality.

No Sound?

- Ensure the Mute button has not been pressed.

Automatic shut-down?

- The unit will shut down if it overheats. Please ensure it is used in a ventilated environment.
- The bottom of the projector has a air inlet , please ensure it is not blocked.
- It is recommended to unplug the power supply after use to prolong the service life.

Upside down image?

- Please enter "Projection Mode" to select the corresponding mode.

Video can not be mirrored or cast?

- Due to copyright restrictions, some videos cannot be mirrored or projected.
- The cast function only supports the built-in APP application of the projector.

Black spot on the screen?

- Wipe the lens with dry and clean cloth to remove dust on the lens.

The APP cannot be used?

- It might be that the old version of the app is no longer usable after the upgrade. Please uninstall it from the App Store and then download and reinstall it.

Forgot password cannot login?

- Resetting the projector to reset the password.
Reset method: Use the " Vol- " key and " Up " key on the remote control in combination, and press them three times.

Part 2 112" Projector Screen Set

Important Safety Information

1. Place the screen on a stable, level, and non-slippery surface to prevent tipping.
2. Do not use the product near heat sources, open flames, or in windy conditions.
3. Keep children and pets away from the screen during setup and use, as the tripod may pose a tripping hazard.
4. Always secure the tripod with the provided sandbag when using outdoors.
5. Do not touch the screen surface with sharp or abrasive objects.
6. Clean only with a soft, dry cloth. Do not use chemicals, solvents, or immerse the in water.
7. Retract and fold the screen slowly to avoid finger pinching.
8. Do not exceed the maximum height marking on the telescopic pole.

List of Accessories

Part 3 Bluetooth Speaker

Battery Safety Warnings

1. Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, or to low air pressure at high altitudes.
2. Do not attempt to disassemble, modify, or replace the built-in lithium battery.
3. Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
4. Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
5. A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

Bluetooth

1. Power on the product or press the MODE button to enter Bluetooth mode.
2. Open a mobile devices (Cell phones, computers, etc.) in Bluetooth mode, search for Bluetooth devices, when it appears the item pairing name (Speaker-43755387).
3. After the device has been paired successfully for the first, it will connect automatically in 10 seconds for the next time. (Each speaker could connect to only one Bluetooth device).

Specifications

Speaker size: 4 inch x 2
Rated power: 30W
Bluetooth range: within 10m in open space.
(Walls and other structures may affect range of device)
Input: 5V ⎓1.5A
TF card: support max 32G (Not included)
Battery capacity: 3.7V, 4000mAh
Charging time: 4-5 Hours
Playing time: 1.5 Hours at 100% volume and full light
Dimensions: 190*200*395mm
Weight: 2.48Kg

Product Overview

1. MIC INPUT: 6.5mm microphone jack.
2. MIC INPUT: 3.5mm microphone jack.
3. AUDIO INPUT: 3.5MM AUX-IN input.
4. TF card slot.
5. USB-C charging port.
6. USB PORT: Support USB, can play MP3 and WAV format music.
7. POWER: Long press to turn on, long press to turn off.
8. EQ: Press to adjust the sound effect.
9. ⏮/🔉: Short press to play the previous song in BT, TF CARD, and USB modes. Press and hold to lower the volume.
10. ⏯/TWS: Tap music to play/pause. Support two identical speakers for TWS connection. After both speakers are turned on, connect one of them to the phone via Bluetooth. The one connected via Bluetooth will be the host. Double-click the TWS button, and there will be a prompt sound indicating that the two have successfully connected via TWS. Lightly touch to automatically search for radio stations in FM mode. In pairing mode, long-press this button on the secondary speaker to disconnect from the host speaker. In pairing mode, long-press this button on the main speaker to disconnect the secondary speaker from the mobile phone.
11. ⏭/🔊: Short press to play the next song in BT, TF CARD and USB modes. Press and hold to increasetne volume.
12. Short press to change the light mode, and long press to change the mode.
13. Charging indicator light.

Part 4 Adjustable Tripod

Safety Instructions

1. This product contains no user serviceable parts and do no attempt to repair the product yourself. Leave any servicing or repairs to qualified personnel only.
2. If the mounted device is over 4kg, the tripod may tip over, potentially damaging your device.
3. Always place the tripod on a flat and stable surface to prevent the mounted device from tipping over. When using outdoors, also be aware that extending the tripod's legs increases the risk of falling. Be particularly careful when using in windy conditions.
4. When changing the position of the tripod stand, please first remove the projector. Strong vibrations from such movement may cause damage to the 360 deg. rotation and the projector.
5. Do not leave the product near heat sources such as furnaces or heaters, or inside vehicles on hot dogs.
6. After use, can fold the tripod stand and put into the pouch to store.
7. This device is not a toy. Children should be supervised to ensure they do not play with the device.

Specifications

1. Tripod height adjustment: 34cm to 106cm (H)
2. Maximum load weight: 5kg
3. 360° rotation and ±180° tilt
4. Suitable for 1/4" thread hole devices, such as projector or camera

Instruction for use

1. Spread the tripod foot to the maximum in a flat place.
2. Unlock each foot lock and adjust the height.
3. Loose the pan lock and adjust the angle.
4. Use the leveler when you want to level.

Part A (connector)

2. As shown in Figure 1 and Figure 2:
Thread the screen onto the crossbar,
then use 90° connectors to connect the left and right side.

Curtain Installation Procedures

1. As shown in figure 1:Part A (connector*7, connector*6)
Use the connectors to connect all the crossbars.

2. As shown in Figure 1 and Figure 2:
Thread the screen onto the crossbar,
then use 90° connectors to connect the left and right side.

3. As shown in figure:
①Loosen the top screw of the Triangle bracket as Figure 1.
②Unfold the Triangle bracket as Figure 2 and Figure 3.
③And then tighten the Triangle bracket top screw as Figure 4.

4. The wrong way to open the triangle bracket as Figure 1, Figure 2 .

Warning: Always open the tripod legs to the maximum angle. Failure to do so may cause the stand to tip over.

√ ✕ ✕

5. As shown in Figure 1:
(1) Connect Part B (crossbar*8, connector*8) as two long crossbars.
(2) Connect the new long crossbar to the triangle bracket respectively.

6. As shown in Figure 1:
(1) Connect the left and right sides of the assembled Part A screen (90° connectors) to Part B respectively.
(2) The velcro of the curtain can fix the left and right sides to complete the installation.

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contract our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

R-NZ

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 562 995
TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.