


PACKABLE BADMINTON SET

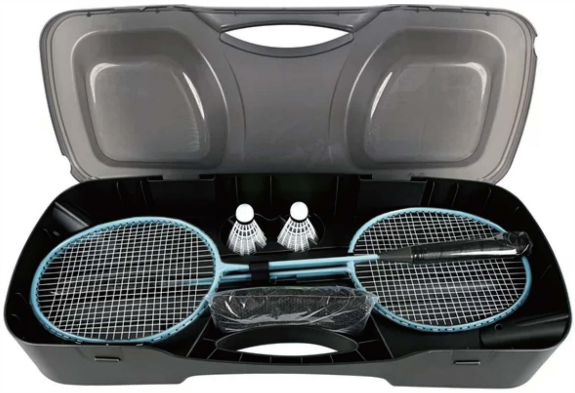



Contents

1. 2 x Racket
2. 2 x Telescopic pole
3. Locking buttons
4. 2 x Shuttlecock
5. 1 x Net
6. 1 x Carry case/stand

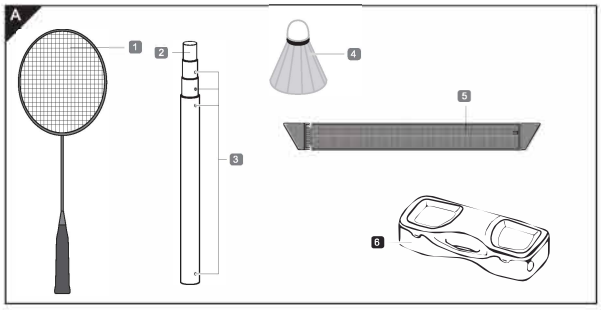

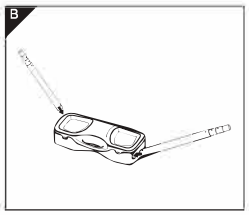

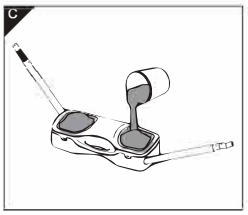

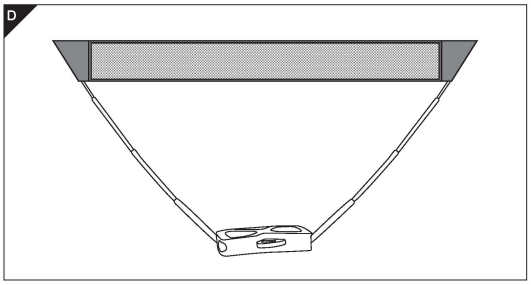

Technical data


Net measurements: 285 x 30 cm
Height of net on poles: 160 cm
Carry case/stand dimensions: 68 x 28.5 x 13.6 cm
Weight (including carry case): 2.95 kg

WARNING:

Adult assembly required. Use only on a flat, stable surface.
Do not climb, hang or swing on the net or poles. Pack away in strong wind or bad weather. Empty and dry the carry case/stand after use.
Not suitable for children under 3 years due to small parts.

SEE REVERSE SIDE FOR ASSEMBLY AND DISASSEMBLY INSTRUCTIONS.

Assembling the badminton set

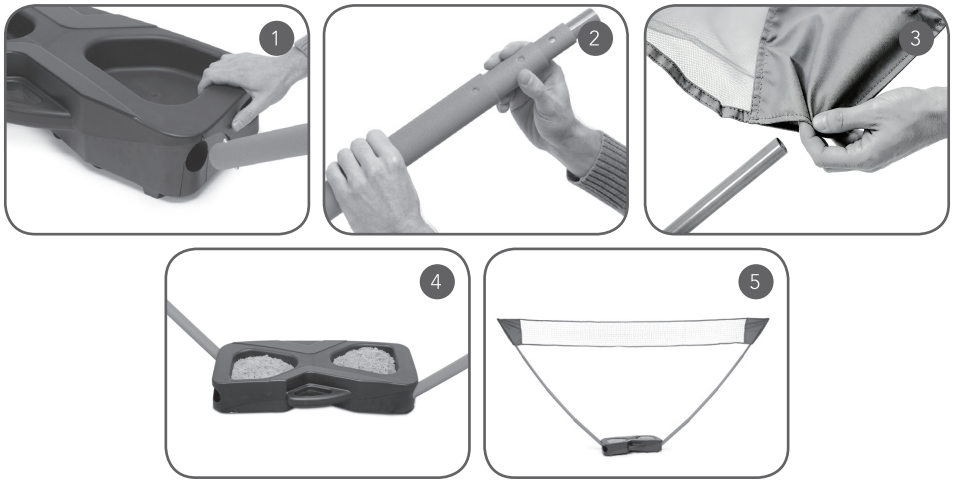

It is recommended that two people assemble the badminton set.
1. Place the carry case/stand on the ground and open the lid. Remove the accessories and close the lid.
2. Insert the telescopic poles into the sides of the carry case/stand, making sure the metal button locks fit into the grooves and then lock into place. Diagram 1.
3. Carefully extend the telescopic poles. Diagram 2.
4. Attach the net to the upper ends of the telescopic poles. Diagram 3.
5. Use appropriate means, such as sand or water, to weigh down the carry case/stand. Diagram 4.
6. The badminton set is now ready for use. Diagram 5.

Disassembling the badminton set

It is recommended that two people disassemble the badminton set.
1. Remove the sand or water from the carry case/stand❻.
2. Detach the net❺from the upper ends of the telescopic poles❷.
3. Open the carry case/stand and remove the telescopic poles by pressing the metal button locks❸and pulling the poles out.
4. Shorten the telescopic poles by pressing the metal button locks and collapsing them.
5. Stow away the accessories.

To simplify the collapsing of the telescopic poles:

1. Push the upper, thinner pole sections together about halfway.
2. Then push the two lower, thicker pole sections completely together.
3. Then push the remaining pole sections completely together.

