148 mm

210 mm


anko

8” Portable Party Speaker

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

Includes:
› 1 x 8” Portable Party Speaker
› 1 x Instruction manual
› 1 x Wired Microphone
› 1 x AUX cable
› 1 x USB-A to USB-C charging cable

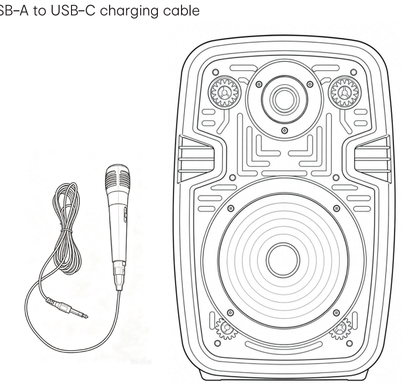

K: 43794669 | T: 73171287
Model: JLR-82674

Microphone Priority

1. Press **MIC.PRI/Previous** button for previous track in USB/TF Card/Bluetooth mode
2. Press **MIC.PRI/Previous** button for previous channel in FM mode.
3. Long press **MIC.PRI/Previous** button to enable microphone priority

ECHO knob

1. Rotate the **ECHO knob** clockwise to increase echo effect intensity.
2. Rotate it counterclockwise to reduce or eliminate echo.
3. Set the **ECHO knob** to the minimum position for no echo sound, and turn clockwise gradually to get your preferred reverb echo level.

Wired Microphone

When use wired microphone, please adjust the volume into min. to avoid howling voice, and it could be reduced and eliminated for adjust echo and microphone volume lower, please don't make microphone point to the woofer.

AUX In: Connect the 3.5mm audio cable to the speaker's AUX port and your audio device. Press the **Mode/LED** button to switch to AUX IN mode.

TF Card/USB Drive: Insert a TF card (MP3 format) or USB flash drive into the corresponding port. The speaker will auto-play music from the storage device (MAX. support for 32G TF card)

FM Mode:

1. Press **Mode/LED button** to switch to FM mode.
2. Rotate the **Power/Volume Knob** to control volume.
3. Press **TWS/Play** button to auto scan and preset available frequencies.
4. Press **MIC.PRI/Previous** button or **REC/Next** button to switch between preset frequencies.

Product Specifications:

Input rating: 5V ⎓ 1A

Bluetooth® version: 5.3

Frequency response: 20Hz–20KHz

Bass: 3.3Ω 15W

Tweeter: 5W

Playtime: Up to 2.5 hours (at 80% volume)

Charging time: Approx. 2.5hours

Battery capacity: 3.7V, 2000mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

› This product contains a rechargeable lithium-ion battery (non-replaceable).
› Do not leave the device connected to the charger for extended periods.
› Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
› Do not allow the battery to fully discharge before recharging.
› Do not disassemble, crush, puncture, or modify the battery or device.
› Handle with care and avoid strong impacts or dropping.
› Do not leave the device unattended while charging.
› Keep the device away from water, moisture, or other liquids.


Bluetooth Connection and Reconnection:

1. Turn on the speaker, it will automatically enter Bluetooth pairing mode (LED display flashes red “BLUE” rapidly).
2. On your phone/tablet/laptop, open Settings > Bluetooth and search for nearby devices, select Bluetooth name” anko43794669”.
3. A prompt tone will be heard when the connection is successful.
   Note: The speaker will auto-reconnect to the last paired device when turned on again.
4. Sound quality will depend on quality of your media file or distance of smartphone from speaker.
   Note: Distance should not be more than 30Ft (approx. 9m), or there should be no object blocking the Bluetooth signal.
5. Turn on two speakers at the same time, open one of the Bluetooth and connect with the phone.
6. Long press TWS button for two speakers, then you can play music on your phone and control two speakers.
   Note: Distance between two speakers should NOT be more than 18Ft (approx.5.5m).
   Please remember to turn off the power of the speaker before removing the portable storage device.

How to Charge:

1. Before first use, please fully charge the speaker.
   The LED display shows battery level bars.
2. Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
3. Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
4. The indicator remains red during charging and turns off once fully charged.
5. It takes approximate 2 .5 hours to fully charge the product.

Product Diagram

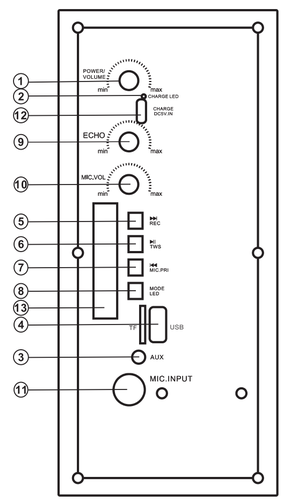

1. Power/Volume Knob
2. Charging LED indicator light
3. AUX port
4. TF/USB port
5. REC/Next button
6. TWS/Play button
7. MIC.PRI/Previous button
8. MODE/LED button
9. ECHO button
10. Microphone Volume knob
11. Microphone Port
12. USB-C Charging Port
13. LED display

Note: MIC.PRI = Microphone Priority

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

Operating Instructions:

Power on/off

1. Rotate clockwise the Power/Volume knob to turn the device ON and raise the volume.
2. Rotate counterclockwise the Power/Volume knob to turn the device OFF and lower the volume.

Note: Turn the volume to its minimum level before powering on the unit. Select the signal input source, then adjust the volume to a suitable level.

Mode switch

Press the **Mode/LED** button to switch between USB/TF Card/ AUX IN/BLUETOOTH/FM

LED Mode

Long press the **Mode/LED** button to cycle through different color lighting effects. There are 5 lighting effects available.

REC

1. Press **REC/Next** button for next track in USB/TF Card/Bluetooth mode.
2. Press **REC/Next** button for next channel in FM mode. Insert a USB drive or TF card, switch to the corresponding mode, plug in the microphone, then long-press the **REC/Next button** to start recording.
3. Long-press the **REC/Next** button again after recording to exit recording mode.

TWS

1. Press **TWS/Play** button to play or pause in USB/TF Card/Bluetooth mode
2. Long press **TWS/Play** button to auto scan and preset available frequencies in FM mode.
3. Power on both devices simultaneously and switch them to Bluetooth mode. Press and hold the **TWS/Play button** on one of the devices to enter pairing mode. A prompt tone will sound once the two devices finish pairing.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.

R-NZ

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567