148 mm

210 mm

anko

Electric Stringless Guitar
Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

Includes:
› 1 x Electric Stringless Guitar
› 1 x Instruction Manual
› 1 x USB-A to USB-C Charging Cable



K: 43794676 | T:73172154
Model: JLR-82899


Product Specifications:

Input: 5V ⎓ 1A
Bluetooth® version: 5.4
Charging time: Approx.4 hours
Playtime: Up to 4 hours (at 80% volume)
Battery: 3.7V 800mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

› **This product contains a rechargeable lithium-ion battery (non-replaceable).**
› **This product is not suitable for children under 3 years of age.**
› Do not leave the device connected to the charger for extended periods.
› Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
› Do not disassemble, crush, puncture, or modify the battery or device.
› Handle with care and avoid strong impacts or dropping.
› Do not leave the device unattended while charging.
› Do not immerse the product in water or expose it to excessive moisture.
› Use a certified 5V ⎓ 1A USB power adaptor (not included).
› The power supply (not included) used with the guitar shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
› The power supply is not a toy.
› The guitar shall only be used with a power supply for toys.
› For electric toys using rechargeable batteries, the batteries should be charged under adult supervision.
› Exhausted batteries are to be removed from the toy;
› The supply terminals are not to be short-circuited.

Product Diagram

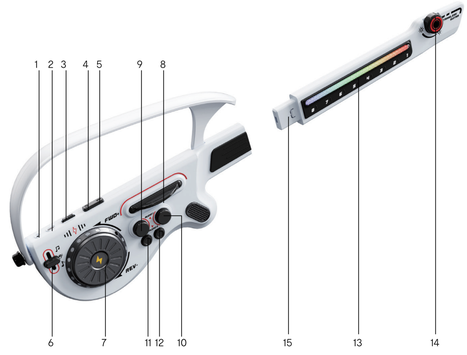

1. LED indicator
2. USB-C charging Port
3. Power Switch
4. Timbre Button
5. Music/Bluetooth Button
6. Music style Switch
7. DJing Sensor
8. Stringless plucking Control
9. Rhythm speed +/- knob
10. Volume +/- Knob
11. Rhythm Button
12. Demos Button
13. Touch Buttons 1–8
14. Light Knob
15. Guitar Neck

Operating Instructions:

Assembling the Guitar
Insert the guitar neck into the main unit until it clicks into place. Ensure the guitar neck is securely attached before use.

Power on/off
Slide the Power Switch to turn the guitar on or off.
Note: When powered on, the guitar plays a startup sound and the 8 RGB LEDs flash in sequence.

Timbre
Press the Timbre button to cycle through the following sounds: **Guitar, Electric Guitar, Acoustic Guitar, and Chord & Single Note.**

Bluetooth Connection
1. Turn on the guitar, press and hold the **Music/Bluetooth** button to enter the Bluetooth pairing mode. A prompt tone will sound.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "anko43794676" from the list of available devices.
4. A prompt tone sounds when the connection is successful.

Note: Press and hold the **Music/Bluetooth** button again to turn Bluetooth off. The guitar will automatically reconnect to the last paired device when Bluetooth is turned on again.

Music style
Slide the Music Style switch to select from 3 music styles. The selected style is used when playing music with the Music/Bluetooth button.

DJING
Move your hand in front of the DJing sensor to trigger a scratch sound effect. There are 3 scratch effects in total.

Stringless plucking
First, press and hold one of the Touch buttons (1–8). **Then** move the Stringless Plucking control up or down to play the corresponding note

Rhythm Speed +/-
When no music or melody is playing, turn the Rhythm Speed +/- knob to start the rhythm. Continue turning the knob to adjust the rhythm speed. Turn clockwise to slow down the rhythm and counterclockwise to speed it up.

Volume
Turn the Volume +/- knob left to decrease the volume or right to increase the volume.

Teaching Mode
Press the **Rhythm button** to enter Teaching Mode. One of the Touch buttons (1–8) will light up randomly. First, press and hold the illuminated Touch button. Then move the **Stringless Plucking control** up or down to play the corresponding note. The next Touch button will light up randomly after each note is played.

Demo
Press the Demos button to start or stop demo music. There are 9 demo songs in total.

Touch buttons
Touch Buttons 1–8
The 8 Touch buttons correspond to the 8 RGB LEDs. In standby mode, the LEDs are white.
Press and hold a Touch button to change the corresponding LED colour. While holding the Touch button, press the Stringless Plucking control to play the corresponding note.
Release the Touch button to stop the note and return the corresponding LED to white.

Note: The 8 RGB LEDs flash in sequence along with the music during playback.

Touch Button Functions
1. **Standby Mode:** First, press and hold one of the Touch buttons (1–8). Then move the Stringless Plucking control up or down to play the corresponding note. Press the Timbre button to change the sound.
2. **During Music or Style Playback:** Press and hold any Touch button, then move the Stringless Plucking control up or down to play the corresponding note over the music. The note will follow the selected timbre when Guitar, Electric Guitar or Acoustic Guitar is selected. When Chord & Single Note is selected, the Guitar sound will be used.
3. **Teaching Mode:** Press the Rhythm button to enter Teaching Mode. One of the Touch buttons (1–8) will light up randomly. Press and hold the illuminated Touch button, then move the Stringless Plucking control up or down to play the corresponding note.

Sleep Mode
The guitar enters sleep mode after 5 minutes of no sound or activity. Press any button to wake the guitar.
Note: The guitar will not enter sleep mode while Bluetooth is connected.

How to Charge:
1. Fully charge the guitar before first use.
2. Connect the supplied USB-A to USB-C charging cable to the USB-C Charging Port. Connect the other end to a certified 5V ⎓ 1A USB power adaptor (not included).
3. Charge the guitar at least once a month to maintain battery performance. Prolonged storage with a low battery level may reduce battery performance.
4. The LED indicator remains red while charging and turns off when charging is complete.
5. It takes approximately 4 hours to fully charge the guitar.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.

R-NZ

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567