折叠尺寸110x160mm　双面印刷风琴折
128g双面铜板纸

anko

Instruction Manual



Story Tunes Speaker
K: 43-794-690 | T: 73-175-384

Made in China

Before use please read this manual carefully.
Please retain for future use.

Safety Warning

Keep batteries away from children. If swallowed, seek medical attention immediately.
Prolonged use at high volume may damage hearing.
Choking hazard. Small parts. Not for children under 3 years.

Troubleshooting

1. PC Connection Requirement
The USB port is strictly for data transfer only. Do not use it to supply power to the device.
To establish a data connection with a computer, the device must be powered on with batteries properly installed.


2. Playback Continues After Card Removal
It is normal for the record player to continue playing if the card is removed while the toggle switch is still in the "ON" position. To completely stop playback, please make sure to turn off the toggle switch.

3. Recording Card Operations
To delete the recorded content, long-press the record button for 2 seconds. If you do not delete the previous recording, any new recording will automatically overwrite the old one. The device will only retain the latest recording.

4. Bluetooth Auto-Disconnect
The Bluetooth connection will automatically drop after a period of inactivity to save power. If there is no operation for 2 minutes after connecting, the record player will automatically exit Bluetooth mode.

Note: When using the Bluetooth function, only the volume knob can be used to adjust the volume. Other buttons are not functional in this mode.

Product Overview

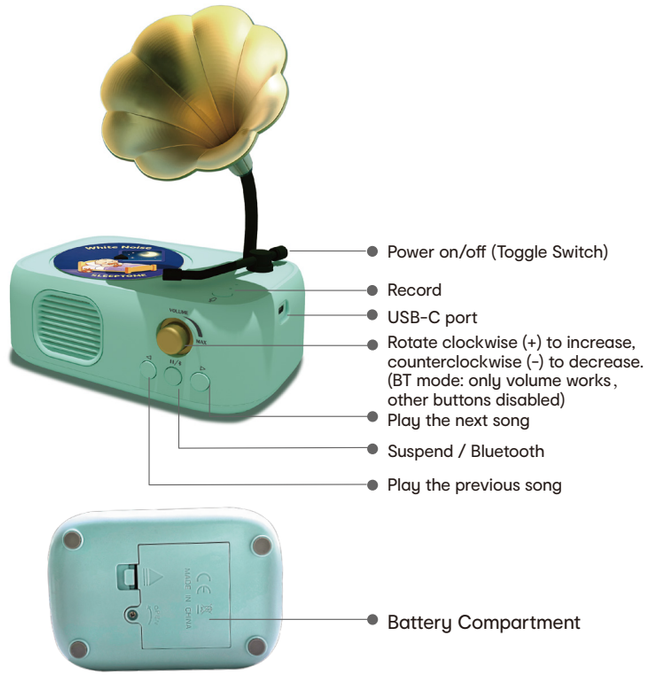

Product Specifications

Speaker: 8Ω 1W
Working time: up to 4 hours
Built-in memory capacity: approximately 400MB
Input: Requires 3 x 1.5V AA Batteries (Not included)

Packing List

Story Tunes Speaker *1PC	
USB-C Data Transfer Cable *1PC	
User Manual *1PC	
Round Cards *96PCS	48 Fairy Tales Paper Cards
	16 Music Paper Cards
	15 White Noise Paper Cards
	12 DIY Cards
	5 Recording Disc Cards

How to Use

- 1. Trumpet Flower: Insert the trumpet flower into the port of the phonograph, and rotate it to a suitable place.
  Note: the flower is a kind of decoration, which can be used or not.
- 2. Round Cards: Take out your favorite round card, put it and place on the Turntable.
- 3. Power ON/OFF: Turn the toggle switch to the direction of the turntable. When you hear a "pop", the switch is turned on. The motor drives the card to rotate one to two circles to start playing the content. Turn the switch back to the original position to turn off and stop playback.
- 4. Pause/Play /BT: During the card playing press the pause button to stop playing. Press again to resume playing.
  Pair the Story Tunes Speaker by Bluetooth. Turn on the Story Tunes Speaker, press and hold the ⏯/✱(Suspend / Bluetooth) button for 3 seconds to put the device in Bluetooth mode. Open Bluetooth setting in your phone to search for a device named "Anko43794690" to pair the Story Tunes Speaker has become a small BT speaker.
- Note: When using the Bluetooth function, only the volume knob can be used to adjust the volume. Other buttons are not functional in this mode.
- 5. DIY cards: Make sure the Story Tunes Speaker is powered on, then connect it to your computer via the USB cable. A folder window will pop up automatically (12 blank folders in total, with approximately 400MB of shared storage). Open one of the folders and note its number, then copy your favorite music, stories, poems, and other content into the folder (supported formats: MP3 and WAV). Once done, place the card with the matching number on the turntable to play the content you just saved.
- 6. Volume: Rotate the volume knob clockwise to increase the volume, and counterclockwise to decrease the volume.
- 7. ◄ Press previous button to restart playback from the beginning.
  ⏯/✱ Press pause button to pause playing. Press again to continue playing.
  ► Press next button to restart playback from the beginning.

  Note: If a DIY card contains multiple audio files, the previous/next buttons will switch between tracks instead.
- 8. Recording: Put the recording card and start recording after hear a prompt "The recording begins". Then Press "🎙" button to stop it after you finish your recording. You can play your recording in this card in anytime you like. (Note: the recording time is 5 minutes, and each time your re-record content will cover the last recording. The machine will auto enter card playing mode after 10 seconds when the recording is played.
- 9. If you do not operate for more than 1 minute, it will prompt "Would you like to hear another song".
- 10. If you do not operate for more than 2 minutes, it will prompt "Goodbye little friends".

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

R-NZ

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567