105.0 mm

148.0 mm

anko

Wall Clock with Bluetooth® Speaker

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

Includes:
› 1 x Wall Clock with Bluetooth® Speaker
› 1 x USB-A to USB-C charging cable
› 1 x Instruction Manual



K: 43794966 | T: 73173090

Model: JLR-82690

Product Specifications:

Input: 5V ⎓ 2A

Bluetooth® version: 6.0

Speaker Drivers: 2 x 4Ω/8W

Charging time: Approx. 6 hours


Play time: up to 8 hours (at 80% volume)


Battery: 3.7V, 7200mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

› This product contains a **rechargeable lithium-ion battery (non-replaceable).**
› This product is not a toy. Keep out of reach of young children.
› Do not leave the device connected to the charger for extended periods.
› Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
› Do not disassemble, crush, puncture, or modify the battery or device.
› Handle with care and avoid strong impacts or dropping.
› Do not leave the device unattended while charging.
› Do not immerse the product in water or expose it to excessive moisture.
› Use a certified 5V ⎓ 2A USB power adapter (not included).

Product Diagram



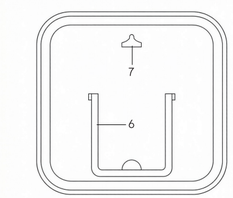

1. "–" button
2. "+" button
3. Time/Alarm Button
4. Power Button
5. USB-C Charging Port
6. Pull-out Kickstand
7. Wall Mount Hole

Note: The product can be wall-mounted or placed on a flat surface using the pull-out kickstand. Fully extend the kickstand before placing the product on a flat surface.

Operating Instructions

Power on/off

Press and hold the **Power button** to turn the device ON or OFF.

Bluetooth Connection

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "Anko43794966" from the list of available devices.
4. A prompt tone sounds when the connection is successful.

Note: The speaker automatically reconnects to the last paired device when power on again.

Music Playback

Play/Pause: press the **Power button**
Next Track: press the **+ button**
Previous Track: press the **– button**
Volume Adjustment: Press and hold the **+ or - button** to increase or decrease the volume.

RGB Light

Press the Power button twice to cycle through the 11 lighting effects.

Phone calls

1. Answer a call: Press the **Power button**.
2. Reject a call: Press and hold the **Power button**.
3. End a call: Press the **Power button** during a call.

Time Setting

1. Press and hold the Time/Alarm button to enter the settings menu.
2. The settings are displayed in the following order: Year→Month→Date→12/24-Hour format→Hour→Minute
3. The selected value flashes during setting.
4. Press the + Button to increase the value, or press and hold it to scroll quickly.
5. Press the – Button to decrease the value, or press and hold it to scroll quickly.
6. Press the Time/Alarm button to confirm each setting and move to the next item.
7. Press and hold the Time/Alarm button to save the settings and exit.

Note:
1. **The clock automatically saves the settings and exits after 10 seconds of inactivity.**
2. **When using the 12-hour format, "PM" is displayed for afternoon and evening times. "AM" is not displayed.**

Alarm Setting

1. Press the **Time/Alarm button** repeatedly to cycle through the alarm modes:
   Alarm 1 on → Alarm 2 on→ Alarm 1 & Alarm 2 on→ Alarm 1 & Alarm 2 Off
2. When Alarm 1 or Alarm 2 is displayed, Press and hold the **Time/Alarm button** to enter the settings.
3. The settings are displayed in the following order: Hour→Minute
4. The selected value and the corresponding alarm icon flash during setting.
5. Press the **+ button** to increase the value, or press and hold it to scroll quickly.
6. Press the **– button** to decrease the value, or press and hold it to scroll quickly.
7. Press the **Time/Alarm button** to confirm each setting and move to the next item.
8. Press and hold the **Time/Alarm button** to save the settings and exit.

Note:
1. **The clock automatically saves the settings and exits after 10 seconds of inactivity.**
2. **The corresponding alarm icon(s) appear on the display when the alarm is enabled.**

Alarm Operation

› When an alarm sounds, the corresponding alarm icon flashes.
› Press the Power button to stop the alarm.
› If no button is pressed, the alarm repeats every 5 minutes for up to 3 cycles.

Power Saving Mode

After 10 minutes of inactivity, the speaker automatically enters Power Saving Mode. Only the time is displayed. Press any button to wake the device.

How to Charge

1. Fully charge the speaker before first use.
2. Use a certified 5V ⎓ 2A USB power adaptor (not included). Only use the supplied USB-A to USB-C charging cable.
3. Regularly charge the battery (at least once a month) to maintain battery performance. Prolonged storage at a low battery level may reduce battery life.
4. The charging icon flashes while charging and remains on when charging is complete.
5. A full charge takes approximately 6 hours.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

R-NZ

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567