Thank you for choosing our Anko Bluetooth® Headset 42605485/42605652/42525318. We hope you enjoy using it.

Specifications:
Version: V4.2 multimedia hi-fi Bluetooth chipset
Support Profiles: Hands Free,
A2DP, AVRCP, SPP, HFP
Working Distance: 10 meters
Music Time: >3 Hours
Talk Time: >3 Hours
Standby Time: >50 Hours
Charging Voltage: 5V d.c.
Battery Capacity: 55mAh
Charge Time: 2 Hours
Cable Length: 57cm

Included:
1. Bluetooth Earbud
2. Charging cable
3. 2 Pairs silicone ear tips (Large, Small)
4. 2 Pairs silicone secure fit hooks (Large, Small)
5. Crocodile clip clasp

Overview:
1. Power / Phone / Play / Pause button
2. >>/V+ button: next song and volume up
3. <</V- button: previous song and volume down
4. Built-in microphone
5. LED indicator
6. Charging port (covered by silicone cap)

Battery Charge:
This Bluetooth headset is powered by rechargeable Li-ion battery. Please use the accessory USB cable to recharge the battery.

1. Insert USB charging cable into a suitable USB port.
2. Connect charging cable with the headset USB port.
3. Indicator LED turns Red to show battery is charging.
4. Indicator LED turns off when battery is fully charged.
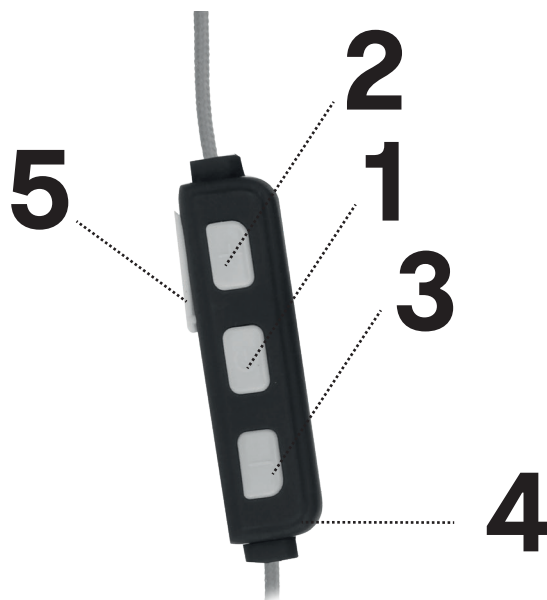5. It takes about 2 hours to fully charge the battery.

How to use this headset:
A. Power ON / OFF

Function	Operation	Indicator LED
Power On	Press and hold the power button for 3 seconds	Blue LED flashes slowly
Power Off	Press and hold the power button for 3 seconds	RED LED flashes then goes out

B. Pairing the headset with Bluetooth devices.
1. To enter pairing mode, press the power button for 3 seconds until red and blue LED blink alternatively, now the headset is in pairing mode.
2. Pairing the headset with Bluetooth mobile phone; Bluetooth name: Anko

C. Phone calls
1. Please press power button to pick up/hanging up phone calls.
2. Double press the power button to call the previous number dialed.

D. Playing music
When the headset connects with the mobile phone via Bluetooth you can enjoy music through the headset wirelessly.

Function	Operation
Pause	Short press power
Play	Short press power
Previous Song	Short press "-" button
Next Song	Short press "+" button
Volume Up	Long press "+" button – when the volume is adjusted to maximum you will hear a voice indication tone
Volume Down	Long press "-" button

WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.