anko

Instruction Manual

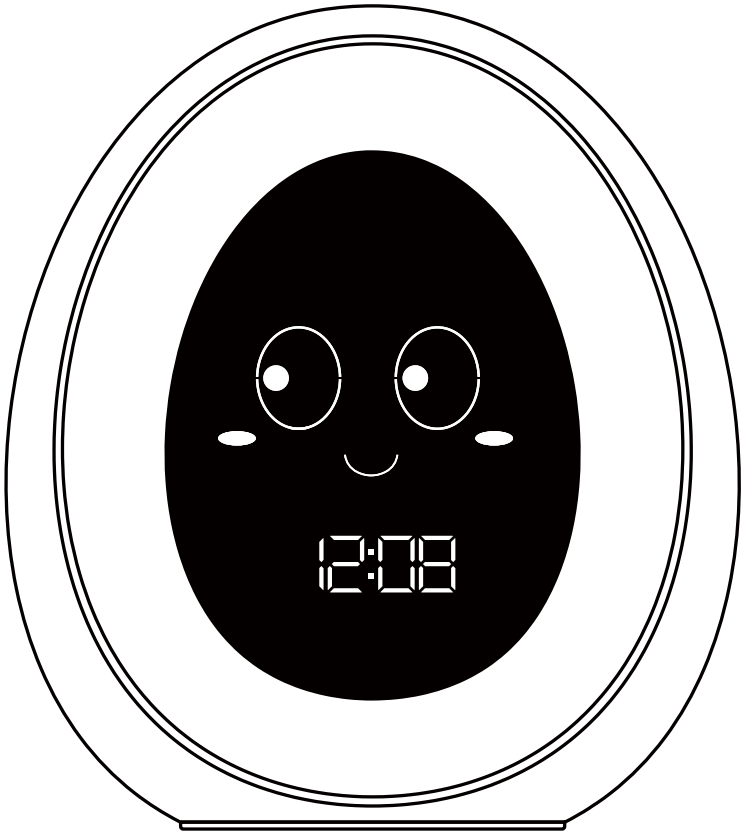

Kids Smart Alarm Clock
K: 43-620-937 | T: 71-670-904

MADE IN CHINA

Please carefully read this manual and all safety instructions before using the product. Please retain this manual for future reference.

Safety and Warnings

This product contains no user serviceable parts and do not attempt to repair the product yourself. Leave any servicing or repairs to qualified personnel only.

- Do not mechanically strike, roll or throw the product, and do not place heavy objects on the product.
- Do not open the product housing.
- Do not insert any foreign objects into the inside of the housing.
- Only use original parts and accessories and use the included charging cable to charge the product.
- Keep the rubber cover of the USB-C port closed lightly while it is not in use in order to prevent dust or water from getting into the USB-C port.
- Keep the alarm clock clean by wiping it with a slightly damp cloth.
- Keep the alarm clock out of direct sunlight and away from any direct heat source.
- Do not drop the alarm clock on a hard surface.
- Do not expose it to moisture or immerse it in water.
- Charging should only be completed by an adult.

Battery Warnings

Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit.
Do not expose the battery in high temperature environment, if battery leaks or bulges, stop continue to use.
Always charge using the designated charger. Risk of explosion if battery is replaced by an incorrect type.
Keep the battery out of reach of children.
Batteries may explode if exposed to naked fire. Never dispose batteries in a fire.
Follow your local regulations for disposing used batteries.

Specification

Product dimension: 118*105*96mm
Battery: 2000mAh
Input: 5V ⎓ 1A
Speaker power: 3W
Play files type: MP3
Support Max 32G TF card (Not included)
Including: Alarm Clock x1 + Instruction Manual x1 + USB A-C Charging Cable x1

Basic Instrution

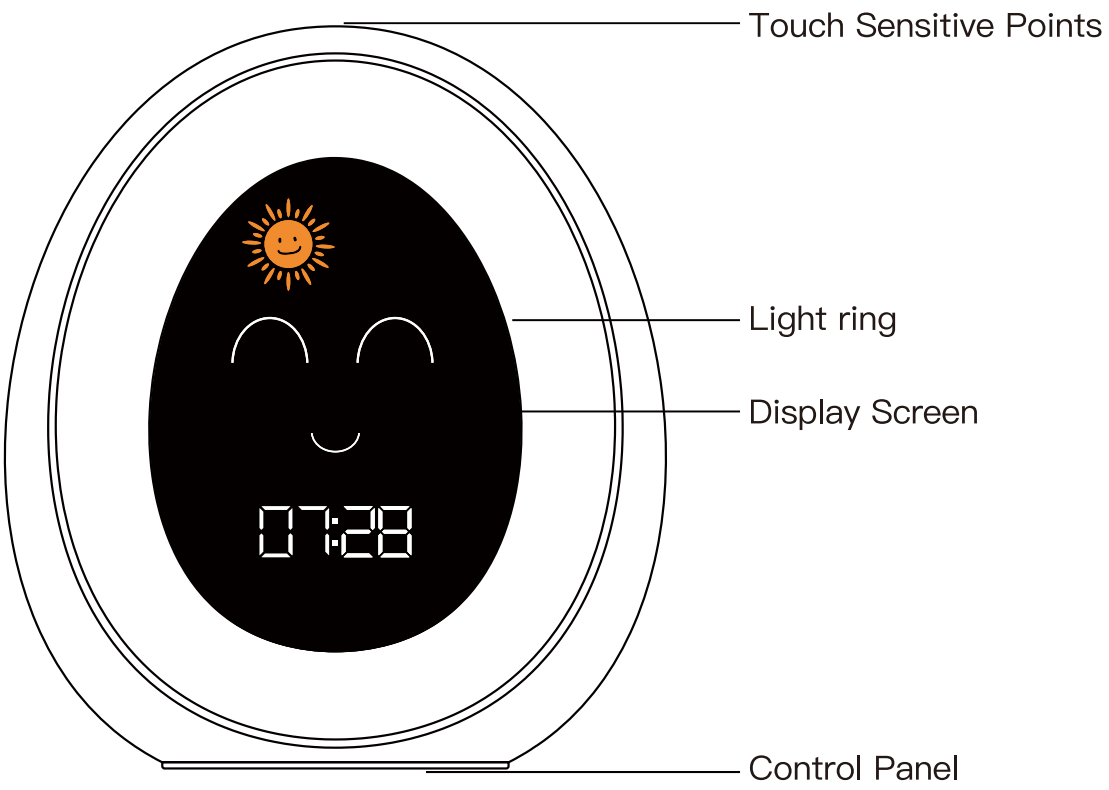

Control Panel

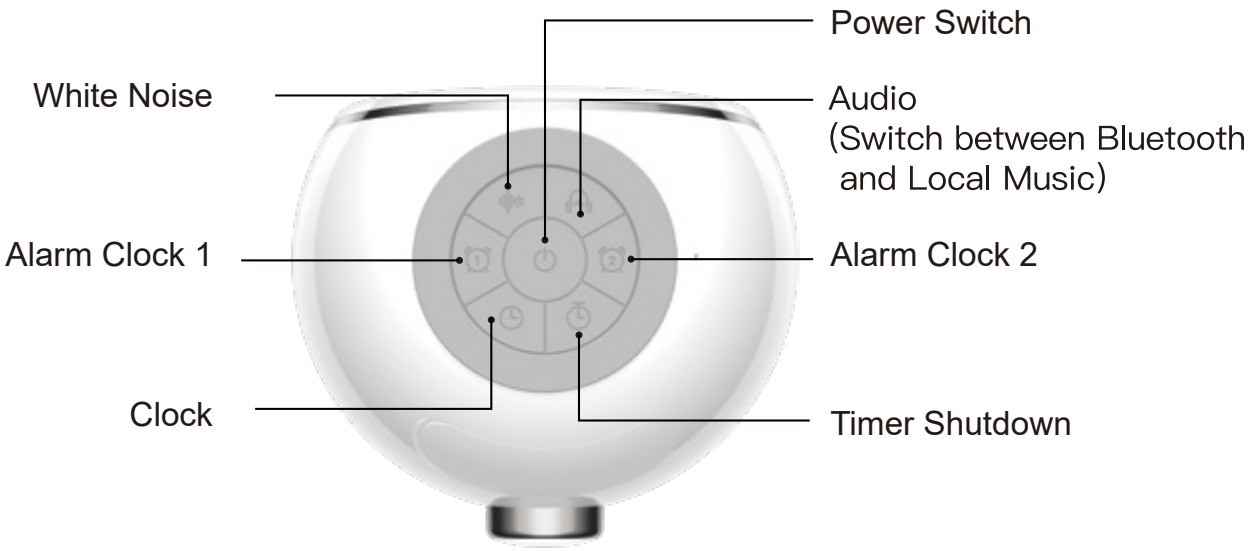

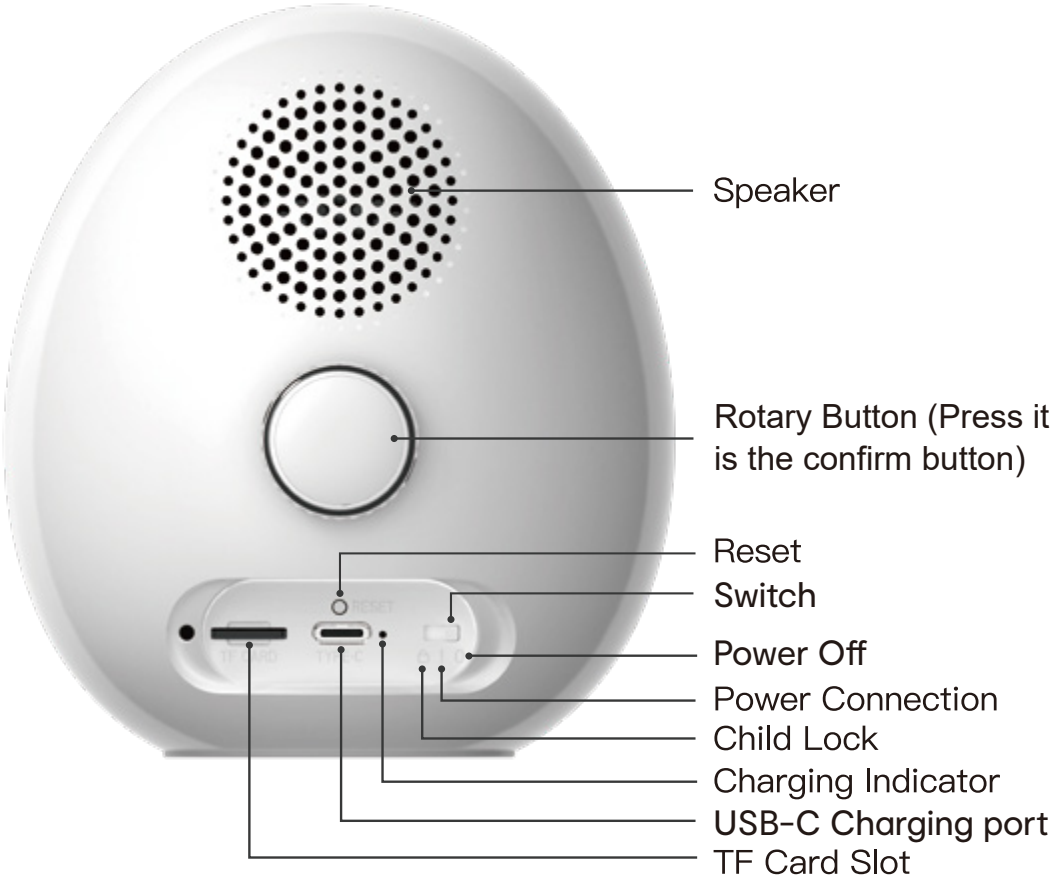

Dispay Icon

Child Lock	Alarm Clock 1	AM PM AM/PM
Clock	Alarm Clock 2	BT Bluetooth Connection
Audio (SD/Bluetooth)	Timer Shutdown	SD Card Insertion Successful
White Noise	Battery Status	

Whole Expression

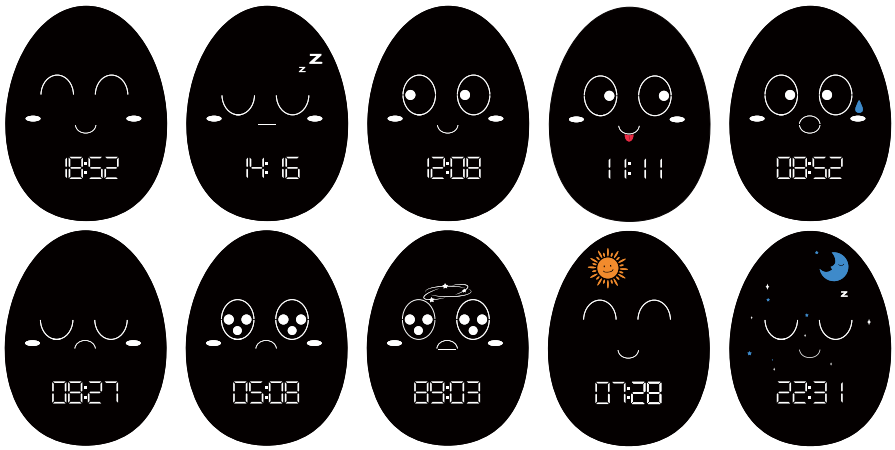

Standard Mode

Day

Night

Facial Expression Interaction

Click on the red area to switch between expressions:

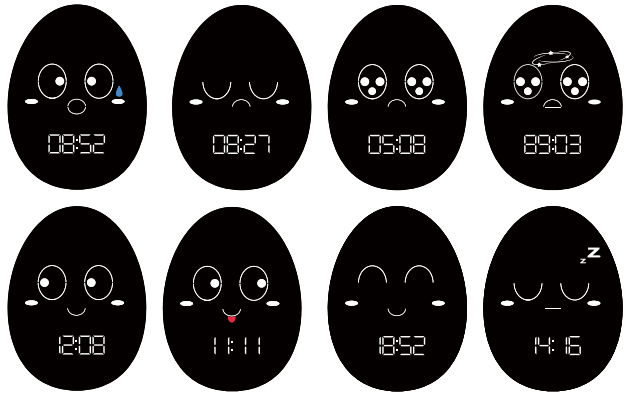

Power On

1. Slide the hard switch to the “I” position 

to connect the power.
2. Upon first boot, enter the clock mode to verify date and time.

Power Off

1. Long press the power switch to turn off.
2. Slide the hard switch to the far right to cut off power.

Child Lock

1. Slide the hard switch to the far left; the child lock icon lights up.

2. When it is turned on, click on any function, you cannot enter it, and only the currentsgtate is retained.

Clock

In clock mode, rotate the Rotary button to switch between 12-hour and 24-hour formats.

12-hour

24-hour

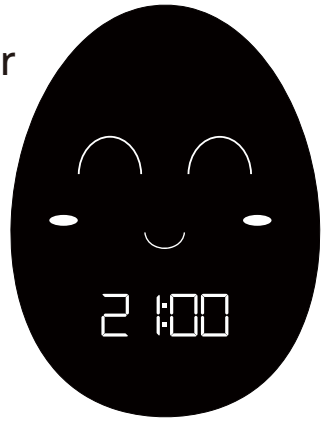

Time Adjustment

1. Long press ⏲ to enter the clock adjustment mode, the Screen “hour” flashes, rotate the Rotary button to adjust the hour, larger clockwise and smaller anticlockwise;
2. Short press the Rotary button, confirm hour setting then Screen “Minutes” flashes, rotate the Rotary button to adjust the minutes, larger clockwise and smaller anticlockwise.
3. Short press Rotary button to confirm.

12/24 Hour System

1. When adjusting “hours” becomes larger clockwise and smaller anticlockwise, press the Rotary button (Press it is the confrm button) to confirm.
2. Switch to “minutes” clockwise becomes larger, counter-clockwise becomes smaller, press the Rotary button (Press it is the confirm button) to confirm can be saved directly.

Audio

1. Press the button or press the Rotary button twice to enter Bluetooth mode.
2. Press the button again to enter SD mode.
3. When the music icon lights up, rotate the Rotary button to adjust the volume, Clockwise plus or Counter clockwise minus, U01-U16 on the screen shows the number change, the maximum value is 16.
4. Long press the Rotary button, the flashes, rotate the Rotary Button can adjust the previous or next song. Long press the Rotary Button again to switch to volume adjustment mode.

Bluetooth Mode

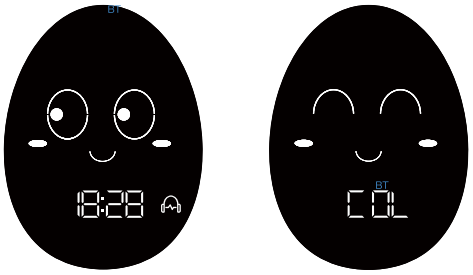

SD Card Mode

Bluetooth Mode

1. BT Blinking indicates waiting for a connection;
2. On your mobile phone, go to Setting>Bluetooth> click “Anko43620937” to connect.
3. BT Steady on indicates that the Bluetooth is connected;
4. When connected to Bluetooth, the phone accesses and exits, showing “call”;
5. The time will be automatically calibrated after connecting Bluetooth.

SD Mode

1. Insert card:“SD” icon lights up and music plays automatically.
2. No card:
   - “SD” icon remains off, the function is not enabledand exit directly;
   - If no operation is performed, it is automatically turned off.
3. If the SD icon is steady on, it indicates playback.

White Noise

1. Press the button to enter directly.
2. Long press the Rotary Button to switch between the previous and next songs, then long press again to switch to volume adjustment mode.
3. When the icon lights up, rotate the Rotary button to adjust the volume. U01-U16 on the screen shows the number change, and the maximum value is 16.

Lighting

Standard Mode

(Press the touch-sensitive points on the top to adjust the light)

1. Short-press the touch points once: warm white light.
2. Short-press the touch points twice: colourful lights ring. Long-press the touch points twice: circle through a single colour light (white, green, dark blue, orange, purple, yellow, light blue). If you release the touch points, the light will stay at the current colour.
3. Short-press the touch points three times: turn off the lights.
4. When the light is on, it will automatically turn off when the battery level is lower than 20% and will not turn on in any state.

Alarm 1/2

1. Press Alarm 1 button ① to enter Alarm 1, then screen "Minutes" flashes to adjust.
2. Press Alarm 2 button ② to enter Alarm 2.
3. Long press Alarm 1/2 button to set the alarm.

12/24 Hour System

1. Screen “hour” flashes to adjust the hour, larger clockwise and smaller anticlockwise, press Alarm 1 ① / Rotary button once to confirm;
2. Switch to “Minutes”, turn clockwise larger, counterclockwises maller, press Alarm 1 ① / Rotary button once to confrm, jump to ON/OFF interface;
3. Jump to ON/OFF interface, rotate Rotary button to switch ON/OFF status, press Alarm 1 ① / Rotary buttonto confrm and then jump to volume setting;
4. Switch to alarm tone volume page and U10 is displayed, turn the Rotary button to increase the alarm tone clockwise and decrease the alarm tone counterclockwise. Press the Alarm 1 ① to confirm the volume. (Same for Alarm clock 2)

Alarm Clock

After Setting the Alarm Clock

1. The white light will be on 1 minute in advance;
2. Keep the white light on and press any button to turn off the alarm;
3. Touch point on the top or leave it for 14 minutes to enter snooze mode. Snooze mode runs for 9 minutes. If the alarm clock is not turned off, the lights will continue to turn on. After the alarm is turned off, the light goes off and the alarm's expression changes.

Timer shutdown

1. In any mode state, short press to enter directly.
2. Press again and select the timing time. Each time you press, the time increases in sequence. The time is 15, 30, 45, 60, 90, and 120 minutes in sequence OFF.
3. Hold for 3 seconds, it will automatically exit, save the current Settings.
4. Long press to turn off the countdown.
5. The alarm will automatically turn off when the timer ends, touch the top to activate the alarm.

Shortcuts(back side rotation button)

In any interface, short press the Rotary button to enter White Noise, Bluetooth mode, SD card mode, and clock mode in sequence.

Screen Off and Sleep Mode

1. In any state, the screen will enter Sleep Mode after 5 minutes of inactivity.
2. While the screen is off or in Sleep Mode, pressing any button will activate the alarm, including the Rotary button.

Battery/Charge Reminder

1. When the battery is below 20%, the battery icon will continuously flash and sound to remind you to charge.
2. During charging, the battery icon flashes, and the charging indicator light turns red.
3. When fully charged, the battery icon remains solid, and the charging indicator light turns green.
4. Battery icon will turn off automatically when charger is unplugged.

Low Battery

1. If the battery is too low to keep the camera running normally, you need to reset the time and date after charging.
2. When the battery is low, some functions cannot be used.
3. It is recommended to charge the battery in time when the battery power is too low to ensure a longer service life of the battery.

Note:

It will take approximately 3 hours to fully charge the battery. The actual time depends on power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0^0C–40^0C (32'F–104'F). If your alarm clock needs longer than 3 hours to fully charge, try charging from a different USB power source.

Battery Life

The time of the battery between charges depends on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.

Note:

Please do not use fast charge, charge at least once a week.

12 Month Warranty
Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

R-NZ

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, inc., and any use of such marks by KMART Australia is under license.