anko

3 IN 1 PLAY TENT

Instruction Manual

3+ years

IMPORTANT:
KEEP FOR FUTURE REFERENCE

PLEASE READ ALL INSTRUCTIONS BEFORE SETUP OR FOLDAWAY

Parts List:

Fiber Pipe x 4 (when fully assembled)

Storage bag x 1

Crawl tunnel x 1

Carry bag x 1

Tent x 1

Hexagon Ball Pit with Basketball Hoop x 1

Assembly Instructions:

1. UNFOLD THE TENTS

Step 1. Remove all parts from the carry bag.
Step 2. Unbuckle the straps and gently shake each piece to let the spring steel frame pop open automatically.
Step 3. The crawl tunnel and ball pit will take shape within seconds.

Tent
Step 1. Connect each of the short poles together to form four long poles (Fig 1).
Step 2. Unfold the tent to form a round shape.
Step 3. Insert the black end of the poles into the pockets located at the tip of the tent (Fig 2) and insert the other white end of the poles into the pockets located at the bottom of tent (Fig 3), then tie the poles with the straps on the tent.

2. CONNECT THE PIECES
- Align the openings of the tent, tunnel, and ball pit.
- Secure the connections through the belts (Fig 4,5).
- Ensure all pieces are tightly connected before use.

3. PLACE FOR USE
- Place the assembled playset on a flat, even surface indoors.

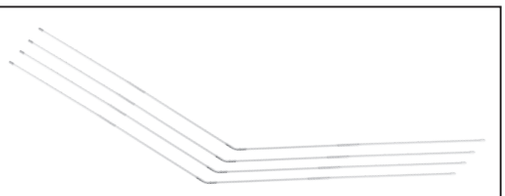
Fig 1

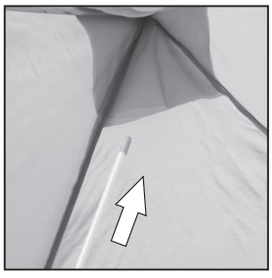
Fig 2

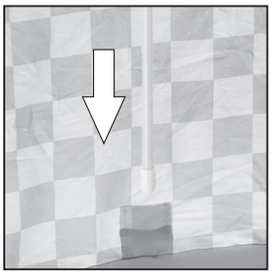
Fig 3

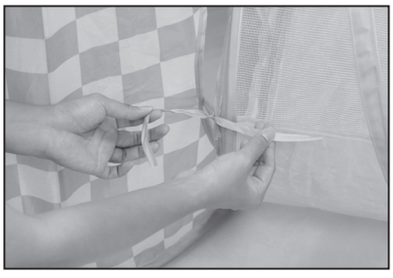
Fig 4

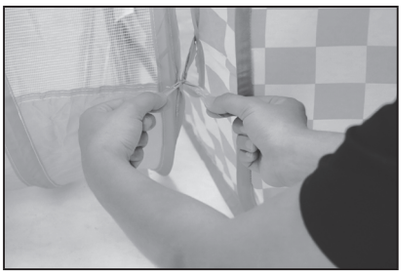
Fig 5

Folding Instructions:

Take all toys or items out of the tent and make sure the tent is clean and dry before you fold the tent.
Separate the ball pit, play tent, and crawl tunnel from each other.

1. Tent
Remove all the poles first, and fold the tent to form a round shape (Fig.1), then fold it from C,D point (Fig.2) Attach A point on the floor and fix it with foot (Fig.3), twist B point clockwise and let D point to move inside to form two smaller loops (Fig.4), overlap C point on B point, you can see a round folded shape (Fig.5). Wrap the folded tent with elastic belt to keep it compressed(Fig.6).

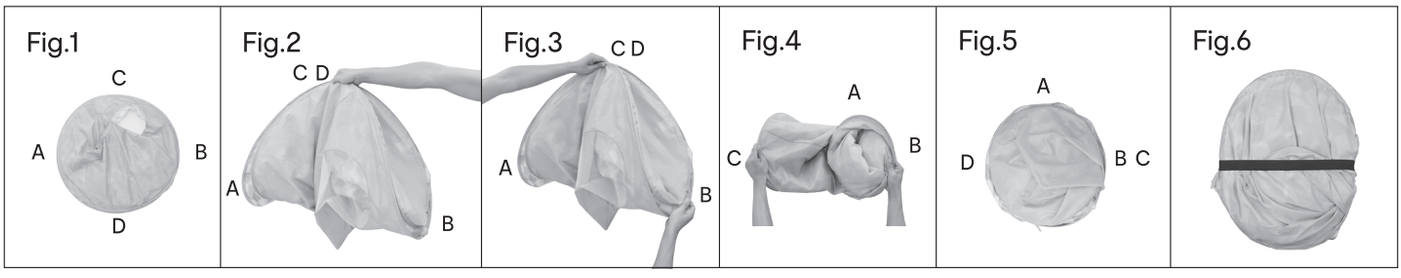

2. Crawl Tunnel
Compress the crawl tunnel down, then use the belts on the tunnel to tie it up.

3. Hexagon Ball Pit with Basketball Hoop

Step 1. Push the sides inward gently from the top. The tent will form a flat, square shape (Fig.7).
Step 2. Hold both ends of the ball pit with your hands.
Hold A Point of the ball pit with your left hand, and B Point with your right hand (Fig.8).
Twist the hand holding A Point down, and the hand holding B Point up. The ball pit will form a figure-8 shape (Fig.9).
Step 3. Bring the two loops of the figure 8 together, one on top of the other. The tent will now form a circle.
Finally, fasten it with the strap on the ball pocket. Now it is completely folded (Fig.10).

Fig.7

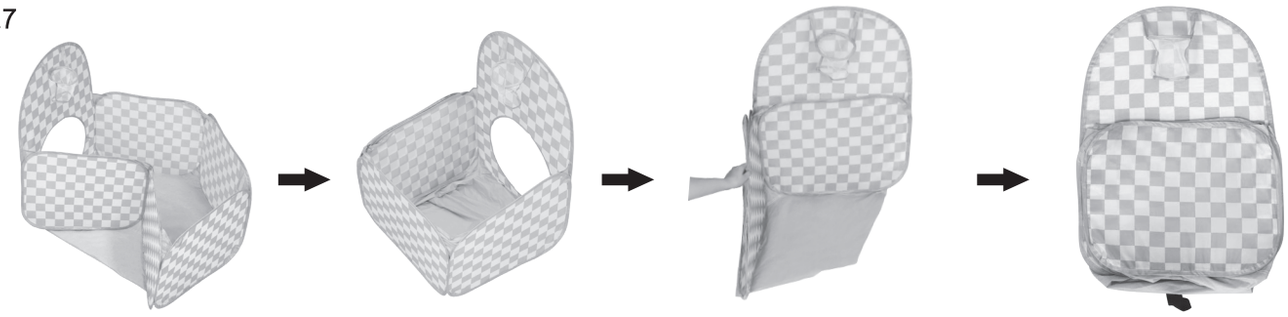

Fig.8

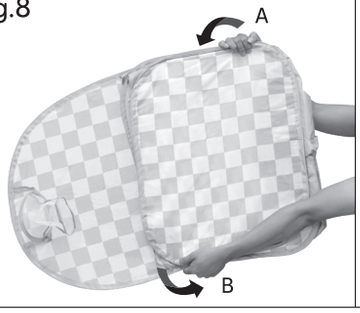

Fig.9

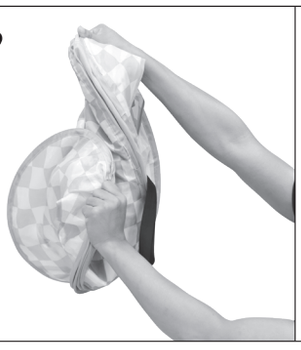

Fig.10

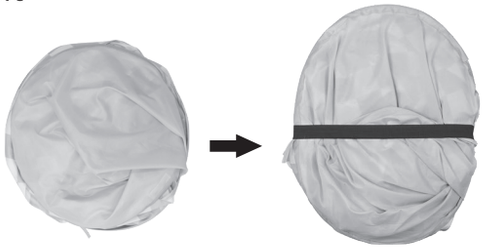

SAFETY WARNINGS
- ADULT SUPERVISION REQUIRED AT ALL TIMES.
- Keep away from open flames, heat sources, and sharp objects.
- Do not use if any part of the frame is bent, broken, or damaged.
- Not intended for children under 3 years old due to small parts risk.
- Do not allow children to climb or stand on the tent fabric.

CLEANING & CARE
- Wipe the fabric with a damp cloth and mild soap. Air dry completely before storing.
- Do not machine wash, bleach, or tumble dry.
- To fold, twist the steel frames into a figure-8 shape and compress into the carry bag.
- Store in a cool, dry place away from direct sunlight.

⚠ **WARNING: CHOKING HAZARD**
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS PRODUCT HAS AN INTERNAL SPRING FRAME THAT WILL POP OPEN WITH SOME FORCE. NEVER LET SMALL CHILDREN UNFOLD OR FOLD THIS PRODUCT. CAUTION MUST BE USED IN THE HANDLING OF THIS PRODUOCT.

WARNING: KEEP AWAY FROM FIRE AND ALL HEAT SOURCES. NEVER ALLOW A NAKED FLAME NEAR THIS PRODUCT. IT IS NOT FIREPROOF THE FABRIC WILL BURN IF IT IS LEFT IN CONTINUOUS CONTACT WITH FLAME AND HEAT SOURCES. PLEASE THOROUGHLY READ INSTRUCTION MANUAL BEFORE USING THIS PRODUCT.

CARE INSTRUCTIONS:
WIPE CLEAN WITH A DAMP CLOTH.
FOR INDOOR USE ONLY.

ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY FROM THE IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

43-713-523