说明书材质：128g铜版纸
折叠尺寸70x100mm 双面印刷风琴折

anko

# Instruction Manual

## Mini Tower Speaker

**K: 43-721-153 | T: 72-466-612**

MADE IN CHINA

Before use please read this manual carefully.
Please retain for future use.

## 1. Safety Instructions

Always take the following precautions before using the "Mini Tower Speaker", herein after referred to as the "device ".

REMARK!
Follow the instructions in the user manua!

WARNING!
Warning for potential risk of death and/or serious irreversible injury!

WARNING! Risk of electric shock
Warning for potential risk of death and/or serious irreversible injury!

WARNING! Risk of suffocation
Warning for potential danger to life and/or serious irreversible injury!

WARNING! Possible hearing damage
To prevent possible hearing damage, do not listen at high volumes for long periods.

WARNING! Risk ofinjury or irritation to the eyes.
Do not stare at the device's illuminated LEDs for an extended period of time. The LEDs can cause injury or irritation to the eyes. Do not look directly at the light source using optical instruments that focus on light rays.

Indicates that a charging device is not included.

## 2. Battery Safety Warnings:

- Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
- Do not attempt to disassemble, modify, or replace the built-in lithium battery.
- Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
- Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
- A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

## 3. Product Specifications

Wireless range: 10m (This may be reduced due to presence of obstacles between connected devices)
Speaker: DIA.50mm, 4Ω 1*3W
Charging time: 4-5 Hours
Playing time: 4-5 hours (80% volume)
Dimensions: diameter 75mm, height 159mm

## 4. Package Contents

Mini tower Bluetooth® speaker x1
USB-A to Mic charging cable x1
Instruction manual x1

## 5. Charging the Battery

The speaker is fitted with a 800 mAh rechargeable battery (non-removable). It is recommended that the battery is fully charged before first use. Connect the micro USB endof the USB charging cable into the 5V charging port of the speaker. Connect the other endto a compatible USB port. Whilst charging, the LED indicator light will illuminate. Once fully charged the LED indicator light will turn off. Carefully disconnect both ends of the USBcable and store it carefully for future use.

## 6. Product Overview

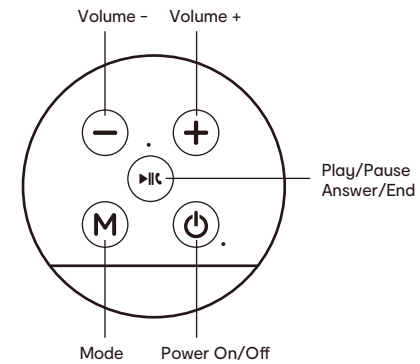


## 7. Wireless pairing

When the speaker has been tured on, the LED indicator light will flash, signaling that the speaker isready to be paired with a wireless compatible device.To pair with other wireless devices, open your mobile phone's wireless function (or other wireless device you are using) and search for the speaker (wireless name Anko43721153), then select to connect and pair with the speaker. Once a successful connection has been made, the LED indicator will flash slowly to signal that the speaker is now paired with the wireless compatible device. To unpair or remove a wireless compatible device from the speaker, turn off the wireless function on the compatible device. The speaker can now be paired with a new compatibledevice.

Note: Once connected, sound can be controlled using either the speaker control functions or the relevant controls on the wireless compatible device.

## 8. Making phone calls via a wireless compatible device

Once the wireless compatible device has been paired with the speaker, phone calls can bemade as follows: Using the wireless compatible device, dial the number to be called and select the Wirelesshands free option. The speaker and its built-in microphone will now act as a hands-freedevice. To connect or disconnect a call using the speaker, press the Play/Pause button toaccept or end a call.The volume of the phone call can be controlled using either the speaker volume control orthe wireless compatible device.

## 9. Micro SD card /USB mode

To use micro SD card mode, insert a micro SD card (not included) into the micro SD cardslot. The speaker will automatically change to micro SD card mode.To use USB mode, insert a compatible USB drive into the USB port. The speaker willautomatically change to USB mode.

Note: No USB drive should be inserted while using micro SD card mode or vice versa asthis could interfere with playback. The speaker will only recognise audio files. If other filesare present on the micro SD card or USB drive, this may prevent the speaker from playing.

## 10. How to use

Power On: Press and hold the "On/Off" button
Power Off: Press and hold the "On/Off" button
Answer a call: Press the "Play" button
End a call: Press and hold the "Play" button
Reject a call: Press and hold the "Play" button
Pause music: Press the "Play" button
Play music: After pairing, press the "Play" button
Re-play the previous song: Press the (-) button
Play the next song: Press the (+) button
Pair with headphones: Headphones cannot be linked

## 11. Troubleshooting

> The speaker will not turn on:
Ensure the speaker is fully charged.

> My mobile is unable to find the wireless speaker:
Check the speaker is in pairing mode. Follow all instructions in the wireless pairing section again. Ensure there are no obstructions or other wireless devices nearby in discovery mode.

> After successful pairing, the speaker disconnects:
Check the battery level and recharge ifow. Ensure the speaker is within 10m of your mobile device and free from obstructions.The connection may be affected by obstructions such as walls or other electronic devices. Try moving closer to the device you are connected to.

> There is no sound or the sound is low:
Ensure the mobile device is connected andincrease the volume on your mobile device or on the speaker. Reconnect your device to the speaker if needed.

> The speaker will not charge:
Check if the charging cable is functional. Ensure there is no damage to it. Ensure the charging cable is fully seated in the USB charger port.

## 12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

R-NZ

**MADE IN CHINA**

**CUSTOMER SERVICE:**
**KMART AU:** 1800 124 125
**KMART NZ:** 0800 945 995
**TARGET AU:** 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.