说明书材质：128g铜版纸
折叠尺寸70x100mm 双面印刷风琴折

anko

Instruction Manual

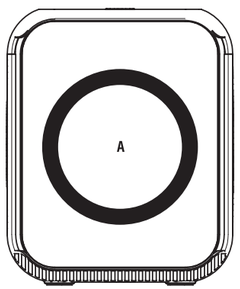

Party Speaker with Microphone
K: 43-721-276 | T: 72-466-636

MADE IN CHINA

Please read this manual carefully before use.
Please retain for future use.

1. Safety instruction

Always take the following precautions before using the "20W party speaker with microphone", herein after referred to as the "device ".

REMARK!
Follow the instructions in the user manual!

WARNING!
Warning for potential risk of death and/or serious irreversible injury!

WARNING! Risk of electric shock
Warning for potential risk of death and/or serious irreversible injury!

WARNING! Risk of suffocation
Warning for potential danger to life and/or serious irreversible injury!

WARNING! Possible hearing damage
To prevent possible hearing damage, do not listen at high volumes for long periods.

WARNING! Risk of injury or irritation to the eyes.
Do not stare at the device's illuminated LEDs for an extended period of time. The LEDs can cause injury or irritation to the eyes. Do not look directly at the light source using optical instruments that focus on light rays.

Indicates that a charging device is not included.

2. Battery Safety Warnings

- Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
- Do not attempt to disassemble, modify, or replace the built-in lithium battery.
- Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
- Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
- A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

3. Product overview

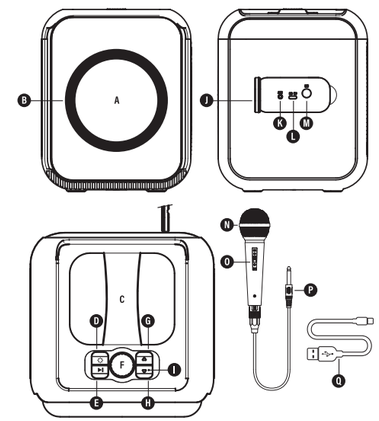

4. Product specifications

Speaker output: 20W
Charging time: 4 Hours
Rated Input: 5V ⎓ 1A
Working time: 3 Hours in 80% volume with LED (5 Modes)
Dimensions: 18cm(W) X 18cm(D) X 21.8cm(H)
Built-in rechargeable battery: 3.7V, 2600mAh
Main functions: Bluetooth®, AUX, MIC

5. Package contents

20W party speaker x1
Microphone x1
USB-C charging cable x1
Instruction manual x1

6. Location of control buttons

A	Speaker	J	Port cover
B	LED ring	K	Aux in port
C	Handle	L	Charging port
D	☼ Button	M	Microphone input port
E	⏯ Button	N	Microphone
F	Volume knob	O	Microphone ON/OFF switch
G	▲ Button	P	6.3 mm jack plug
H	▼ Button	Q	Charging cable
I	LED indicator		

7. Bluetooth connection

When turning on the device, the LED indicator (I) of the device flashes blue and a voice will sound, indicating it is in pairing mode.
Keep the device and your Bluetooth® enabled appliance within 1 metre (3 ft) of each other during the pairing process.
Make your mobile phone, tablet or other Bluetooth® enabled appliance search for compatible Bluetooth® devices. (Make sure the Bluetooth® function is turned on).
When your Bluetooth® enabled appliance finds the device, select "Anko43721276" from the list of found devices.
A voice will sound to indicate successful pairing.
The LED indicator (I) of the device will stop flashing and will light up blue continuously.
If a paired Bluetooth® enabled appliance is in range, the device will connect automatically.

Note:
If you would like to connect the device to another Bluetooth® enabled appliance, you must first disconnect it from the active paired Bluetooth® enabled appliance. Go to your Bluetooth® enabled appliances settings, select "Anko43721276" and select "disconnect" or "unpair". You can also simply switch off the Bluetooth® function. When the device has been unpaired and/or does not have an active paired Bluetooth® connection, repeat the pairing process with the (new) Bluetooth® enabled appliance you want to connect to the device.

8. Using the device

Open the packaging carefully before taking out the device. Remove the device from the box. Remove any stickers, protective film or plastic from the device. Make sure the device is completed and undamaged. If any components are missing or damaged, contact the vendor and do not use the product. Retain the packaging or recycle in accordance with local regulations.

Before use, it is advised to clean the device thoroughly with a soft dry cloth.

9. Powering the device on/off

To power on the device, press the ⏯ button (E) for + 3 seconds. The LED indicator (I) of the device will flash blue and a voice will sound indicating the device is powered on.
To power off the device, press the ⏯ button (E) for ± 3 seconds and a voice will sound, indicating the device is powered off.

Note:
When turning on the device, by default it will be in Bluetooth® mode.

10. Charging the device

Open the port cover (J) by carefully pulling the tab.
Carefully plug the USB-C connector of the charging cable into the USB-C charging port (L).
Plug the USB connector of the charging cable into the USB port of your USB charger.
The charging LED indicator (I) light up red when charging.
Once charging is completed, the charging LED indicator (I) will no longer light up and the device automatically stops charging.
Unplug the charging cable from the device, which is now ready for use, and close the port cover (J).
If the battery level is low, a voice will sound, indicating the device needs to be charged.

Note:
1. Do not use the device in temperatures that fall below 0°C or exceed 45 °C (± 3°C). The device is equipped with a safety temperature control chip and therefore does not work exceeding these temperature ranges.
2. When the device has low battery, the output power will be reduced by 30% out of battery safety and life time.

10. Controls

Music
If you want to play and/or pause music from your connected appliance, open your media player and press play/pause.
The LED indicator (D) of the device will slowly flash blue, when playing music/sound.
> To play/pause music, press the ⏯ button (E)once to increase the volume, turn the volume knob (F) clockwise.
> To decrease the volume, turn the volume knob (F) counter -clockwise.
> To go to the next track, press the ▲ button (G) once.
> To go to the previous track, press the ▼ button (H) once.

Calling
> To accept an incoming call, press ⏯ button (E) once.
During an incoming call,a voice will sound.
> To end an ongoing call, press ⏯ button (E) once.
> To decline an incoming call, press and hold the ⏯ button (E) during an incoming call. A voice will sound, indicating the call is declined.

Note:
The device does support the functions of cellular calls. It does not automatically support calling/video applications.

11. Aux in port

> Open the port cover (J) by carefully pulling the tab.

> Carefully connect the plug your AUX cable into the AUX in port (K) of the device. When connected, the device switches automatically to the AUX mode, indicated with a voice.
> Connect the other plug of your AUX cable into the AUX port of your smartphone or computer.
> When the AUX cable has been successfully connected, the LED indicator (I) of the device will flash blue slowly.

Control music in AUX mode

If you want to play or pause music from your connected appliance, open your media player and press play/pause.
The selected music can only be controlled by the connected appliance.

Control volume settings

> Your connected appliance needs to be at maximum volume for maximum control settings.

> To increase the volume, turn the volume knob (F) clockwise.

> To decrease the volume, turn the volume knob (F) counter-clockwise.

Note: If the AUX cable is plugged in during the powering of the device, it is automatically in AUX mode.

Note: When pausing the music on the device, the music will not stop in your media player.

Note: When there is an incoming call, you cannot accept or decline an incoming call, or end an on going call through the device. It can only be controlled through your connected appliance.

Note: If you were listening to music, the music will stop playing when receiving an incoming call.
Note: When you end the call, the music will resume automatically.
Note: When the AUX mode is enabled, the speaker of your connected appliance is muted.

Installing the microphone
> To install the microphone (N), plug the 6.3 mm jack (P)of the microphone in one of the microphone input port (M).
> To enable the microphone, switch the Microphone ON/OFF switch (O) to the ON position. To unplug the microphone (N), gently pull the connector of the 6.3 mm jack (P) out of the microphone input port (M).

RGB LED modes
The device is equipped with 5 different LED modes.
> To change the LED modes, press the ☼ button (D).
> To deactivate the LED ring, press the ☼ button (D) for 2 seconds.
> To activate the LED again, press the ☼ button (D) once.

12. Troubleshooting

My Bluetooth® enabled appliance is not able to pair with the device.
> Make sure the device is turned on before beginning the Bluetooth® pairing process.
> Keep the device and your Bluetooth® enabled appliance within 1 M (3 ft) of each other during the pairing process.

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

R-NZ

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.