6+ YEARS

PHANTOMZ RC STUNT CAR

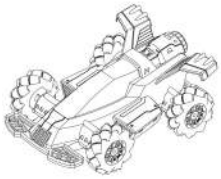

WATCH FEATURE VIDEO ON CODE

INSTALLING BATTERIES IN THE TRANSMITTER:

1 - Open the battery compartment.
2 - Insert 2 x 1.5V AA batteries with correct + and - polarities.
3 - Close the cover.

Figure 1

REQUIRED 2 X 1.5V AA BATTERIES NOT INCLUDED

INSTALLING THE VEHICLE BATTERY:

1 - Loosen the screw to open the battery cover.
2 - As shown in Figure 2, remove the battery cover, connect the rechargeable battery pack with connector and close the battery cover.

Figure 2



HOW TO CHARGE:

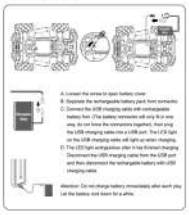

1200mAh rechargeable lithium battery pack + USB charging cable (included).

In contrast the USB charging cable will make some noise that means the USB charging cable has no USB port. The CD light on the USB charging cable will light up when charging. If "the CD light on the charging cable after it has finished charging. Disconnect the USB charging cable and then disconnect the battery.

Attention: Do not charge battery immediately after each play. Let the battery cool down for a while.

A. Loosen the screw to open battery cover
B. Replace the rechargeable battery pack from connector
C. Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together). Then plug the USB charging cable into a USB port. The LED light on the USB charging cable will light up when charging.
D. The LED light extinguishes after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.

Attention: Do not charge battery immediately after each play. Let the battery cool down for a while.

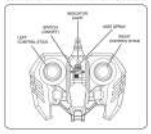

HOW TO USE:

1. Turn on the vehicle first and then turn on the transmitter.
2. Push the left control stick up, until then push it down to pair the vehicle. If the indicator light on the transmitter stays flashing, the pairing is successful. If pairing is not successful, please repeat step 2.
3. If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
4. Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.

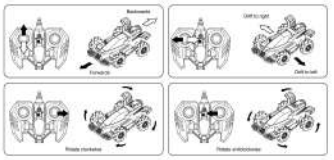

HOW TO SPRAY:

As shown in Figure 3, open the lid and fill with water by using the dropper (included). Close the lid, and press the mist spray button to mist.

Figure 3

HOW TO MOTION CONTROL:

Figure 4



1. Wear the motion control device as shown in Figure 4.
2. Turn on the vehicle first. (Please make sure the transmitter is off.) Keep your hands horizontal and vertical to the ground as shown in Figure 4, and then press and hold the power switch on the motion control for about 3 seconds to match the vehicle.
3. When the LED light stays solid on the vehicle, that means they are matched. Now you can operate your vehicle as shown below:

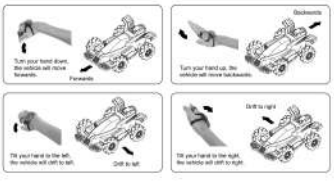

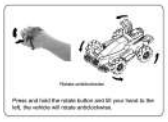

Press and hold the rotate button and tilt your hand to the left, the vehicle will rotate anticlockwise.

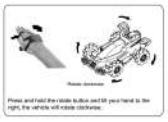

Press and hold the rotate button and tilt your hand to the right, the vehicle will rotate clockwise.

WARNING: THIS TOY IS ONLY TO BE CONNECTED TO EU 650 EQUIPMENT OVERSEE OR SIMILAR.

WARNING: FOR THE PURPOSES OF RECHARGING THE BATTERY ONLY USE THE SUPPLIED SMALL CHARGING CABLE PROVIDED WITH THIS TOY.

WARNING: CHOKING HAZARD-SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: THE BATTERY CHARGED USED WITH THE ELECTRIC TOY SHALL BE REGULARLY CHARGED. FOR EXAMPLE ELECTRIC TOYS, TOOLS, TRICYCLES, OR CHILD CARS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

WARNING: BATTERIES MUST BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED OR STORE NON-RECHARGEABLE BATTERIES AND TYPES TO BE RECHARGED. RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE TOY BEFORE CHARGING. ONLY THE SAME OR EQUIVALENT TYPE OF BATTERY SHOULD BE USED. DISCONNECT BATTERY FROM THE TOY BEFORE CHARGING. DO NOT SHORT CIRCUIT THE CHARGER OR BATTERY. DISPOSE OF BATTERY PROPERLY. DO NOT DISPOSE OF BATTERIES IN FIRE. DISPOSE OF BATTERIES THROUGH LOCAL RECYCLING OR HAZARDOUS WASTE COLLECTION POINTS. REMOVE BATTERIES FROM THE TOY IF NOT USED FOR A LONG PERIOD OF TIME. DISPOSE OF BATTERIES