Disney FROZEN

18-36 months

©Disney

Item No:43695300

6V Frozen Electric ride on

Installation & Operation Manual

⚠CAUTION:

- This package contains small parts
- Adult assembly required
- Remove all plastic bags and plastic ties prior to giving to children
- Protective equipment recommended
- Not to be used in traffic
- Keep this instructions for future reference

⚠ WARNING

ADULT ASSEMBLY REQUEST.

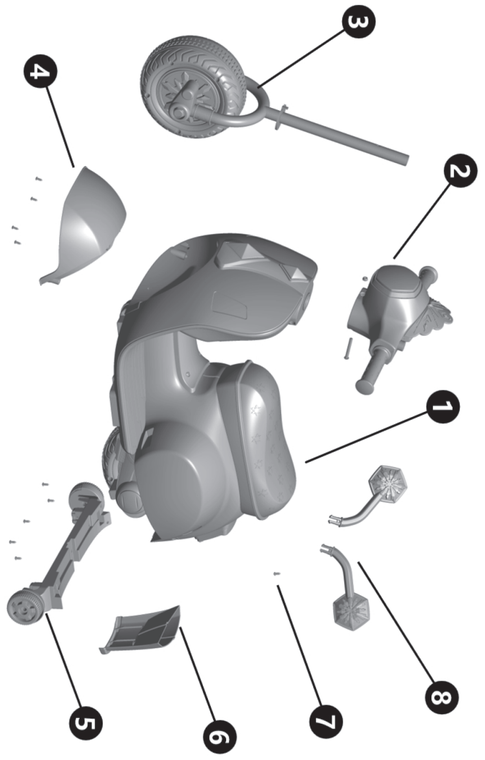

Ⅰ. SPECIFICATIONS.

Suitable Ages	18-36 months
Product Dimensions	67.5X38X58.5CM
Maximum Weight	25 kgs
Speed	2.5 km/h
Motor	30W
Charger	Input:AC100-240V
	Output:DC8V/500mA
Battery	6V4A
Operating Ambient Temperature	0 - 40℃

Ⅱ. Components List

1.Body 1pc	2.Handle bar 1pc	3.Front wheel 1pc
4.Front fender 1pc	5.Side wheel 1p	6.Rear fender
7.Screw 11 pcs (1 replacement piece) 	8.Rear-view mirror 2pcs	9.Charger 1pc

Ⅲ. Assembly Instructions

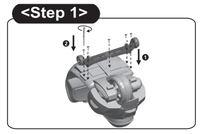

1.Place the side wheel over the location in the bottom of body, tighten the five screws with a screwdriver(not included).

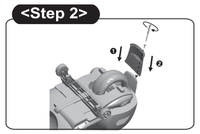

2.Place the rear fender over the location in the rear body,tighten screw with a screwdriver (not included).

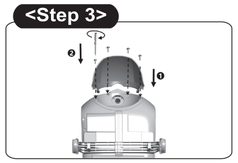

3.Place the front fender over the location in the front body,tighten four screws with a screwdriver (not included).

4.Insert the front wheel stick into the hole of the body,make sure it is in the right position.

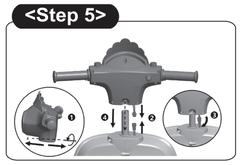

5.Firstly, loosen the bolt and nut by a screwdriver(not included). Connect the wire plug of the handle bar into the wire plug of the body,then insert the whole handle bar into the hole.

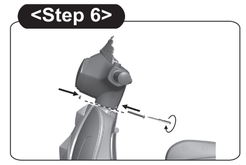

6.Place the handle bar over the front wheel stick,insert the bolt into the hole and tighten by the nut.

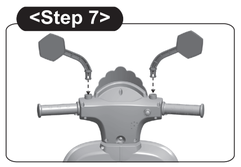

7.Insert the rear-view mirror into the hole of the handle bar,be certain the rear-view mirrors are completely fixed.

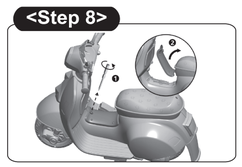

8.Loosen the screw in the battery cover with a screwdriver (not included),then open the battery cover.

9.When the battery is installed,insert the red cable terminal into the battery positive pole.

10.Close the battery cover and tighten the screw with a screwdriver (not included).

Ⅳ. Function and Operation

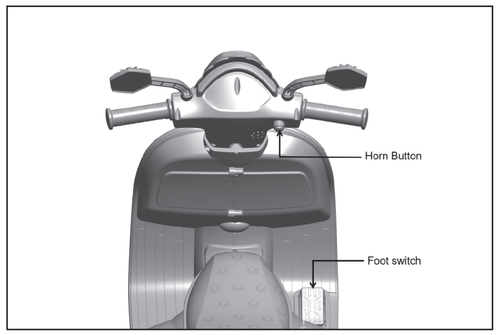

Ⅴ. Battery and Charger Operating Guide

1. The charging socket is located at the right side of the motorcycle.
2. The battery and charger which are provided or recommended can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out by adults only.
5. The battery shall be fully charged before first use; the battery charging time shall be 9-10 hours and can not exceed 15 hours.
6. The lukewarm phenomenon of the charger and battery will occur during charging.
7. The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

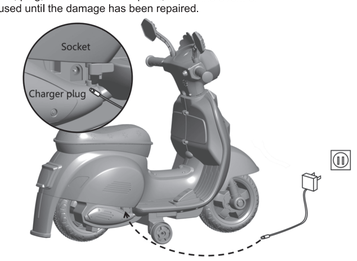

1.Battery warning:

1)When storing the car for long periods of time, charge the battery until full then turn off the power switch. The battery should be recharged once every other month, or may otherwise have a shorter life span and risk deteriorating.

2) When installing the battery, it is important that the positive and negative poles are correctly connected. Short circuiting of positive and negative poles may result in damaging the toy.

This toy contains batteries that are non-replaceable.

2. Product warning:

1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.

2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.

3) The children shall correctly use the car under adult guidance and supervision,otherwise they may cause injuries to themselves or others.

4) The bike is suitable for being driven on the flat ground and strictly prohibited to be driven in dangerous places such as public roads,slope and near swimming pool to prevent traffic and drowning accidents

5) Please put on shoes and protection equipment before use, putting on the helmet, safety gloves, knee pads, etc. helmet, gloves, knee pads. etc.

Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.

This product is only allowed to be used by a child; the maximum load is 25kg, and therefore the overload is not allowed.

Keep away from fire.

The product instructions shall be kept as they contain important information.

Warning: The use of toys in areas other than private venues can cause safety hazards such as traffic accidents.

3. WARNING:

⚠ WARNING

Adult supervision required to reduce the risk of injury;
Strictly forbidden to use on roadways, near motor vehicles, slopes or swimming pools and areas where there is water;
Please wear shoes when operating vehicle;
Can only be used by one person at a time;
Keep away from children before assembled as there may be sharp edges points or small parts.
Adult assembly required.

⚠ WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.

⚠ WARNING

Protective equipment should be worn.Not to be used in traffic.

Ⅶ. Care and Maintenance

1) Regularly wipe and clean it with a piece of cloth.
2) The rotating parts of the car should be checked regularly to determine whether any foreign matter obstructs the rotation and to keep lubricating state of normal operation.

INITIATE PLANB DREAM TO INNOVATE

PLAN B INTERNATIONAL HONG KONG LTD
Suite 1505, 15th Floor, Chinachem Golden Plaza,
77 Mody Rd, Tsimshatsui East, Kowloon, Hong Kong.
www.planbunlimited.com.au