46 mm

65 mm

anko

Sleep Fabric Alarm Clock

Operating Instructions

Please read this manual carefully before using this product and retain for future reference.

Includes:
1 x Sleep Fabric Alarm Clock
1 x USB-A to USB-C Charging Cable
1 x Instruction Manual

K: 43721108 | T: 72466728 Model: JLR-81897

Product Specifications:

Input rating: 5V ⎓ 1A
Speaker: 4Ω3W
Playtime: Up to 3 hours (at 80% volume)
Charging time: Approx. 2 hours
Bluetooth: 5.3
Battery capacity: 3.7V, 1200mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information:

1. This product contains a rechargeable lithium-ion battery (non-replaceable).
2. Do not leave the device connected to the charger for extended periods.
3. Avoid exposing the device to high temperatures or direct sunlight for prolonged periods.
4. Avoid fully discharging the battery for extended periods.
5. Do not disassemble, crush, puncture, or modify the battery or device.
6. Handle with care and avoid strong impacts or dropping.
7. Do not leave the device unattended while charging.
8. Keep the device away from water, moisture, or other liquids.

Product diagram:

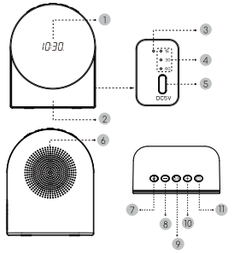

1. Clock display panel
2. Night Light area
3. Charging LED indicator
4. Timer LED indicator
5. USB-C Charging Port
6. Speaker
7. Night Light button
8. "-" button
9. Power/ Mode button
10. "+" button
11. Setting button

Note:

1. Total 30 volume levels (L00–L30), L00 = mute.
2. Long Press the "+"/"–" button to increase/decrease the volume.

Operating Instructions:

Power on/off

1. Long press the Power button for 2 seconds to turn the device on or off.
2. By default, the device plays the "Stream" sound in Sound mode. The display will show "SLP", then return to the clock display after 5 seconds.

Sound mode

1. Short press the "+" or "–" button to select a sound.
2. Six sounds are available: Stream, Silent Night, Sea Wave, Brahms Lullaby, Fetal, White Noise.
3. Short press the Power button to play or pause the sound.

Bluetooth mode

How to connect

1. Press the Power button twice to switch from Sound mode to Bluetooth mode, the display will show "BLUE", then return to the clock display after 5 seconds.
2. Enable Bluetooth on your smartphone or other audio device.
3. Select "anko43721108" from the list of available Bluetooth devices.
4. When pairing is successful, the device will emit a prompt tone.

Note:

1. The speaker will remain paired unless manually unpaired.
2. It will automatically reconnect to the last paired device when both are powered on and in range.
3. Only one Bluetooth device can be connected at a time.
4. If connection fails, please repeat the pairing steps.
5. Please make sure your device has built-in Bluetooth functionality.

Timer Function

Short press the Timer button to cycle through the time settings:

1. First press: Automatically powers off after 15 minutes.
2. Second press: Automatically powers off after 30 minutes.
3. Third press: Automatically powers off after 60 minutes.
4. Fourth press: turn off the Timer function.

Note: The timer function only works in Sound Mode.

Night Light Function

1. Long press the night light button for 2 seconds to turn the light on or off. The default brightness is high.
2. Short press the Night Light button to change the brightness: High → Medium → Low

Clock Settings

Long Press the setting button for 2 seconds to enter time setting mode. The clock icon will flash.

1. Use the "+" or "–" buttons to adjust the hour.
2. Press the Setting button to switch to minute adjustment.
3. Use the "+" or "–" buttons to adjust the hour.
4. Use the "+" or "–" buttons to adjust the minutes.

Alarm Settings

1. Press the Setting button again to enter alarm setting mode.
2. Adjust the alarm hour using the "+" or "–" buttons.
3. Press the Setting button to switch to minute adjustment.
4. Adjust the alarm minutes.

Alarm Sound

Press the Setting button again, then use the "+" or "–" buttons to select the alarm sound (01–06).

Alarm Frequency

Press the Setting button again, then use the "+" or "–" buttons to select ONE or ALL.
ONE – Alarm sounds once at the set time
ALL – Alarm sounds every day at the set time

Alarm On/Off

Press the Setting button again, then use the "+" or "–" buttons to turn the alarm ON or OFF.
Press the Setting button again to save and exit.

Note:

1. Quickly press the setting button twice to turn the clock display on or off.
2. Quickly press the setting button three times to turn the alarm on or off.
3. Press the setting button five times to reset the clock and alarm.
4. If no operation is performed for 10 seconds, the device will exit setting mode and the current settings will be saved automatically.
5. The Alarm will sound for 60 seconds each time.

How to Charge:

1. Before first use, please fully charge the speaker.
2. Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
3. Regularly charge the device (at least once a month) to maintain battery life. Prolonged storage at low charge may reduce battery performance.
4. The indicator remains red during charging and turns off once fully charged.
5. It takes approximately 2 hours to fully charge the product

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth@ SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.

R-NZ

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567