




Assembly Instruction

Please read instructions carefully. Be sure you have all parts before you begin to assemble.


CAUTION!

- DO NOT USE ON PAINTED AND UNEVEN / ROUGH SURFACES.
- MAXIMUM LOAD CAPACITY: 3KG


Attention: Please check the knob(s) periodically to ensure they remain fully tightened.

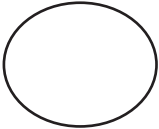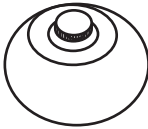PART LIST			
Adhesive Pad x 2 	Suction Cap x 2 	2 Tier Corner Caddy x 1 	


1. Ensure that the surface where the product will be mounted is completely clean and dry.

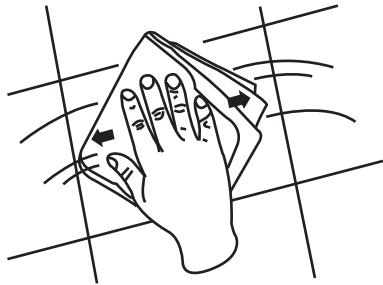


2. Separate all parts of the suction caps. The suction cap includes a chrome plated casing, a PVC base and a plastic knob.

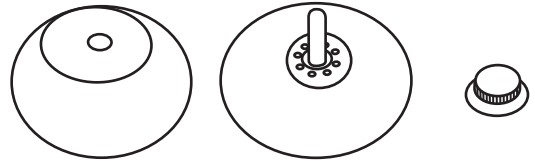


3. Peel off adhesive pad from the paper and stick it in position.

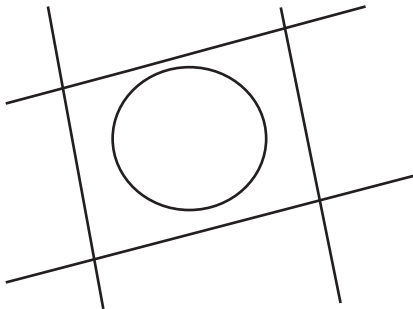

4. Suction the transparent PVC base onto the adhesive pad, and press it firmly around the edges. Make sure all air is removed. Ensure suction caps are centred and aligned.

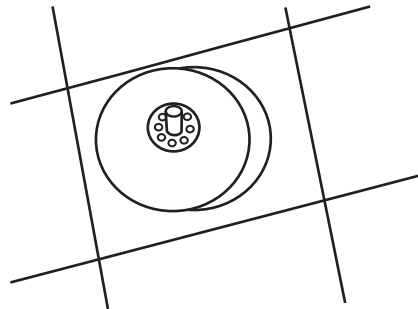

5. Place the round chrome plated casing over the PVC base.

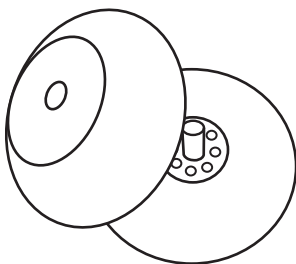

6. Place the 2 tier corner caddy over the caps with the screws coming through the wires. Screw the plastic knob onto the exposed screws and tighten by turning it clockwise.

