

Assembly Instructions

42823407 KITCHEN BENCH PREP TROLLEY









CARE INSTRUCTIONS:








WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. STORE IN A DRY PLACE AND KEEP AWAY FROM DIRECT WATER AND SUNLIGHT. FOR INDOOR AND DOMESTIC USE ONLY.


WARNING:















DO NOT STAND ON THE TROLLEY. DO NOT USE THE TROLLEY AS A STEP LADDER. DO NOT USE THE TROLLEY UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. ALWAYS SET UP THIS ITEM ON A FLAT EVEN SURFACE. ENSURE PRODUCT IS STABLE AND LOAD EVENLY. KEEP AWAY FROM CHILDREN AND BABIES UNTIL ASSEMBLY IS COMPLETE. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. **MAXIMUM SAFE LOAD: 15KG FOR TOP PANEL, 3KG FOR DRAWER, 5KG FOR WINE SHELF, 5KG FOR WINE BASKET, 5KG FOR BOTTOM SHELF.**

Hardware list

	A	ø6x35mm	8PCS
	B	ø12x10mm	8PCS
	C	ø4x35mm	4PCS
	D	ø6x30mm	8PCS
	E	ø6x55mm	8PCS
	F	ø10x10mm	8PCS
	G	ø4x25mm	8PCS
	H	ø3.5x12mm	5PCS

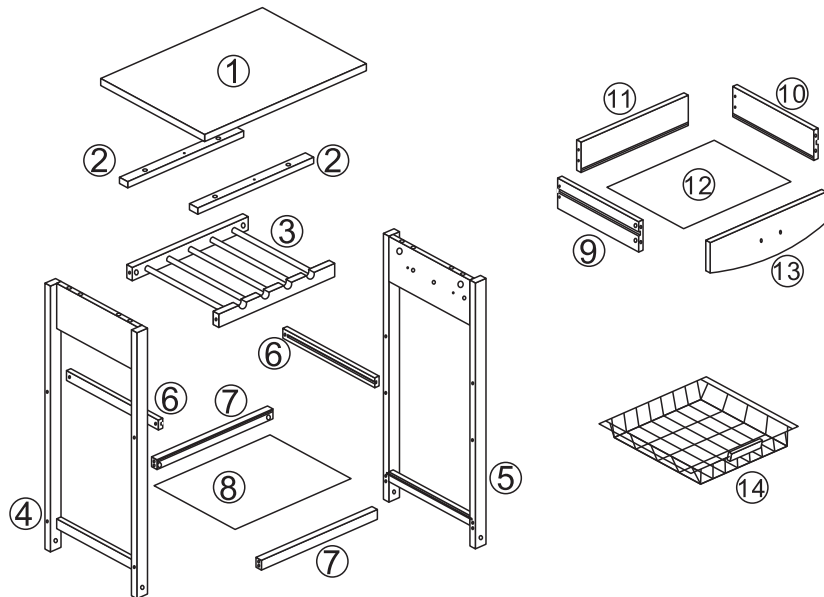	I	25x14x7mm	2PCS
	J	plastic drawer stopper	1PC
	K	ø6x25mm	4PCS
	L	wheel with stopper	2PCS
	M	wheel w/o stopper	2PCS
	N	plastic handle& screws	1PC
	O	sticker	8pcs

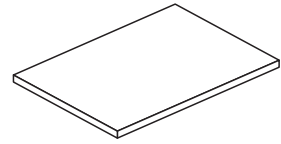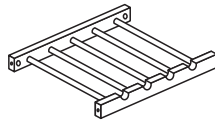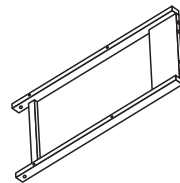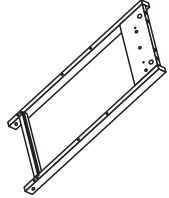

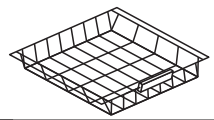					
①	1PC	②	2PCS	③	1PC
					
④	1PC	⑤	1PC	⑥	2PCS
					
⑦	2PCS	⑧	1PC	⑨	1PC
					
⑩	1PC	⑪	1PC	⑫	1PC
					
⑬	1PC	⑭	1PC		

Step 1

Attach board 9&10 onto board 11 with part C


Put board 12 onto board 9&10

Fix the part A onto board 13 and fix part B onto board 9&10

Attach board 13 to board 9&10 and then fix the round screws part B with a screwdriver.


Attach part N with the matched screws.

Ensure all parts align.

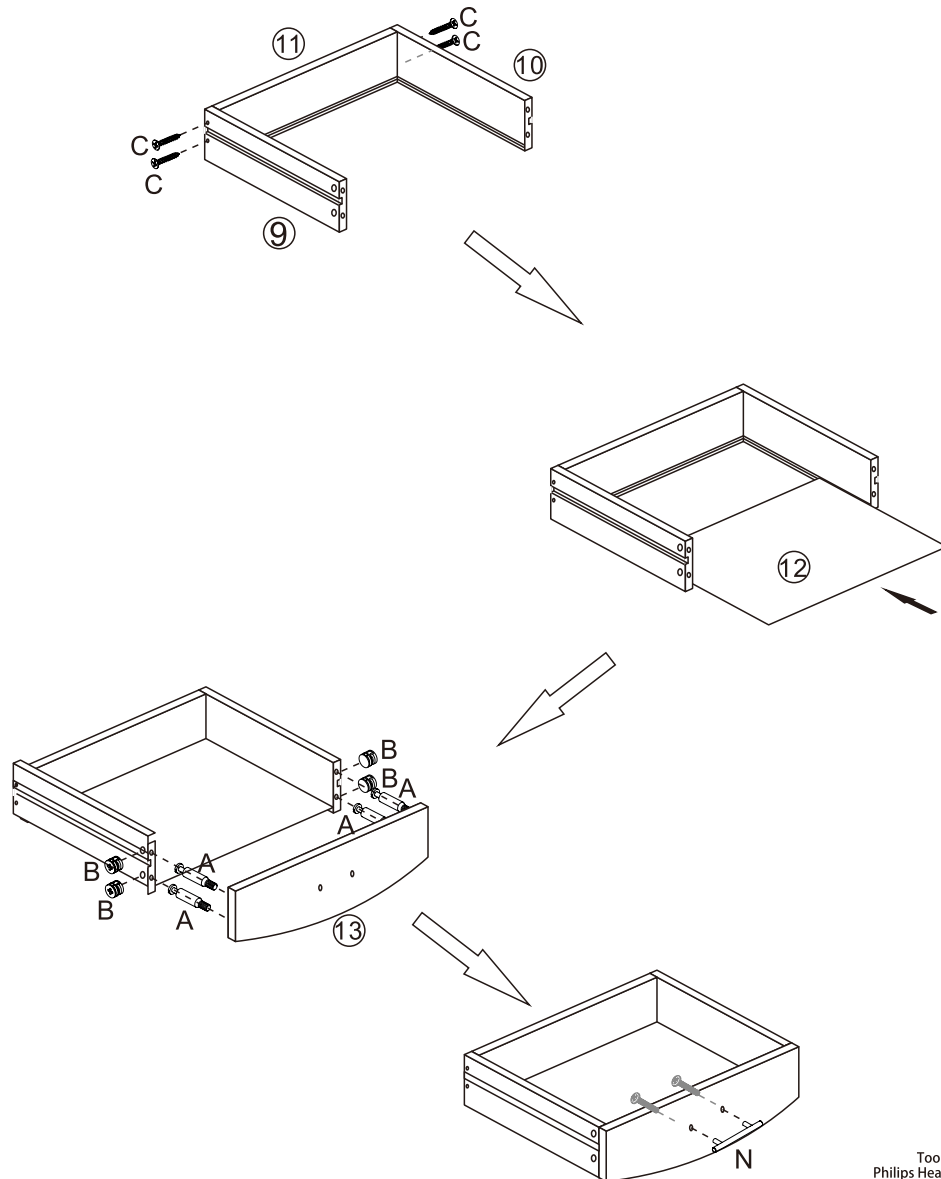

Step 2

Attach part I onto frame 4&5 with screw H and attach board 6 onto frame 4&5 with screw G (as per below diagram).

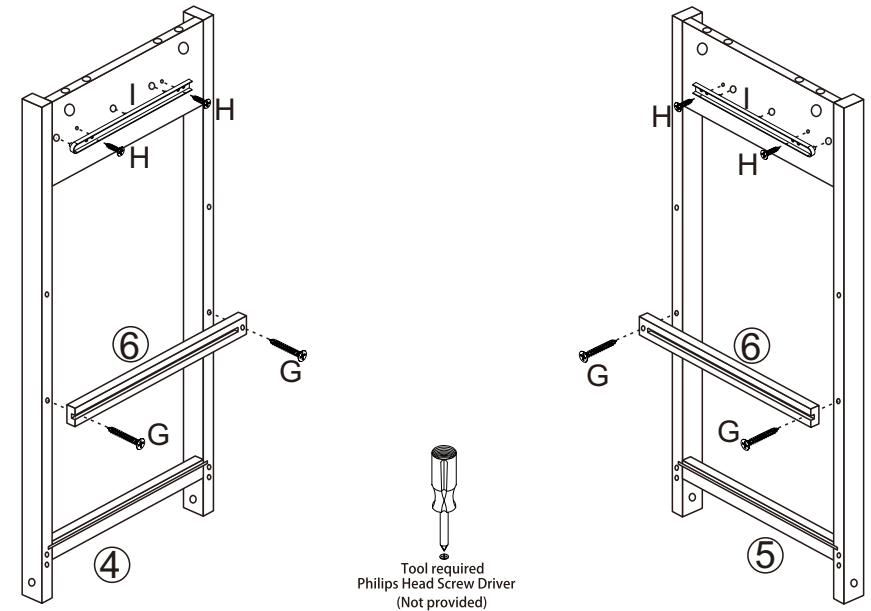


Step 3

Put part F onto board 3&7 into the corresponding position (as per below diagram).


Put part D onto frame 4 into the corresponding position (as per below diagram).

Attach board 3&7 onto frame 4 with screw E.

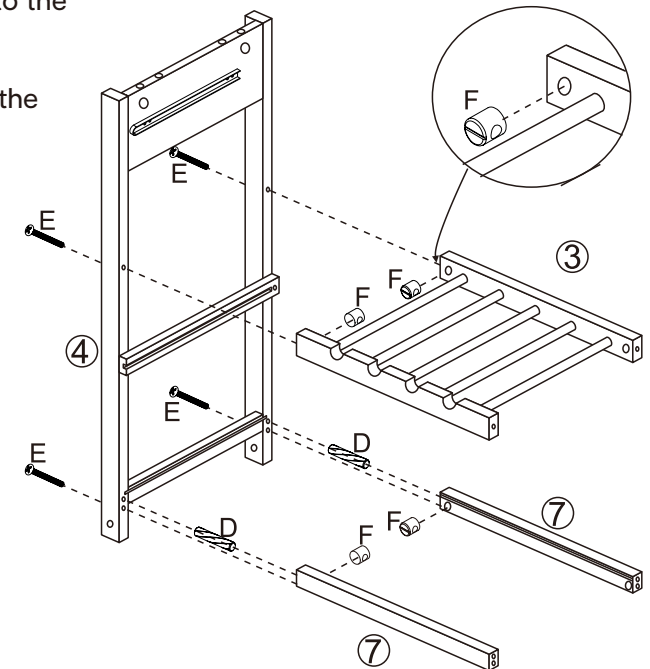


Step 4

Attach board 8 onto board 7 from step 3.

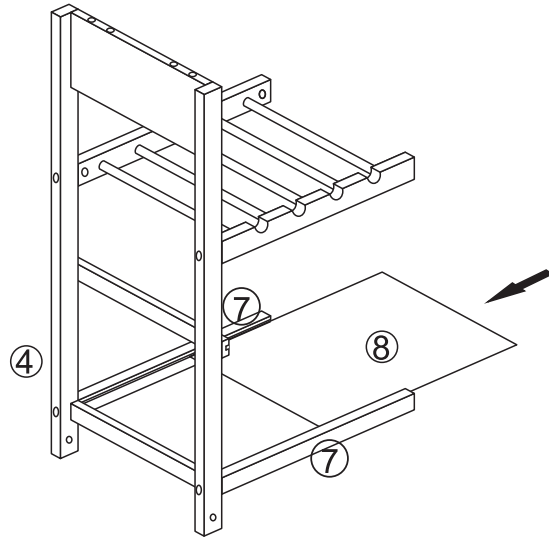


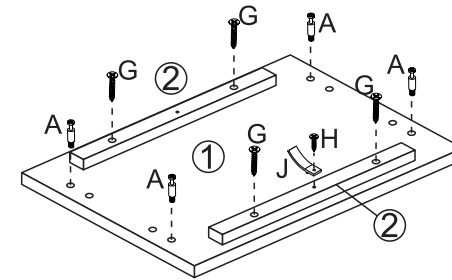
Step 5

Put part F onto board 3&7 into the corresponding position (as per below diagram).
Put part D onto board 7 into the corresponding position (as per below diagram).
Attach frame 5 onto board 3&7&8 from step 4 with screw E.

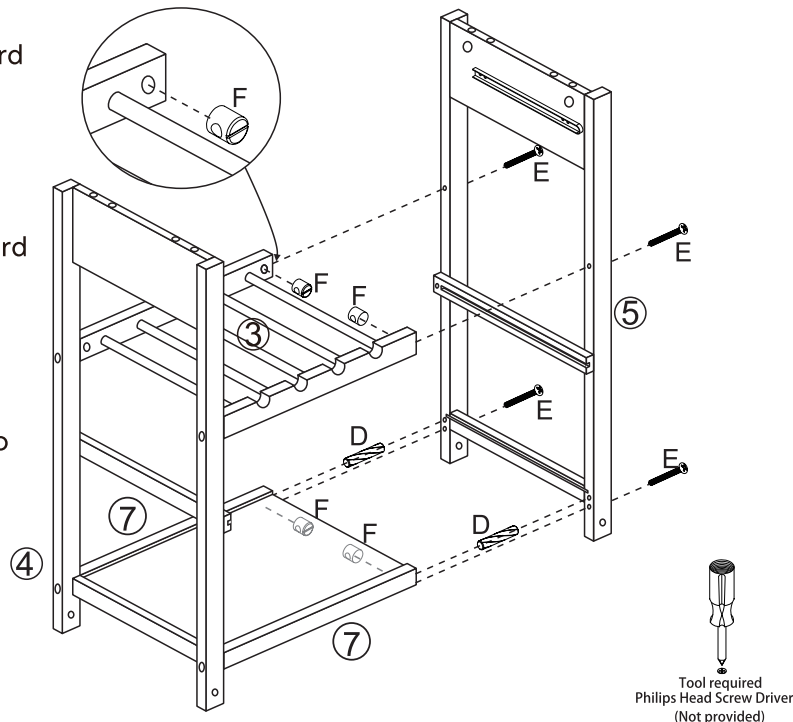

Step 6


Attach part J onto board 1 with screw part H.
Attach board 2 onto board 1 with screw part G.
Fix part A onto board 1 into the corresponding position(asper below diagram).



Tool required
Philips Head Screw Driver
(Not provided)

Step 7



Fix the part B&D into frame 4&5 into corresponding position(as per below diagram).
Attach the board 1 from step 6 onto frame 4&5 from step 5, and then fix the round screws part B with a screwdriver.
Ensure all parts align.

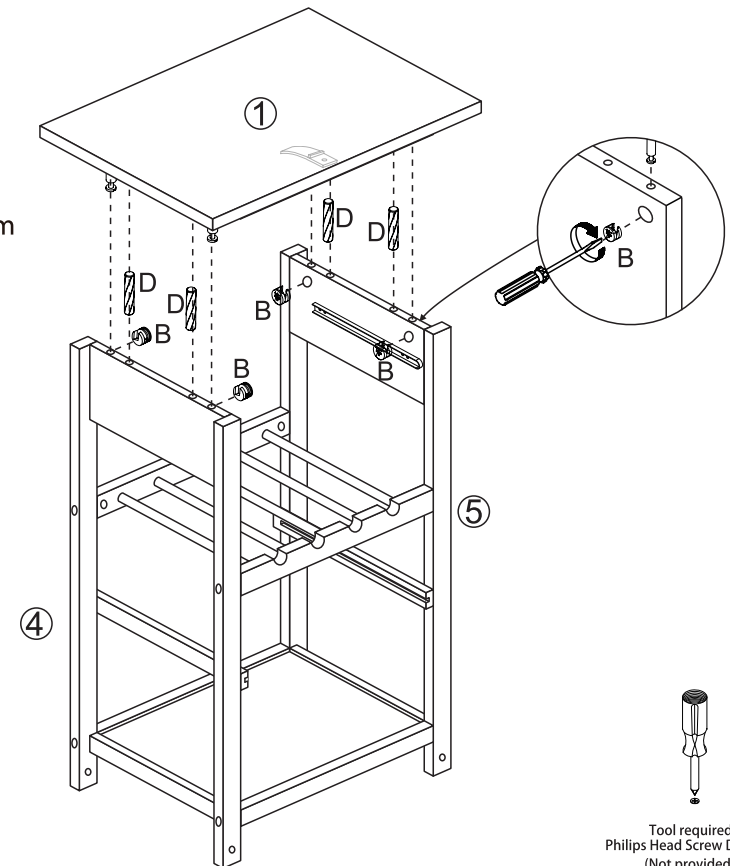

Tool required
Philips Head Screw Driver
(Not provided)

Step 8


Attach part L onto the legs on the short side with part K.
Attach part M onto the legs on the long side with part K.
Kindly reminder: part L is the wheel with stopper.
part M is the wheel without stopper.

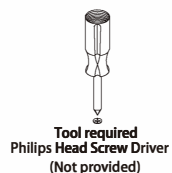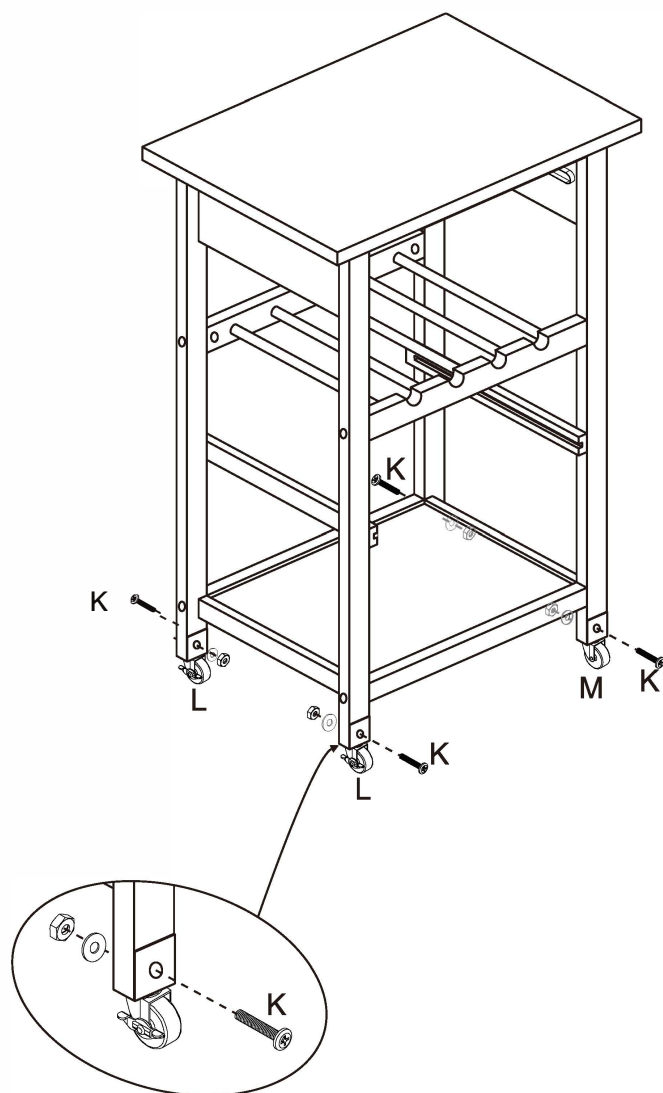

Tool required
Phillips Head Screw Driver
(Not provided)

Step 9


Attach the drawer from step 1 and part 14 onto the trolley from step 8. Put part O onto the screw holes (as per below diagram).

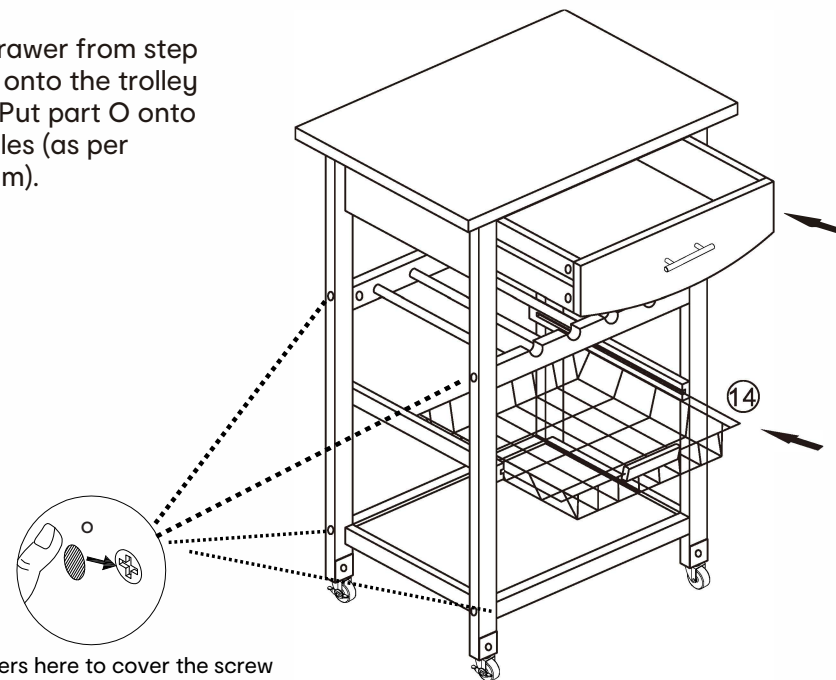

stickers here to cover the screw holes, same as the other side.

Step 10

Finish the assembly.

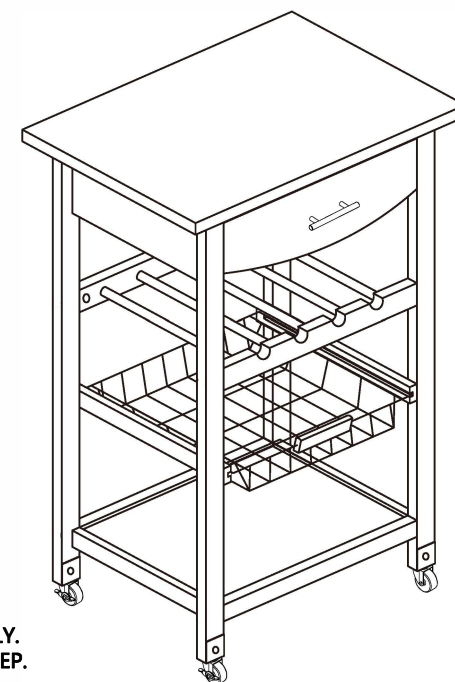

ATTENTION.
DO NOT TIGHTEN THE SCREWS FULLY DURING ASSEMBLY.
FULLY TIGHTEN SCREWS AFTER THE FINAL ASSEMBLY STEP.