



Anko  
Styleguide  
Artwork

NON PRINTING



DIELINE



GRID  
UNITS

UV COATING: NOT OK  
UV上光: 不行

FOIL STAMP: NOT OK  
烫金:不行

FILM LAMINATION: NOT OK  
覆膜:不行

WATER-BASE MATT VARNISH: OK  
水性亮油: 行

ALL COLOURS PRINT CMYK 全部以四色印刷



Black


C:0 M:0  
Y:0 K:100

DATE:  
22.4.2025

PRODUCT CODE:  
43543526 (Bronco)

FILE NAME:  
Adhesive Shelf with Caddy

LOCATION & OPERATOR:



# Instruction Manual





## K: 43543526 | T: 70964745 Adhesive Shelf with Caddy


**CARE INSTRUCTION:**  
Suitable for smooth tile, glass, or mirrors. Thoroughly clean the surface and let it dry.  
Attach the stickers to the shelf using the nuts provided.  
Peel off the film from the adhesive and carefully stick the shelf to the surface, ensuring it is level. Hold firmly for 30 seconds.  
Wait 24 hours before use.

**WARNING:**  
This product contains small parts and sharp points. Keep out of reach of children and babies.  
Adult assembly is required. Failure to follow these warnings could result in serious injury.


**THE MAX LOADING WEIGHT IS 3KG.**

### Parts List


	Sticker	3 PCS		Nut	3 PCS		Shelf with Caddy	1 PC		Towel Rack	1 PC
---	---------	-------	---	-----	-------	---	------------------	------	---	------------	------

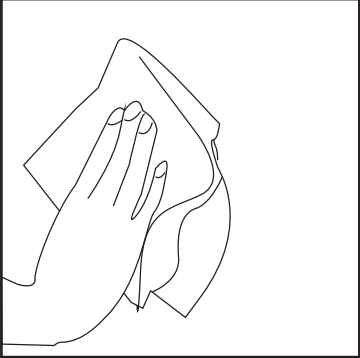


1. Select a location, clean it and keep dry.

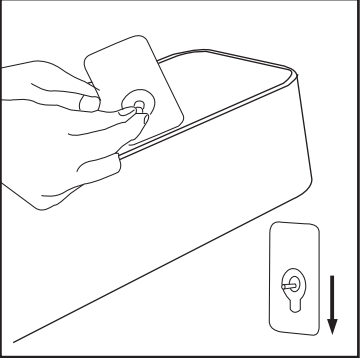


2. Install the sticker onto the shelving board and fasten with screws.

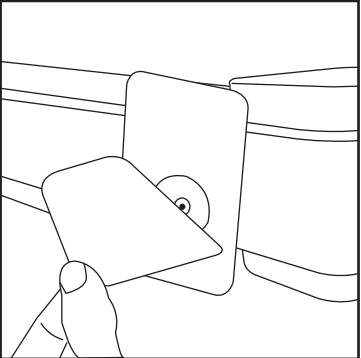


3. Remove the protective film, then stick it to the wall in a straight line. Hold firmly for 30 seconds.

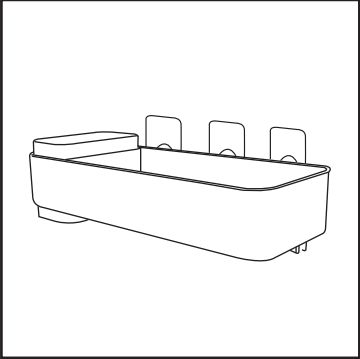

4. Remove the shelf after attached, only leaving the sticker on the wall.

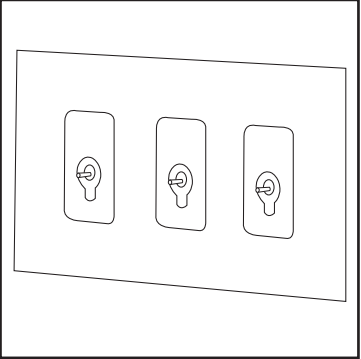

5. Press the sticker to make it flat and remove any air bubbles. Let it sit for 24 hours before use.

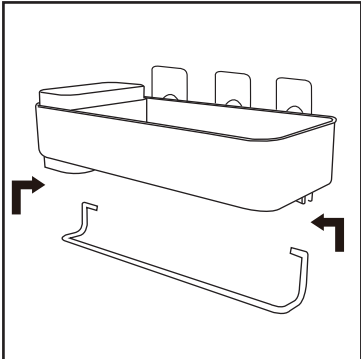

6. Install towel rack on the shelf. After 24 hours, install the shelving to the wall with screws.

**Remove:**  
To remove sticker, peel sticker back slowly and use methyalted spirits to dissolve sticker residue.