



How to hang Rod Pocket Curtains

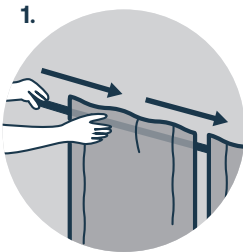

- › **Step 1:** Remove one of the ends of the curtain rod.
Weave the curtain rod through the rod pocket.
Repeat the process with a second curtain, if needed.
- › **Step 2:** Replace the end of the curtain rod.
- › **Step 3:** Place the curtain rod onto the brackets. Your curtain is now ready to use.

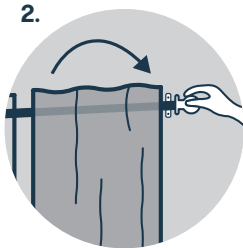


Additional Accessories:



1. A curtain rod, with a diameter of up to 32mm.



2. Wall brackets to hold the rod.

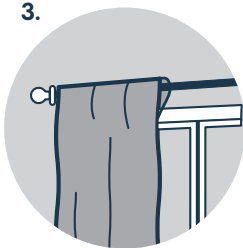

3. 2 x Curtain end.

 <p>金运来彩印 JinYunLai Color Printing</p>	文件名:40fs/i/2025/cc/天鹅绒插卡	
	成品尺寸:	改稿次数: 第1版
	SHA- 25.3.7	