

## BEACH CABANA


### CARE INSTRUCTIONS

#### WARNING: PLEASE READ BEFORE USE

THIS CABANA IS DESIGNED AS A PORTABLE AND TEMPORARY STRUCTURE AND SHOULD NOT BE USED AS A PERMANENT STRUCTURE. DO NOT LEAVE THE CABANA UNATTENDED DURING RAIN OR WINDY CONDITIONS. DURING PERIODS OF RAIN, ENSURE THAT WATER DOES NOT COLLECT ON THE CANOPY, AS THE WEIGHT OF THE WATER MAY CAUSE DAMAGE AND LEAD TO THE CABANA COLLAPSING.


ALWAYS SECURE THE CABANA FIRMLY TO THE GROUND. ENSURE THAT POLE ANCHORS, SAND POCKETS, AND PEGS ARE USED CORRECTLY AND REMAIN SECURE. FOR SAFETY, IT IS RECOMMENDED THAT TWO PEOPLE ASSEMBLE AND PACK DOWN THE CABANA. THE FABRIC HAS BEEN SELECTED AND TESTED FOR HIGH SHADE LEVELS TO PROVIDE EXCELLENT PROTECTION AGAINST SUNBURN. HOWEVER, WE RECOMMEND THE USE OF PROTECTIVE CLOTHING AND/OR SUNSCREEN TO ENHANCE PROTECTION, ESPECIALLY ON DAYS WITH HIGH UV EXPOSURE.

**WARNING:** THE UVE95+% RATING IS FOR THE SHADE MATERIAL ONLY. THE AMOUNT OF SUN PROTECTION RECEIVED WILL VARY DEPENDING ON THE CORRECT POSITIONING OF THE SHADE. PLEASE NOTE THE SUGGESTED POSITIONING. REFLECTIVE RAYS CAN ALSO CAUSE SUN BURN. SUNSCREEN SHOULD BE WORN AT ALL TIMES.

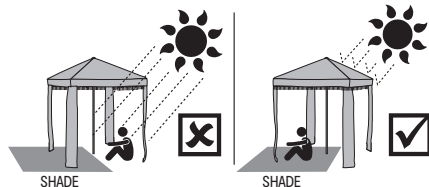

### ASSEMBLY INSTRUCTIONS

1. FIND A LEVEL SPOT ON THE SAND TO SET UP YOUR CABANA.
2. SCREW THE SAND ANCHOR INTO THE SAND UNTIL YOU REACH THE MARKED SAND LINE. (FIG. 1)
3. INSERT THE BASE POLE INTO THE SAND ANCHOR AND TIGHTEN THE SIDE SCREW.
4. INSERT THE CANOPY POLE INTO THE BASE POLE AND CLOSE THE POLE CLAMP.
5. PUSH THE CENTRAL HUB UP TO THE TOP OF THE POLE TO EXTEND THE ARMS. (FIG. 2)
6. ATTACH EACH FABRIC LEG INTO THE CORNERS OF THE CANOPY.
7. FILL ALL SAND POCKETS WITH SAND TO HOLD THE CABANA IN PLACE. (FIG. 3)
- TIP: IF THE GROUND IS UNEVEN, BUILD MOUNDS OR DIG SMALL HOLES TO LEVEL THE SAND POCKETS INCREASE STABILITY.
8. INSERT SAND PEGS THROUGH THE LOOPS AT THE BASE OF THE CANOPY. (FIG. 4)

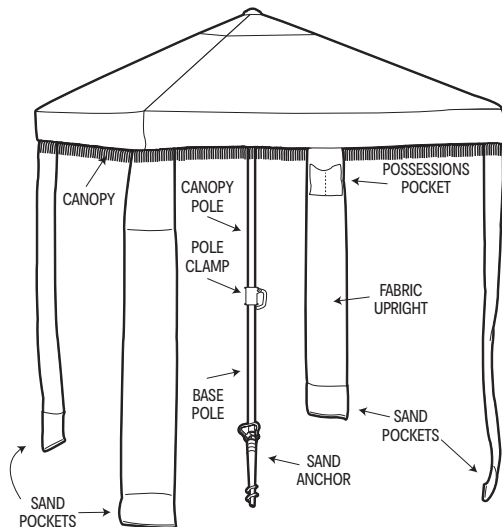

#### FOR USE ON GRASS:

FOR USE ON GRASS, FOLLOW THE SAME INSTRUCTIONS AS ABOVE WITHOUT USING THE SAND ANCHOR. MAKE SURE TO SECURE THE BASE POLE FIRMLY INTO THE GROUND BEFORE ASSEMBLING. SECURE THE CABANA USING THE GROUND OR SAND PEGS PROVIDED.

#### PATIO UMBRELLA:

REMOVE ALL FOUR FABRIC UPRIGHTS WHEN USING AS A PATIO UMBRELLA.

**MATERIALS:** CANOPY: POLYESTER, FRAME: STEEL, SAND ANCHOR: POLYPROPYLENE

**FIRE PRECAUTIONS:** PLEASE REMEMBER THAT YOUR CABANA IS MADE OF FLAMMABLE MATERIALS. THEREFORE, FOLLOW THESE COMMON SENSE RULES:

- A) DO NOT PLACE COOKING, HEATING OR LIGHTING APPLIANCES NEAR CABANA.
- B) DO NOT SMOKE INSIDE CABANA.

MADE IN CHINA

CUSTOMER SERVICE:  
KMART AU: 1800 124 125  
KMART NZ: 0800 945 995  
TARGET AU: 1300 753 567

THE UVE95+% RATING SHOWN ON THIS PRODUCT TAKES INTO ACCOUNT DIRECT UV PENETRATION OF THE FABRIC, NOT REFLECTED UV RAYS FROM GRASS, WATER OR SAND. WE RECOMMEND THE USE OF MAXIMUM PROTECTION SUNSCREEN WHEN OUTDOORS.

THE SHADE MATERIAL PROVIDES UVE95+%, HOWEVER IT IS IMPORTANT THAT YOU SET UP THE PRODUCT SO THAT SHADE IS MAXIMIZED. IT IS COMMON SENSE THAT IF THERE IS DIRECT SUNLIGHT ON OCCUPANTS THEN THE MATERIAL CANNOT AFFORD YOU ANY PROTECTION.

43-564-286

- Sew Line

KMART CABANA SHELTER  
ASSEMBLY INSTRUCTIONS.  
SEW IN NON WOVEN (TYVEC) LABEL

PRINTED ONTO TYVEC LABEL  
AND SEWN INTO STORAGE BAG  
AS SHOWN BELOW

