




170mm

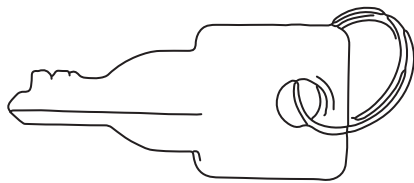


①key

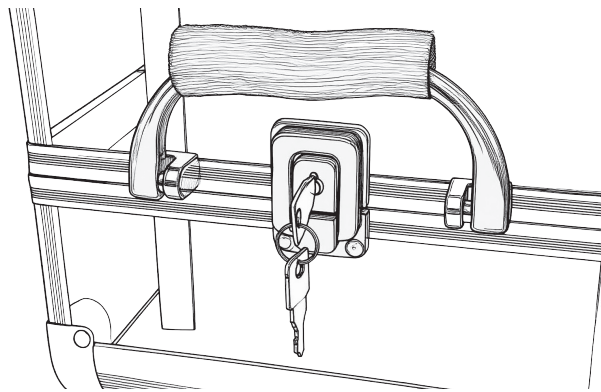

1.Align the key ① with the keyhole ②make sure the keyhole and the round hole in a line.

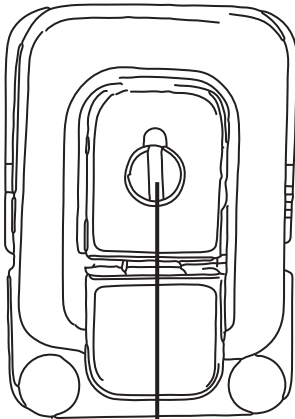

②keyhole

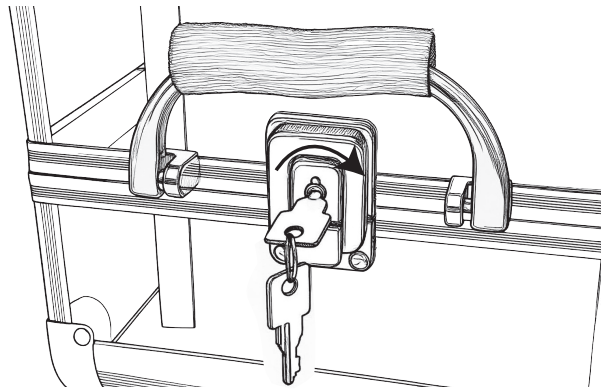

2.Insert the key ① and turn it clockwise one full turn. When you hear a “click,” the lock is secured. You can now remove the key ①.

3. Insert the key ① again and turn it counter-clockwise one full turn to unlock and open the lock.

170mm