






Wooden Craft Kit Sunflower

1. Assemble according to the order of Steps A, B, C, D...
2. Before each step, take out the corresponding part from the sheet (Do not remove all parts in advance.)
3. Code A indicates the part is on sheet A.
4. Remove parts from the corresponding sheet.
5. Follow the sequence in the steps for assembly.
6. Do not expose the finished product to direct sunlight.

- ⊕ This part is available as a spare
- ⊗ Repeat the assembly process for X sets
- ⚠ Pay attention to the assembly step

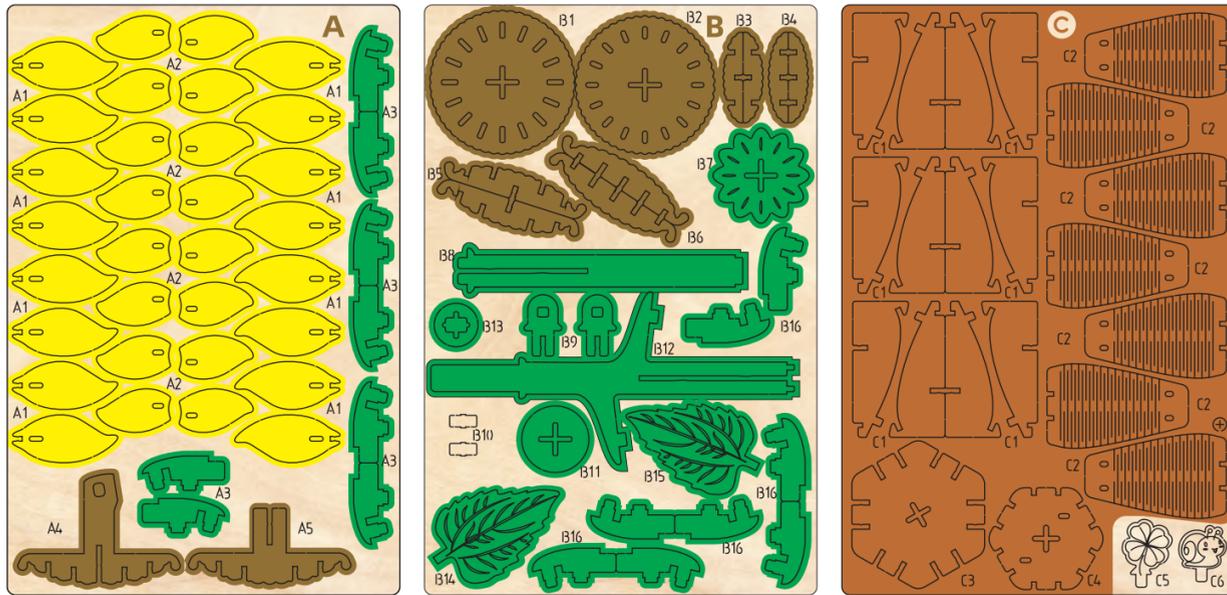

⊕ SPARE PART

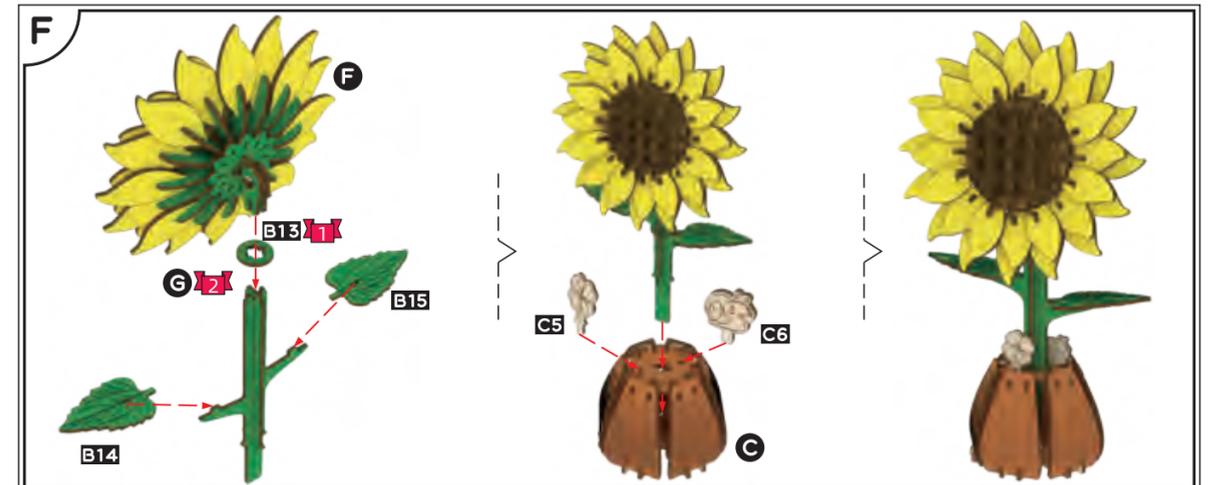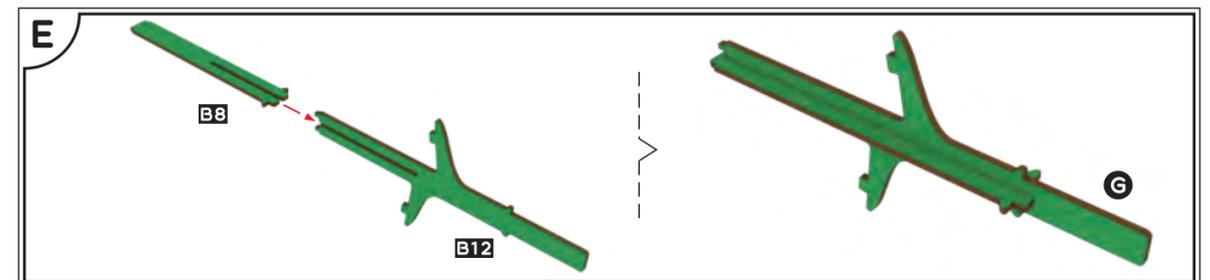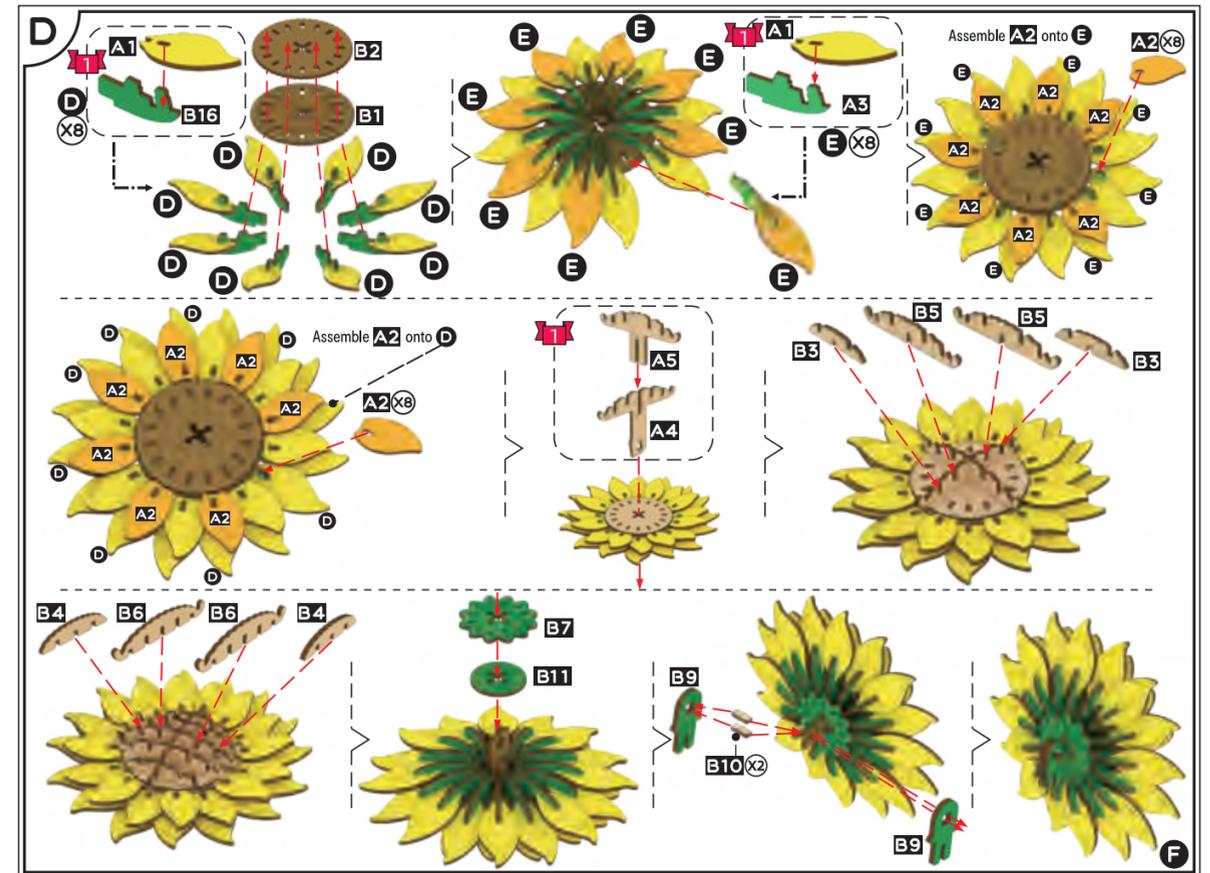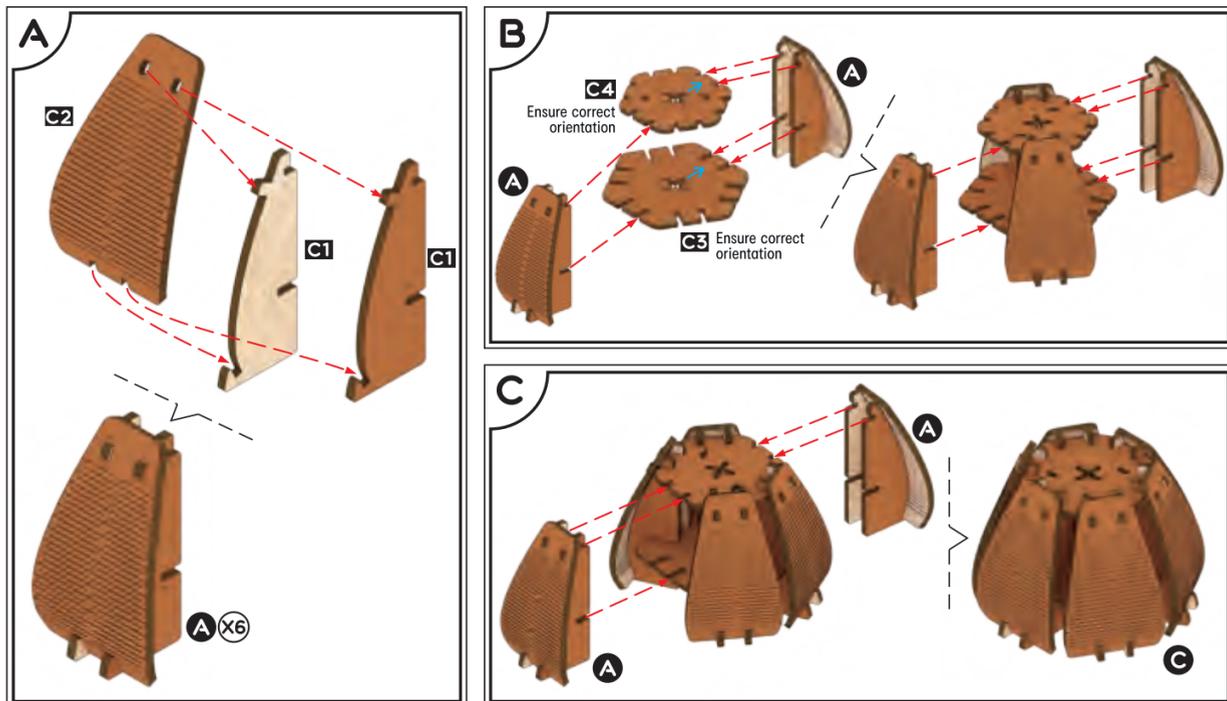

KEYCODE: K: 43-669-851 | T: 72-002-193
 MADE IN CHINA
 CUSTOMER SERVICE:
 KMART AU: 1800 124 125
 KMART NZ: 0800 945 995
 TARGET AU: 1300 753 567