

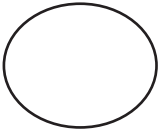
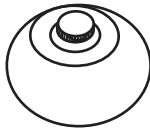

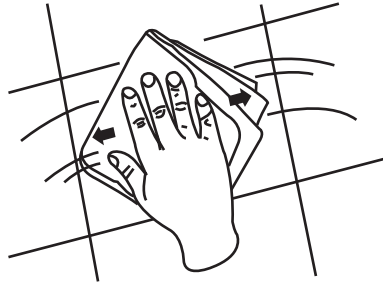
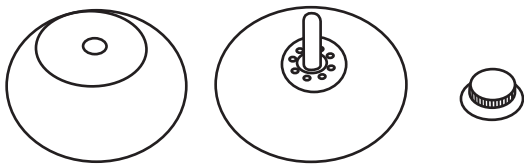
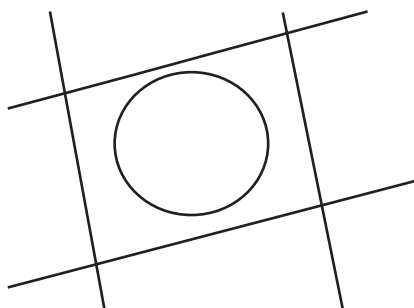
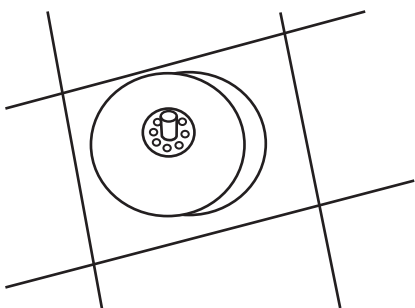
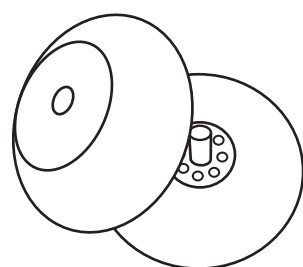
Assembly Instruction

Please read instructions carefully. Be sure you have all parts before you begin to assemble.

CAUTION!

- DO NOT USE ON PAINTED AND UNEVEN / ROUGH SURFACES.
- MAXIMUM LOAD CAPACITY: 2KG

Attention: Please check the knob(s) periodically to ensure they remain fully tightened.

PART LIST		
Adhesive Pad x 2 	Suction Cap x 2 	Rectangle Caddy x 1 
<p>1. Ensure that the surface where the product will be mounted is completely clean and dry.</p> 	<p>2. Separate all parts of the suction caps. The suction cap includes a chrome plated casing, a PVC base and a plastic knob.</p> 	
<p>3. Peel off adhesive pad from the paper and stick it in position.</p> 	<p>4. Suction the transparent PVC base onto the adhesive pad, and press it firmly around the edges. Make sure all air is removed. Ensure suction caps are centred and aligned.</p> 	
<p>5. Place the round chrome plated casing over the PVC base.</p> 	<p>6. Place the rectangle caddy over the caps with the screws coming through the wires. Screw the plastic knob onto the exposed screws and tighten by turning it clockwise.</p> 