

## 150X195MM




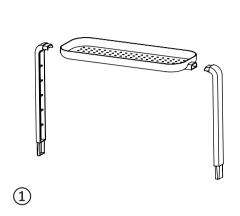


Install brackets on both sides.

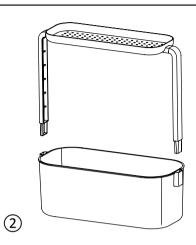

Insert into both sides of the bottom pot.

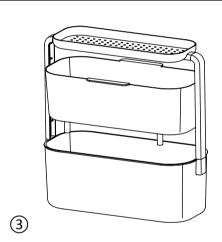

Put the small pot inside.

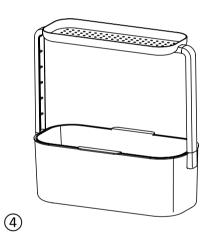

Your Herb Garden Set is now complete.

Warning: Make sure the assembly is firm before using this product. If you place items on the top layer, please make sure that the weight of the items are under 1KG. During windy weather conditions, please remove all items from the top layer.