

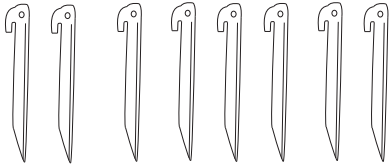
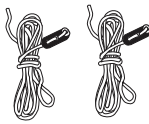



# 2.2M SUNSHADE UMBRELLA

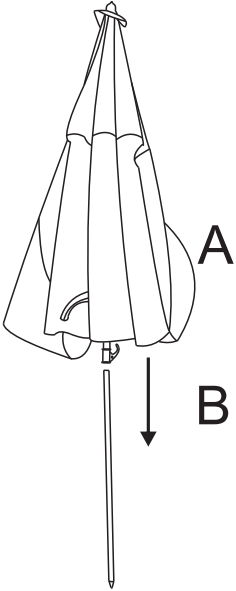
Check the components below before setting up.

Part A: Canopy x1 	Part B: Base Pole x1 
Part C: Plastic Pegs x8 	Part D: Ropes x2 

## Assembly Instructions:

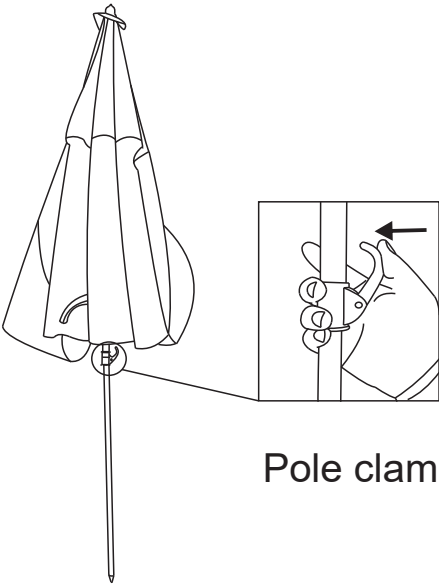
1

  
Release the fastener

  
A  
B

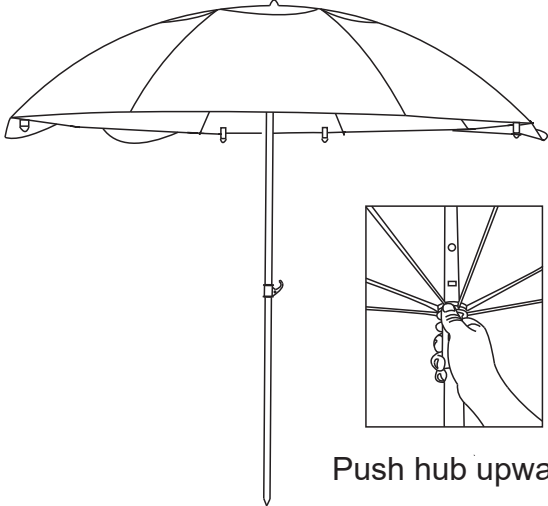
Release the fastener on the umbrella, then insert the canopy pole (Part A) into the base pole (Part B).

2

  
Pole clamp

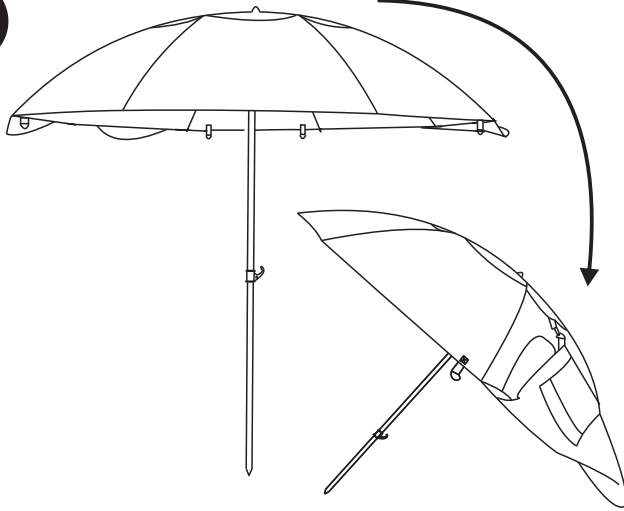
Fasten the pole clamp to ensure the canopy pole will not slip into the base pole.

3

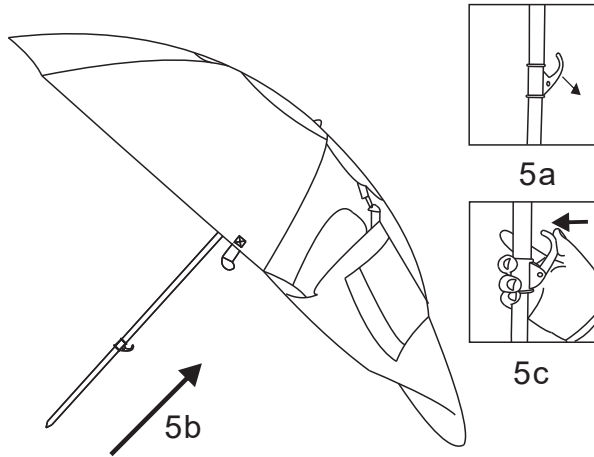
  
Push hub upwards

Push the central hub upwards to the square hole at the top of the pole to extend the arms outwards. Secure each fabric upright into the corners of the canopy—this will create a parasol for sunshade.

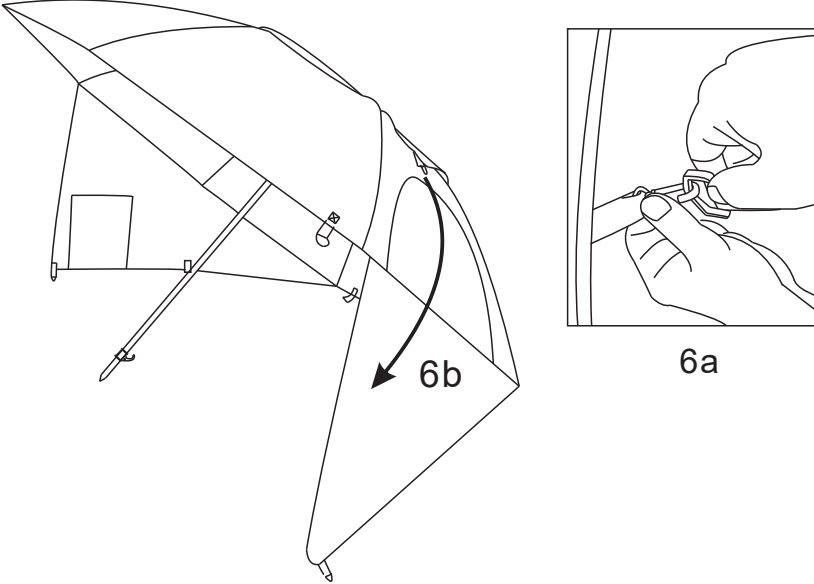
4

  
Lay the parasol on the ground.

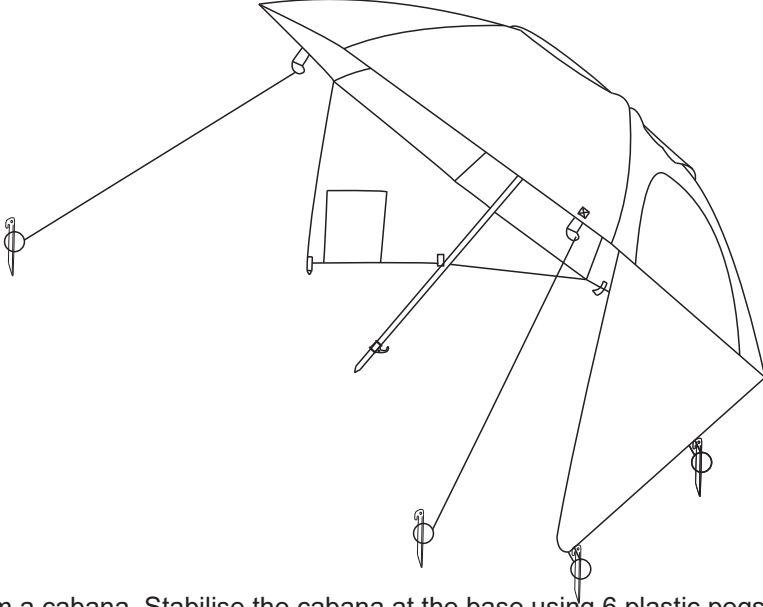
5

  
5a  
5b  
5c  
Release the pole clamps (5a), insert the base pole into the canopy pole to adjust the height (5b), then fasten the pole clamp (5c).

6

  
6a  
6b  
Release the plastic rings on the flaps on both sides from the hooks at the top of the parasol (6a), then lay the two flaps down onto the ground on each side (6b).

7

  
This will form a cabana. Stabilise the cabana at the base using 6 plastic pegs (Part C), then reinforce it with 2 ropes (Part D) and 2 additional plastic pegs (Part C).