


43584024 - 2PK MED SQ GRAZING BOX



## Instructions

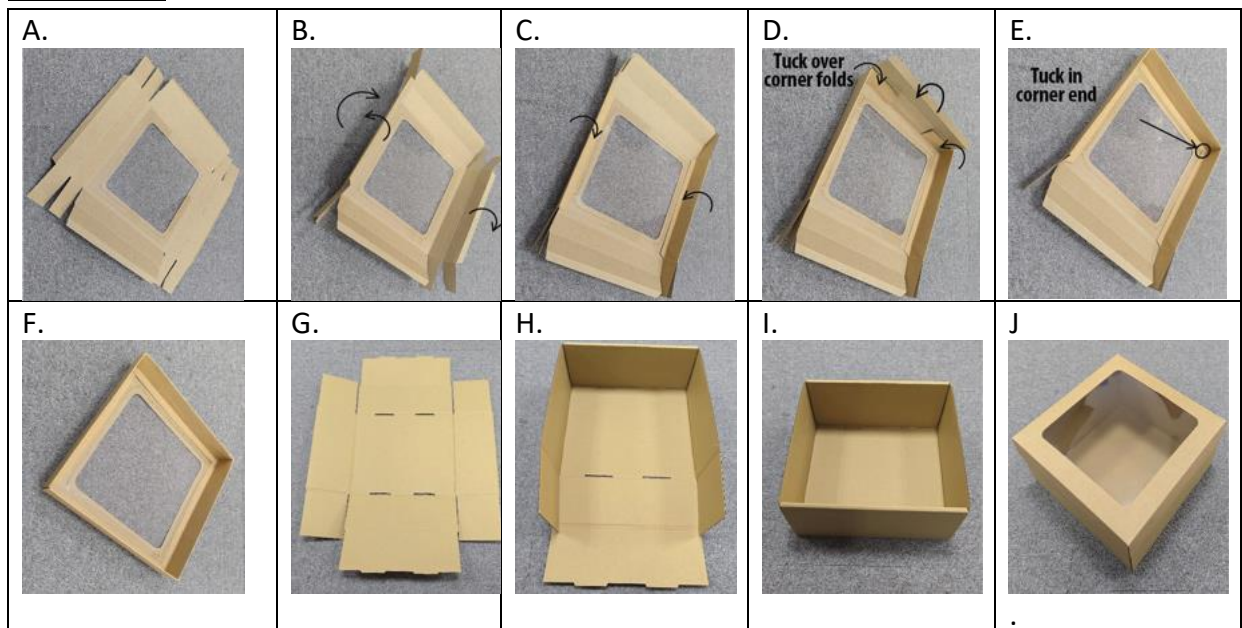

**Step 1. Lay lid out flat**

**Step 2. Lift side panels and fold back end flaps**

**Step 3. Fold side panels inwards so end flaps sit flat against base**

**Step 4. Repeat action for end panels and tuck over corner folds**

**Step 5. End panels should now be locked into place**

**Step 6. Repeat for opposite end panel**

**Step 7. Lay box out flat, identify the side with the bending lines and place it facing upwards**

**Step 8. Folding just inwards along the bending lines. Tuck the sides into the box, forming the interior walls.**

**Step 9. Repeat action for opposite side panel**

**Step 10. Box Complete**