
anko

43584031 - 2PK LRG SQ GRAZING BOX



Instructions

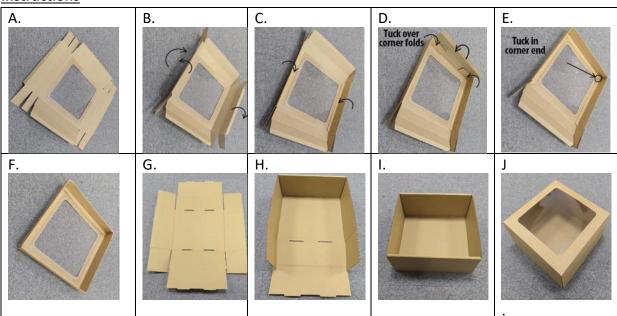

Step 1. Lay lid out flat

- Step 2. Lift side panels and fold back end flaps
- Step 3. Fold side panels inwards so end flaps sit flat against base
- Step 4. Repeat action for end panels and tuck over corner folds
- Step 5. End panels should now be locked into place
- Step 6. Repeat for opposite end panel

Step 7. Lay box out flat, identify the side with the bending lines and place it facing upwards

Step 8. Folding just inwards along the bending lines. Tuck the sides into the box, forming the interior walls.

Step 9. Repeat action for opposite side panel

Step 10. Box Complete