

COLLAPSIBLE BEACH TROLLEY STRIPE

Keycode: 43722976

Part List



base board
x 1pc



fabric cover
x 1pc



Wagon
x 1pc

Assembly Instruction

Step 1: Take off the base board and fabric cover.



Step 2: Grip both side poles of the trolley frame, then pull them horizontally outwards in opposite directions until the frame is fully expanded and locked into place.



Step 3: Insert the base board into the storage compartment of the wagon, and lay it flat completely.



Step 4: Grip the pull handle firmly, and pull the trolley to move it smoothly.




How to remove the fabric for cleaning

Step 1: Lift the fabric sleeve upwards along the arrow direction to detach it from the metal frame of the wagon.



Step 2: Grasp the upper edge of the wagon's fabric body with both hands. Lift and pull it upwards and outwards to separate the fabric from the metal frame, then remove it completely.

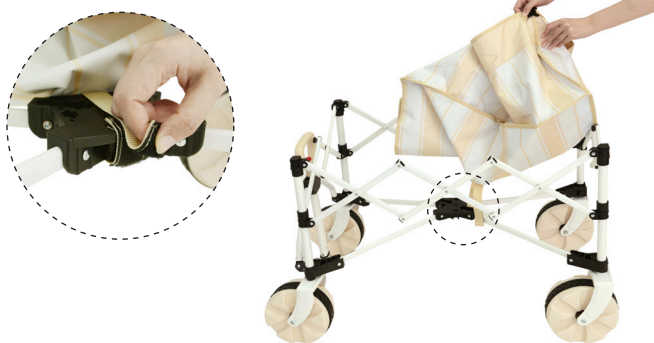

Beach Trolley Storage Steps


Step 1: Press the button and push the handle down to retract it fully.



Step 2: Grab the inner fabric handle to fold the trolley.



Step 3: Grip both side poles of the wagon frame with both hands, and push them horizontally inward along the arrow directions to collapse the frame completely for storage.

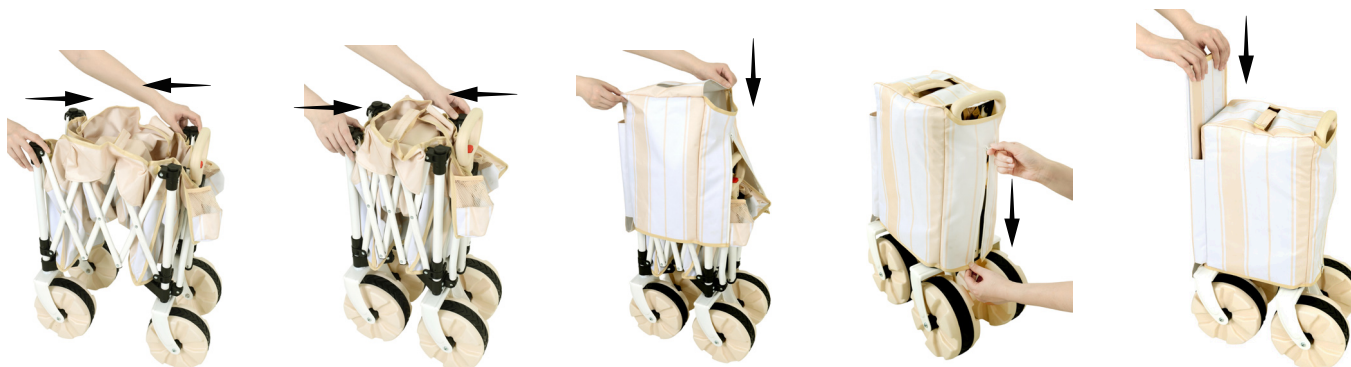

Warning

Do not locate this product in close proximity to an open fire, radiator or heater. Do not stand or sit in the trolley. Follow usage instructions carefully.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567