

BACK COVER
14.85cm

FRONT COVER
14.85cm

anko

WARNING STATEMENTS

Warning

- 

Prior to the installation of this product, the installation instructions must be read to ensure proper installation. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
- 


Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.
- 

The desk clamp can support a maximum thickness of 5 cm. Confirm the desk edge before installation.
- 

Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.
- 

Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

PRODUCT LINE GRAPH

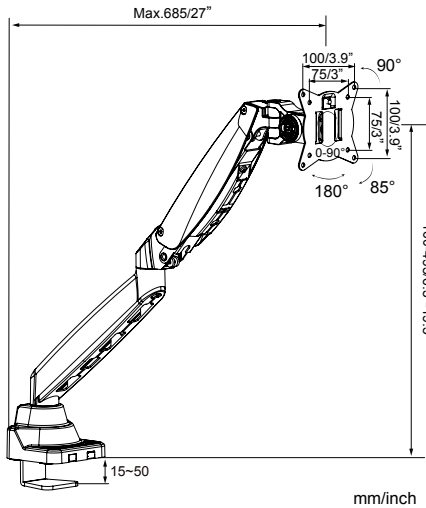

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567


KEYCODE: 43-734-283

Heavy Duty Monitor Arm
Instruction Manual



WHAT'S IN THE BOX

- › Monitor mount
- › Assembly pack
- › User manual

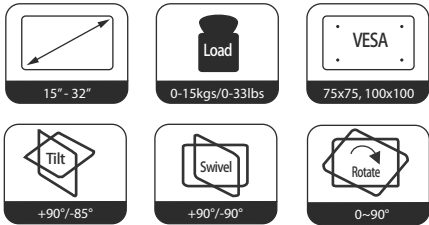



EXTRA ITEMS YOU WILL NEED





- › Screwdriver
- › Tape measure

INNER FRONT COVER
14.85cm


INNER BACK COVER
14.85cm

PARTS INCLUDED

A	 M4x12 (x4)	 M4x30 (x4)	 12X5.8X16 (x4)
B	 S=3mm (x1)	 S=5mm (x1)	
C	 (x1)		

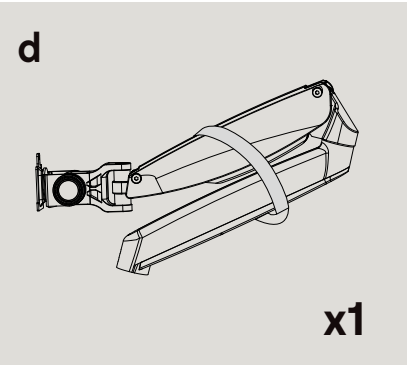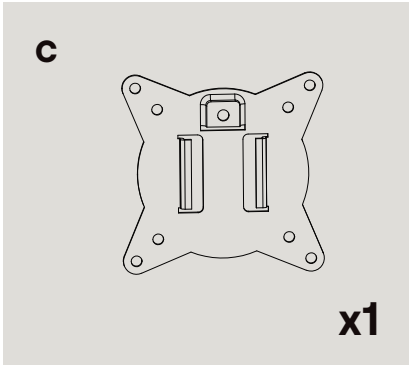
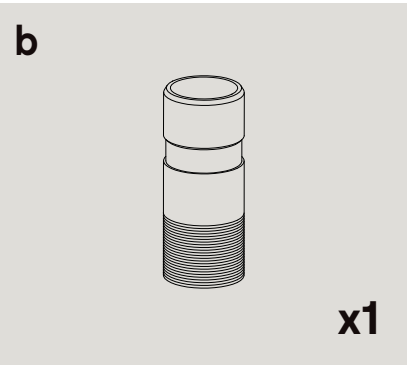
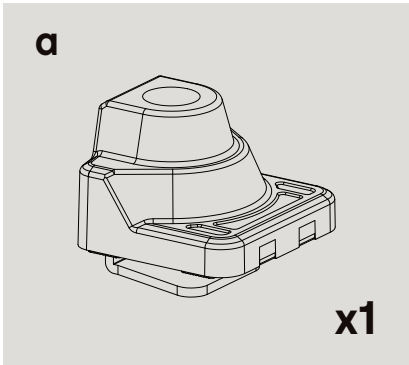


1

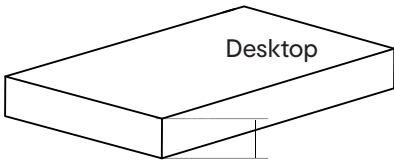

Measure the thickness of desktop.


S=3mm
S=5mm
B

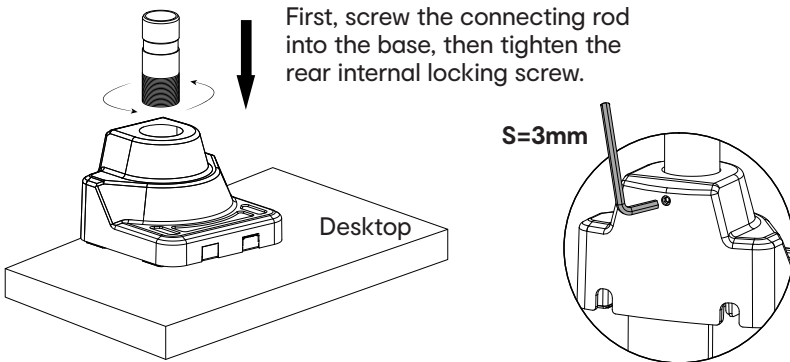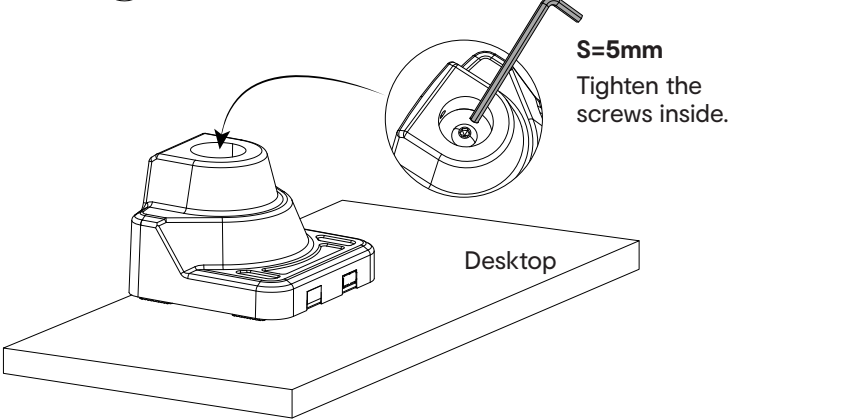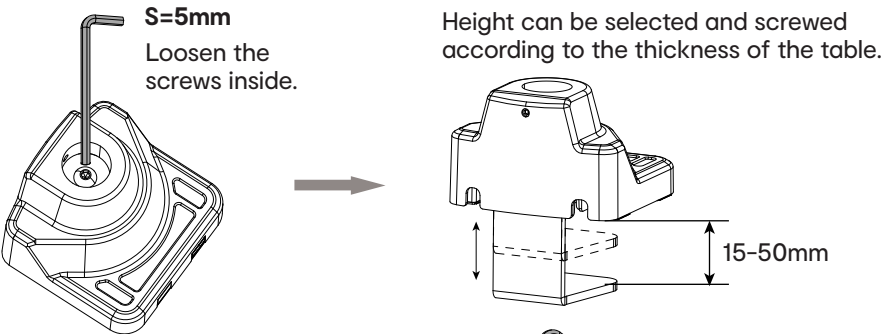

INNER FRONT COVER
14.85cm

INNER BACK COVER
14.85cm


2

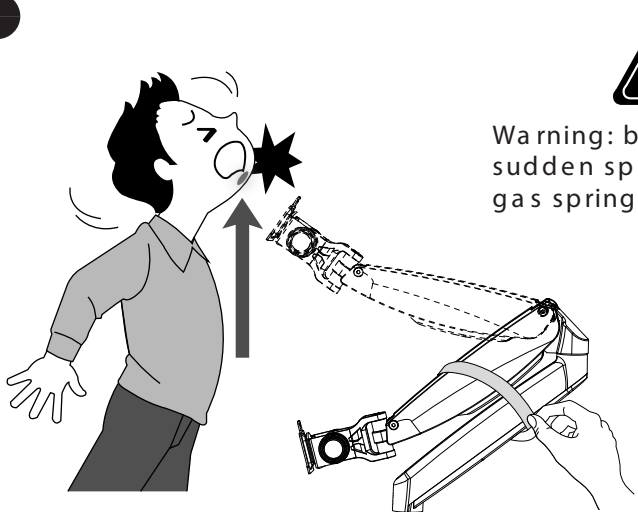

Warning: be careful on the sudden springback of the gas spring arm.

Cut the ties off.


3

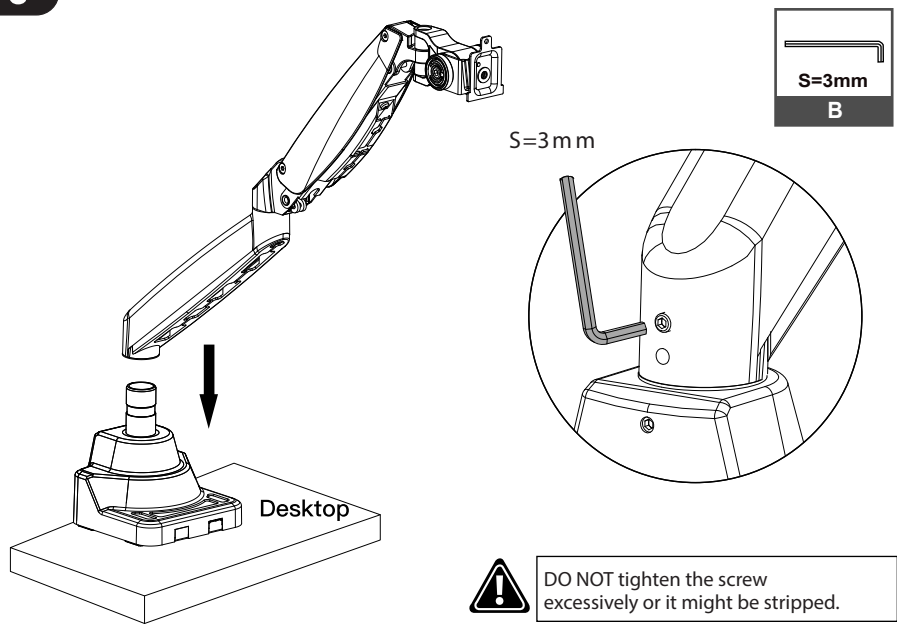

Insert the whole arm into the base and tighten the screw.

4


OPTION A:
For Flat Back Monitor

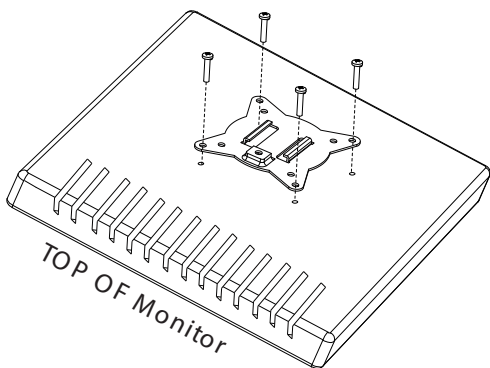

NOTE: Hand tighten screws to avoid over tightening.

Flat surface installation: Install 4 short screws through faceplate to monitor via mounting holes. Do not tighten the screws excessively or your monitor might be damaged.

OPTION B:
For Recessed/Curved Back Monitor

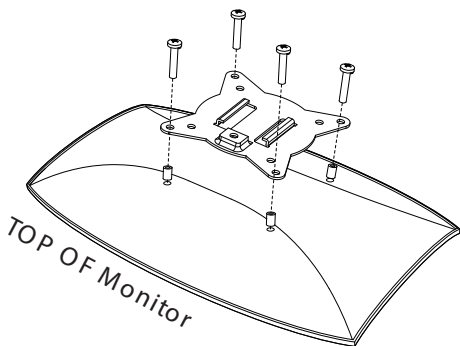


NOTE: Hand tighten screws to avoid over tightening.

Recessed surface installation: Put 4 spacers between faceplate and monitor. Install 4 long screws through faceplate, spacers to monitor via mounting holes. Do not tighten the screws excessively or your monitor might be damaged.

INNER FRONT COVER
14.85cm


INNER BACK COVER
14.85cm

5

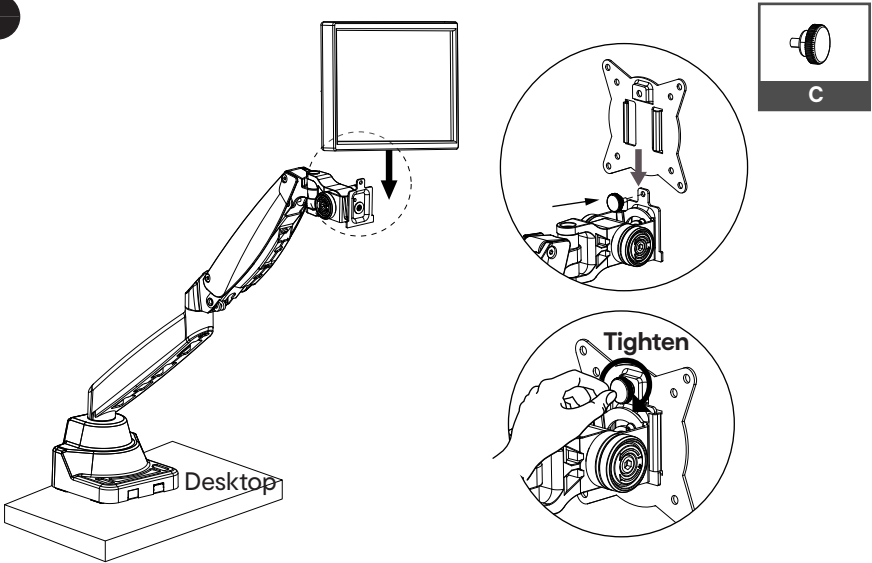


Slide the monitor onto the head of swivel arm, install the security bolt (C). Make sure the security bolt is installed before you rotate the monitor.

6

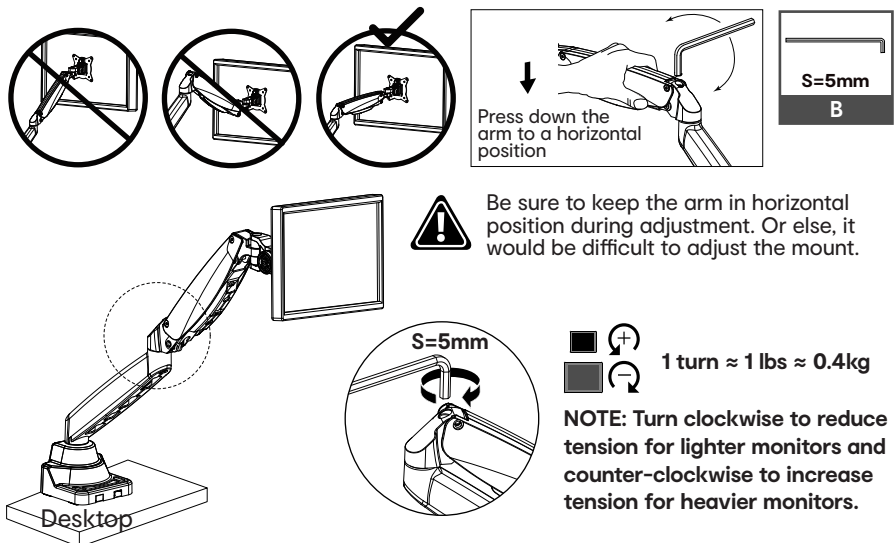


Use a 5mm hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

7

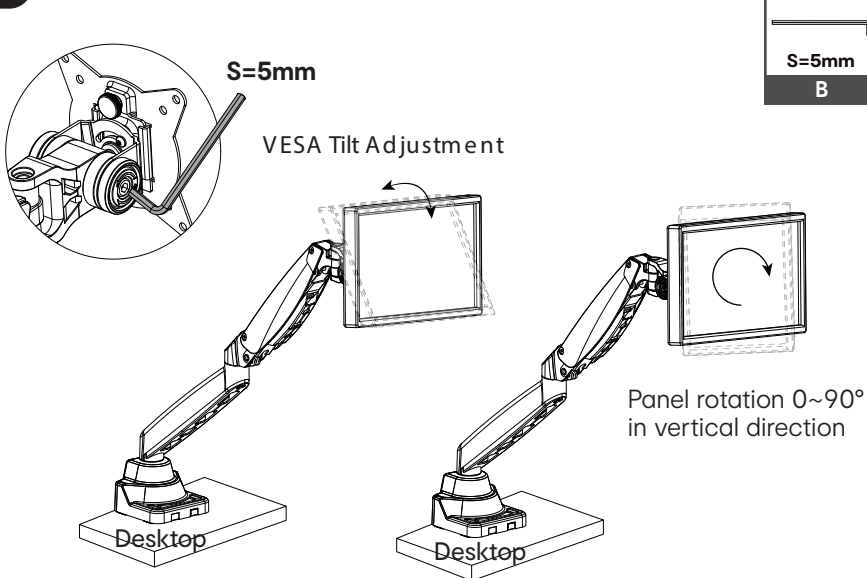

Use hex wrenches to adjust the damp for Tilt , Swivel and Rotation.

8

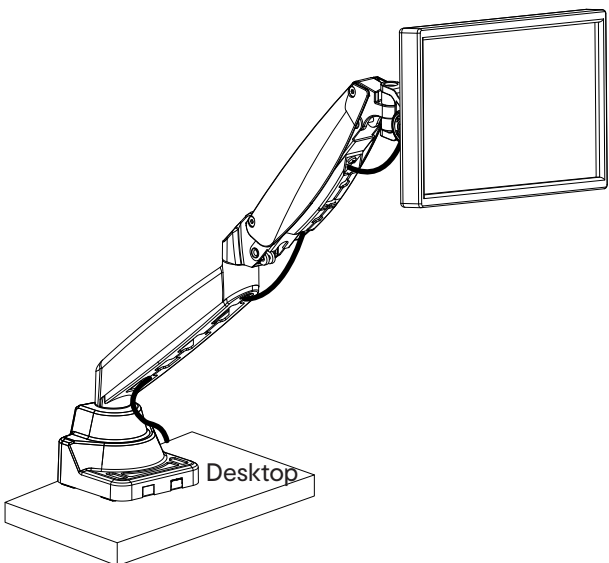

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.