

此页面不印刷  
材质：80g双胶纸  
印色：单黑  
成品尺寸：115x160mm  
展开尺寸：345x160mm  
方式：折页



## ADVICE FOR USE & CARE

1. The platform may become slippery when wet. Keep it dry at all times.
2. Remain still while the scale is weighing.
3. Do NOT hit, drop, or apply shock to the scale.
4. Handle the scale carefully, as it is a precision instrument.
5. Clean the scale using a damp cloth, ensuring no water enters the device.
6. Avoid using chemical or abrasive cleaners.
7. Store the scale in a cool, dry environment.
8. Always place the scale on a level, horizontal surface.
9. If the scale does not turn on, check that the battery is correctly installed or not depleted. Insert or replace the battery as needed.
10. If there is error on display or can not turn off the scale for a long time, please take off the battery for about 3 seconds, then install it again to remove soft-fault. If you can not resolve the problem, please contact your dealer for consultation.
11. Do not use it for commercial purpose.

# anko

## DIGITAL BATHROOM SCALES


### INSTRUCTIONS FOR USE

Max weight capacity: 180kg  
Division: 50g

K: 43707546 | T: 72429358


- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- The supply terminals are not to be short-circuited.

## ■ BATTERY

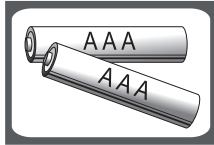

2x1.5V AAA batteries (not included)


## ■ BATTERY INSTALLATION

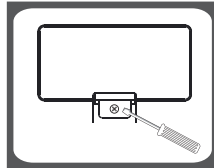


**Step 1:** Select the appropriate screwdriver to unscrew the screw on the battery cover at the back of the scale, and lift off the battery cover.

**Step 2:** Insert 2 pcs of AAA batteries. Pay attention to the positive and negative polarity of the batteries.


**Step 3:** Install the battery cover back, re-insert the screw and tighten it.

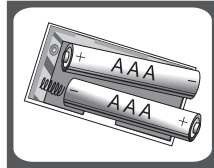

## ■ OPERATION

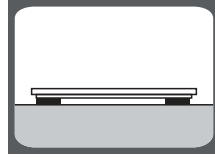


**Step 1:** To make sure accuracy, place the scale on a hard, flat floor and avoid carpet or soft surface.

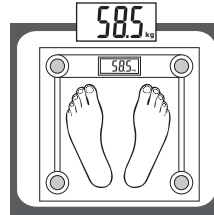

**Step 2:** Step onto the scale gently to switch it on. Stand still with your weight evenly distributed and wait until the number on the display becomes steady and locked.


## ■ AUTOMATIC SWITCH OFF

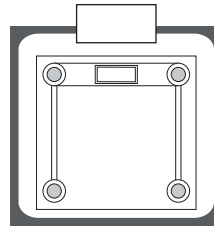

When you step off the scale, it will automatically switch off. Auto shut-off occurs if display shows stable weight reading for approximate 8 seconds.

## ■ TO CONVERT WEIGHT UNIT

The scale is with both measuring system of Metric(kilograms) and Imperial (pounds), you can convert weight unit as follow:

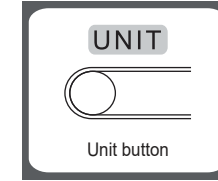

- The unit switch is on the back of the scale,
- Find unit switch on the back of scale.
  - Press the unit conversion button when scale is power on, LCD shows current weight unit. Press the button again to convert weight unit.




## ■ OVERLOAD INDICATION

Scale overload. (max. weight capacity is indicated on the scale). Please step off to avoid damage.



## ■ LOW BATTERY INDICATION

Battery power is low. Please install new battery.

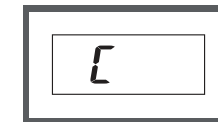

## ■ RE-TEST

Display "L" when you step off the scale, means this weight reading with error. Please re-test.