

尺寸: 285\*210MM

anko

### 12 Months Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below for the entity you purchased this product from for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Model: JLR-81560

KEYCODE: K: 43-656-158 | T: 71-905-464

MADE IN CHINA


CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

## UV Steriliser and Dryer Instruction Manual

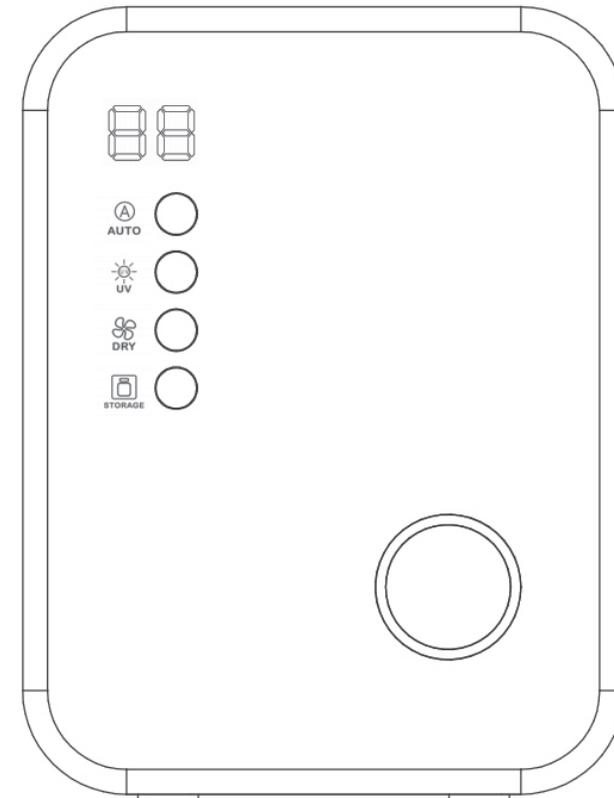

**PLEASE READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE**

The illustrations shown in this manual are for reference only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or feature without prior notice.

THIS PAGE HAS BEEN PURPOSELY L EFT BLANK.

THIS PAGE HAS BEEN PURPOSELY L EFT BLANK.

2. Clean the inside surface of the UV steriliser and the glass only with a clean microfiber cloth using warm distilled water to avoid scratching the polished stainless steel. For stubborn watermarks, leave a warm, damp microfiber cloth on the spot for a few minutes before wiping.
3. Wipe off any moisture with a dry cloth.
4. It is recommended to wipe items with a clean cloth before placing them into the steriliser. Water droplets on items may increase drying time and cause lime scale buildup at the bottom of the steriliser, which can be difficult to remove.
5. Depending on air quality, clean the air inlet filter every month and the air outlet filter every 3 months. Do not wash filters with water; gently shake off dust.

### **Warning:**

1. Direct exposure to ultraviolet light may cause permanent eye or skin injury. Never look directly at the UV lamp or open the door during operation.
2. The door must remain closed during operation.
3. Always stop all operations via the control panel and unplug the appliance before cleaning, maintenance, or lamp replacement.
4. Do not operate this appliance if the cord or plug is damaged, or if the appliance has been dropped or exposed to water.
5. Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
6. Never use the cord as a handle or pull it around sharp edges. Disconnect by holding the plug. Do not pull on the cord.
7. Do not handle the plug or appliance with wet hands.
8. To prevent electric shock, do not immerse the cord, plug, or appliance in water or any other liquid.
9. This appliance is intended for household indoor use only.
10. Keep out of reach of children and persons with reduced physical, sensory, or mental capabilities unless supervised.
11. Use this appliance only for its intended purpose.
12. Do not modify, disassemble, or repair the unit yourself. Servicing must be performed by an authorised service representative.
13. Place the appliance on a level and stable surface, at least 5 inches away from the wall for proper ventilation.
14. Do not overload the unit. Leave sufficient space between objects for effective UV exposure.
15. Do not use chlorine, bleach, or harsh chemicals to clean the appliance, as they may damage the UV protective coating.
16. Never insert objects into ventilation openings.

17. Do not operate the appliance near heat sources or in areas where aerosol products or oxygen are being administered.
18. Do not move the appliance when in use. Do not cover the appliance. Keep your hands, face and other body parts away whilst in use.
19. Always use on a flat heat-resistant surface.
20. Do not sterilise electrical components.
21. Do not touch hot surfaces. Allow to cool before handling.
22. Do not use any accessories other than those supplied with this appliance.
23. If the UV lights remain on when the door is open or if the door is damaged or missing, please do not use the steriliser.
24. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### Caution:

1. Do not pour water on the appliance when cleaning.
2. Use only clean water and a soft cloth for cleaning. Do not use any detergents or chemical cleaners.
3. Exposure to harsh cleaning agents may cause irreversible damage to the stainless steel surface or UV protective coating.
4. Be careful when removing items from the steriliser, as they may still be warm, especially after drying.
5. Do not touch the UV lamp bulb, as it will be hot after sterilisation.
6. You may experience a faint odour on first use. This is normal.

2. The default duration is 72 hours, which will be shown on the LED display.
3. During the storage cycle, the appliance operates intermittently to maintain a sterile environment. Every 2 hours, it runs a 2-minute UV sterilisation with low drying, followed by 1 minute of low drying only.
4. If the door is opened, the cycle pauses and the display shows the remaining working time. If the door is not closed within 1 minute, the unit will emit **10 rapid beeps** and the LED display will flash **E3**.
5. If the door remains open for more than 5 minutes, the appliance will shut down automatically.
6. Each time the door is closed, a 2-minute UV sterilisation with low drying, followed by 1 minute of low drying only will automatically start to restore sterile conditions.

### Notes:

To turn off the appliance during operation, press the button of the current mode.

1. All modes automatically switch to Storage Mode after completion.
2. The night light will turn on when the door is opened; all ongoing operations will pause temporarily.
3. If an **E3** error appears, close the door within the required time (5 minutes for Auto, Sterilisation and Drying, 4 minutes for Storage mode) to resume operation.
4. If the appliance powers off automatically, restart by pressing the desired function button again.

### Cleaning and maintenance:

Maintaining this appliance is simple. Always ensure the inside surfaces remain clean and shiny.

1. Before cleaning, turn off the appliance, unplug it, and wear gloves.  
Warning: Do not look directly at the UV light, as it may cause eye and skin injury.

### Sterilisation function:

1. Press the **STERILISE** button  to activate the UV sterilisation.
2. The default working time is 10 minutes. Press the button again to adjust it to 15 minutes. The selected time will be shown on the LED display.
3. The remaining working time will be shown on the LED display.
4. Upon completion, a beep will sound and the appliance will automatically switch to **Storage Mode**.
5. If the door is opened during operation, the unit will emit **10 rapid beeps**, display **E3**, and the UV lamp will turn off immediately.
6. If the door remains open for more than 5 minutes, the appliance will power off automatically.




### Drying function:

1. Press the **DRYING** button  to start the drying cycle.
2. The default drying time is 40 minutes. Press the button repeatedly to cycle through the options: 40, 50, or 60 minutes. The selected time is displayed.
3. The remaining drying time is shown on the LED display.
4. Upon completion, a beep will sound and the appliance will automatically switch to Storage Mode.
5. If the door is opened during operation, the unit will emit **10 rapid beeps**, display **E3**, and the operation will pause.
6. If the door remains open for more than 5 minutes, the appliance will power off automatically.

### Storage function:

1. Press the **STORAGE** button .
- Note:** The appliance will automatically enter this mode after any prior cycle is completed.

### Product components:

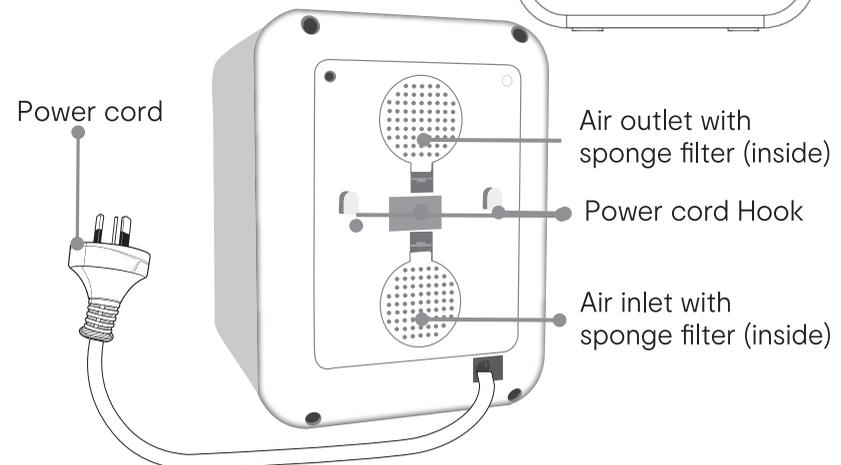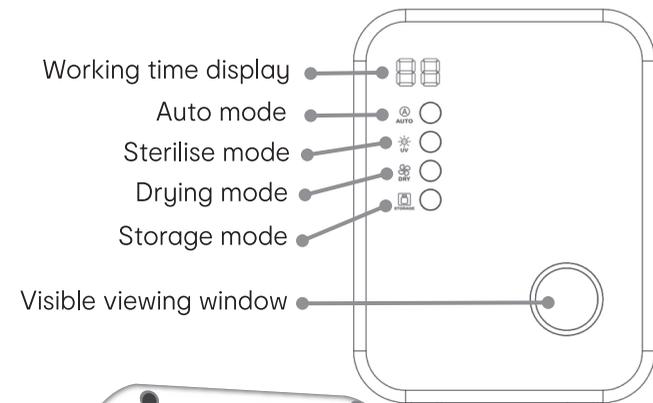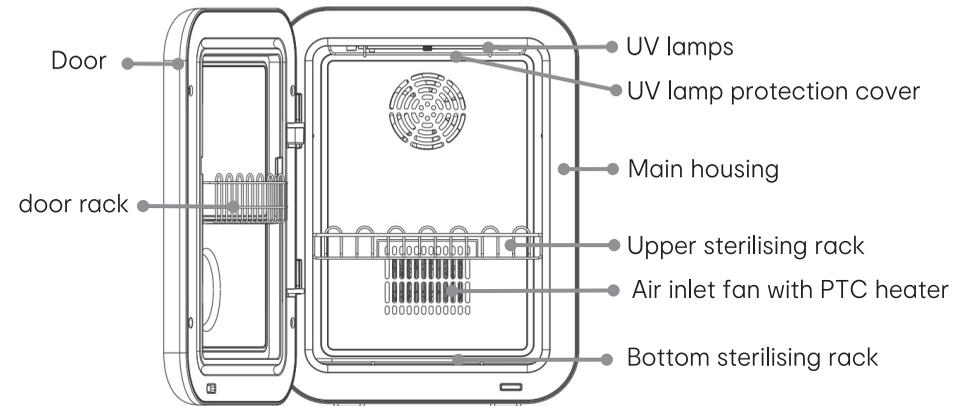

## Function Modes:

The appliance provides 4 operation modes to meet different functions: Auto, UV Sterilisation, Drying, and Storage.

### 1. AUTO Mode:

Performs a complete drying and sterilisation cycle automatically, then switches to Storage Mode to keep items sterile.

This mode is suitable for everyday use.

### 2. UV Sterilisation Mode:

Activates the UV lamps to sterilise items.

The working time can be adjusted depending on the level of sterilisation required.

### 3. DRYING Mode:

Uses warm air to remove moisture from washed items.

The drying time can be adjusted according to the load and humidity.

### 4. STORAGE Mode:

Maintains a clean and sterile environment for up to 72 hours by automatically activating UV sterilisation and low drying cycles at regular intervals.

#### Note:

1. The unit will automatically switch to Storage Mode after completing any of the above functions.
2. For detailed operation steps, button functions, and error display information, please refer to the Operating Instructions section.


## Product specifications:

Product Name	UV Steriliser and Dryer
Input	AC 220–240V, 50/60Hz
Capacity	17L

## Operating instructions:

### Before first use:

1. Open the appliance door and install all racks and accessories in their correct positions.
2. Clean bottles, teats, teethers, spoons, and bowls thoroughly with clean water. Shake off any excess water or wipe them dry with a clean, soft cloth.
3. Place large items (bottles, bowls) on the main sterilising rack, and smaller accessories (spoons, teats) on the door rack.
4. Ensure the door is securely closed before connecting to power. Plug the appliance into a suitable mains outlet.
5. Select the desired function mode on the control panel.

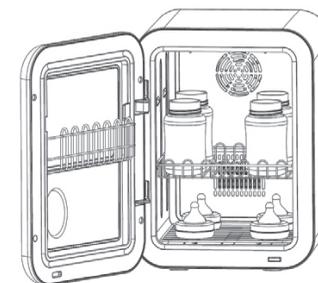

### Note:

The UV lamp will automatically turn off if the door is opened during operation for safety protection.

## Auto function:

1. Press the AUTO button  to start the automatic cycle.
2. The total working time is 50 minutes: 40 minutes of drying followed by 10 minutes of combined drying and UV sterilising.
3. The remaining time will be shown on the LED display.
4. Upon completion, a beep will sound and the appliance will automatically switch to Storage Mode.
5. If the door is opened during operation, the unit will emit **10 rapid beeps**, display **E3**, and the UV lamp will turn off immediately for safety.
6. If the door remains open for more than 5 minutes, the appliance will power off automatically.